

SKMEI 1537

SKMEI Model 1537 Digital Sport Watch User Manual

Model: **1537**

Brand: **SKMEI**

1. INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your SKMEI Model 1537 Digital Sport Watch. This watch features a digital display, chronograph, alarm, 12/24-hour format, auto calendar, and a luminous backlight. It is designed for daily wear and suitable for various sports activities, including swimming, with a water resistance rating of 50 meters.

2. WATCH COMPONENTS

Familiarize yourself with the main components and buttons of your SKMEI 1537 watch:

- **Display:** Shows time, date, and other functions.
- **Button A (Top-Left):** Activates the backlight.
- **Button B (Bottom-Left):** Cycles through different modes (Time, Alarm, Chronograph).
- **Button C (Top-Right):** Used for starting/stopping functions and increasing values during setting.
- **Button D (Bottom-Right):** Used for resetting functions and decreasing/adjusting values during setting.



Figure 1: Front view of the SKMEI Model 1537 Digital Sport Watch, showing the digital display and four control buttons.

3. SETUP AND BASIC OPERATION

3.1 Initial Power On

Your watch comes with a pre-installed battery. If the display is blank, press any button to activate it. Remove any protective film from the watch face before use.

3.2 Setting Time and Date

1. From the normal time display, press **Button B** three times to enter the time setting mode. The seconds digits will begin to flash.
2. Press **Button D** to reset the seconds to zero.
3. Press **Button B** once to move to the hour setting. The hour digits will flash.
4. Press **Button C** to increase the hour. Press **Button D** to decrease the hour. Note the 'PM' indicator for 12-hour format.
5. Press **Button B** again to move to the minute setting. The minute digits will flash.
6. Press **Button C** to increase the minute. Press **Button D** to decrease the minute.
7. Continue pressing **Button B** to cycle through year, month, and day settings, adjusting each with

Button C (increase) or **Button D** (decrease).

8. After setting all desired values, press **Button B** to exit the setting mode and return to the normal time display.

3.3 Using the Backlight

To illuminate the display in low-light conditions, press **Button A** (Top-Left). The backlight will remain active for a few seconds.



Figure 2: Comparison of the SKMEI Model 1537 display in normal and luminous (backlit) modes.

4. OPERATING FUNCTIONS

4.1 Alarm Function

1. From the normal time display, press **Button B** once to enter the Alarm Mode.
2. Press **Button C** to toggle the alarm ON/OFF. An alarm icon will appear/disappear on the display.
3. To set the alarm time, press **Button D**. The hour digits will flash.
4. Press **Button C** to increase the hour. Press **Button D** to move to the minute setting.
5. Press **Button C** to increase the minute.

6. Once the desired alarm time is set, press **Button D** to confirm and exit alarm time setting.
7. Press **Button B** to return to the normal time display.

4.2 Chronograph (Stopwatch) Function

1. From the normal time display, press **Button B** twice to enter the Chronograph Mode. The display will show '00:00:00'.
2. Press **Button C** to start the stopwatch.
3. Press **Button C** again to stop the stopwatch.
4. While the stopwatch is stopped, press **Button D** to reset it to '00:00:00'.
5. Press **Button B** to return to the normal time display.

4.3 12/24-Hour Format

During the time setting procedure (Section 3.2), when setting the hour, pressing **Button C** will cycle between 12-hour (with AM/PM indicator) and 24-hour formats.

5. WATER RESISTANCE

Your SKMEI 1537 watch is rated for **50 meters (5 ATM)** water resistance. This means it is suitable for swimming, showering, and general water exposure. However, please observe the following precautions:

- **Do not press any buttons while the watch is submerged in water.** This can compromise the water seal and lead to water ingress.
- Avoid exposing the watch to hot water or steam (e.g., hot showers, saunas), as this can damage the seals.
- After exposure to saltwater, rinse the watch with fresh water and dry it thoroughly.

6. MAINTENANCE

6.1 Cleaning

Wipe the watch case and strap regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using chemical cleaners or solvents, as these can damage the watch materials.

6.2 Battery Replacement

The watch uses 1 Lithium Metal battery. When the display becomes dim or functions become erratic, it may be time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure the water resistance seal is properly maintained.

6.3 Storage

When not in use for extended periods, store the watch in a cool, dry place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

- **Display is blank:** Check if the battery needs replacement. If recently replaced, ensure it is installed correctly.
- **Time is incorrect:** Re-set the time following the instructions in Section 3.2. Ensure the correct 12/24-

hour format is selected.

- **Alarm not sounding:** Ensure the alarm function is activated (alarm icon visible) as per Section 4.1. Check alarm time setting.
- **Buttons not responding:** Try pressing all buttons firmly. If the issue persists, a battery replacement or professional inspection may be required.

8. SPECIFICATIONS

Feature	Specification
Model Number	1537
Movement Type	Digital
Case Material	ABS Plastic
Strap Material	PU Plastic
Water Resistance	50 Meters (5 ATM)
Display Type	Digital
Battery Type	1 Lithium Metal (included)
Case Diameter	47mm (approx. 1.85 inches)
Case Thickness	14mm (approx. 0.55 inches)
Band Width	20mm (approx. 0.79 inches)
Functions	Time, Date, Day, Alarm, Chronograph, Luminous Backlight, 12/24H Format

9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or contact your retailer. For product support or further assistance, please reach out to the seller or SKMEI customer service.