
[Manuals.plus](#) /

› [Easytry123](#) /

› Easytry123 Replacement Remote Control for Philips TVs User Manual

Easytry123 Easytry8157

Easytry123 Replacement Remote Control for Philips TVs User Manual

Model: Easytry8157



INTRODUCTION

This manual provides instructions for the Easytry123 replacement remote control, designed for use with various Philips Smart LED HDTV TV models. This remote offers essential functions for controlling your television. Please read this manual carefully before use.

PRODUCT OVERVIEW

The Easytry123 replacement remote control is an infrared (IR) device featuring an ergonomic design for comfortable handling and button-based control for intuitive operation. It is intended to replace your original Philips TV remote control.



Image 1: Front view of the remote control with all buttons visible.

SETUP

1. Battery Installation

The remote control requires two (2) AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals match the markings inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.



Image 2: Back view of the remote control, indicating the battery compartment.

2. Compatibility Check

This remote control is a replacement unit. While it is compatible with many Philips Smart LED HDTV TV models, it may not support all functions of your original remote. Please verify that your TV model number is listed in the product description to ensure compatibility. No programming is typically required; it should work directly after battery installation.

OPERATING INSTRUCTIONS

Point the remote control directly at your Philips TV's infrared sensor. Ensure there are no obstructions between the remote and the TV.

- **Power Button (●):** Press to turn the TV on or off.

- **Channel Buttons (CH+/CH-):** Press to change channels up or down.
- **Volume Buttons (VOL+/VOL-):** Press to increase or decrease the volume.
- **Mute Button (⏸):** Press to mute or unmute the TV sound.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Use these buttons to navigate menus and confirm selections.
- **Source/Input Button:** Press to select different input sources (HDMI, AV, etc.).
- **Home Button (🏠):** Access the TV's smart hub or main menu.
- **Number Buttons (0-9):** Directly enter channel numbers.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward):** Control media playback.
- **TV Guide/Setup/Format/Options:** Access specific TV functions as labeled on the buttons.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

Problem	Solution
Remote control is not working.	<ul style="list-style-type: none"> ◦ Check if the batteries are inserted correctly with the correct polarity. ◦ Replace the batteries with new AAA batteries. ◦ Ensure there are no obstructions between the remote control and the TV's IR sensor. ◦ Point the remote directly at the TV.
Some functions do not work.	<ul style="list-style-type: none"> ◦ This is a replacement remote; some advanced or specific functions of your original TV remote may not be supported. ◦ Verify your TV model is listed as compatible.

SPECIFICATIONS

- **Brand:** Easytry123
- **Model Number:** Easytry8157
- **Connectivity Technology:** Infrared (IR)
- **Compatible Devices:** Various Philips Smart LED HDTV TVs (e.g., 40PFK4200, 28PHH4109/88, 40PFT4109/60, 47PFH4109/88, 50PFH4319, 50PFH4329, 47PFK4109/12, 48PFT4100, 22PFH4000)
- **Controller Type:** Button Control
- **Special Feature:** Ergonomic design
- **Battery Type:** 2 x AAA batteries (not included)

WARRANTY AND SUPPORT

No specific warranty information is provided for this replacement remote control. For product support or inquiries, please refer to the seller's contact information on the platform where the product was purchased.

It is recommended to retain your purchase receipt for any potential support needs.

