

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Beko](#) /

› [BEKO DFN39533G Freestanding Dishwasher Instruction Manual](#)

Beko DFN39533G

BEKO DFN39533G Freestanding Dishwasher Instruction Manual

Model: DFN39533G

INTRODUCTION

Thank you for choosing a Beko appliance. This instruction manual provides essential information for the safe and efficient operation of your DFN39533G freestanding dishwasher. Please read this manual thoroughly before installation and use to ensure proper function and to prevent potential hazards. Keep this manual for future reference.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury. This appliance is intended for household use only. Do not allow children to play with the dishwasher. Ensure the appliance is properly grounded. Do not operate the dishwasher if it is damaged. Use only detergents and rinse aids specifically designed for automatic dishwashers. Keep all detergents and rinse aids out of reach of children.

- Read all instructions before using the appliance.
- Do not touch the heating element during or immediately after use.
- Load sharp items so they are not likely to damage the door seal or interior.
- Do not wash plastic items unless marked "dishwasher safe".
- Do not tamper with controls.
- Always disconnect the appliance from the power supply before cleaning or maintenance.

SETUP AND INSTALLATION

Unpacking and Placement

Carefully remove all packaging materials. Place the dishwasher on a flat, stable surface. Ensure there is adequate space around the appliance for ventilation and door opening. The dishwasher dimensions are approximately 60D x 59.8W x 85H centimeters.



Image: Front view of the BEKO DFN39533G Freestanding Dishwasher in Manhattan Grey.



Image: Diagram showing the dimensions of the BEKO DFN39533G Dishwasher.

Water Connection

Connect the water inlet hose to a cold water tap with a 3/4 inch thread. Ensure the connection is tight to prevent leaks. The drain hose should be connected to a drain pipe or the sink trap, ensuring it is not kinked or obstructed.

Electrical Connection

Connect the dishwasher to a grounded electrical outlet. The appliance operates on 220 Volts. Do not use extension cords or adapter plugs. Ensure the electrical supply meets the requirements specified on the rating plate of the appliance.

OPERATING INSTRUCTIONS

Control Panel Overview

The control panel features program selection buttons, a display, and indicator lights for various functions such as

salt, rinse aid, and selected program. Familiarize yourself with the layout before first use.



Image: Close-up of the control panel on the BEKO DFN39533G Dishwasher, showing program indicators and digital display.

Loading the Dishwasher

Load dishes carefully to ensure water can reach all surfaces. Place larger items in the lower basket and smaller items, glasses, and cups in the upper basket. The dishwasher has a capacity of 15 place settings. Utilize the adjustable racks and cutlery basket for optimal loading.

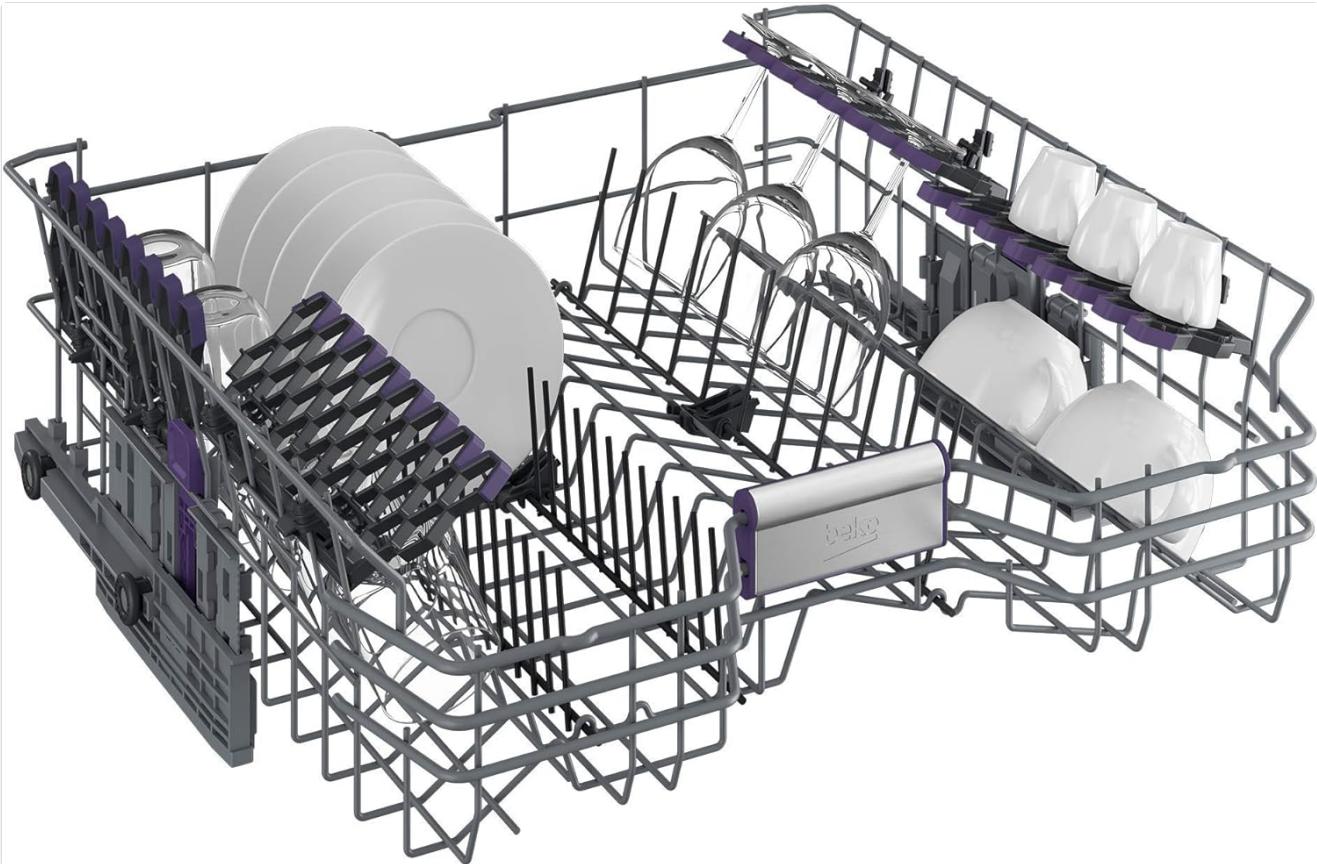


Image: The lower rack of the BEKO DFN39533G Dishwasher, showing plates and bowls arranged for washing.



Image: The upper rack of the BEKO DFN39533G Dishwasher, showing glasses and cups arranged for washing.

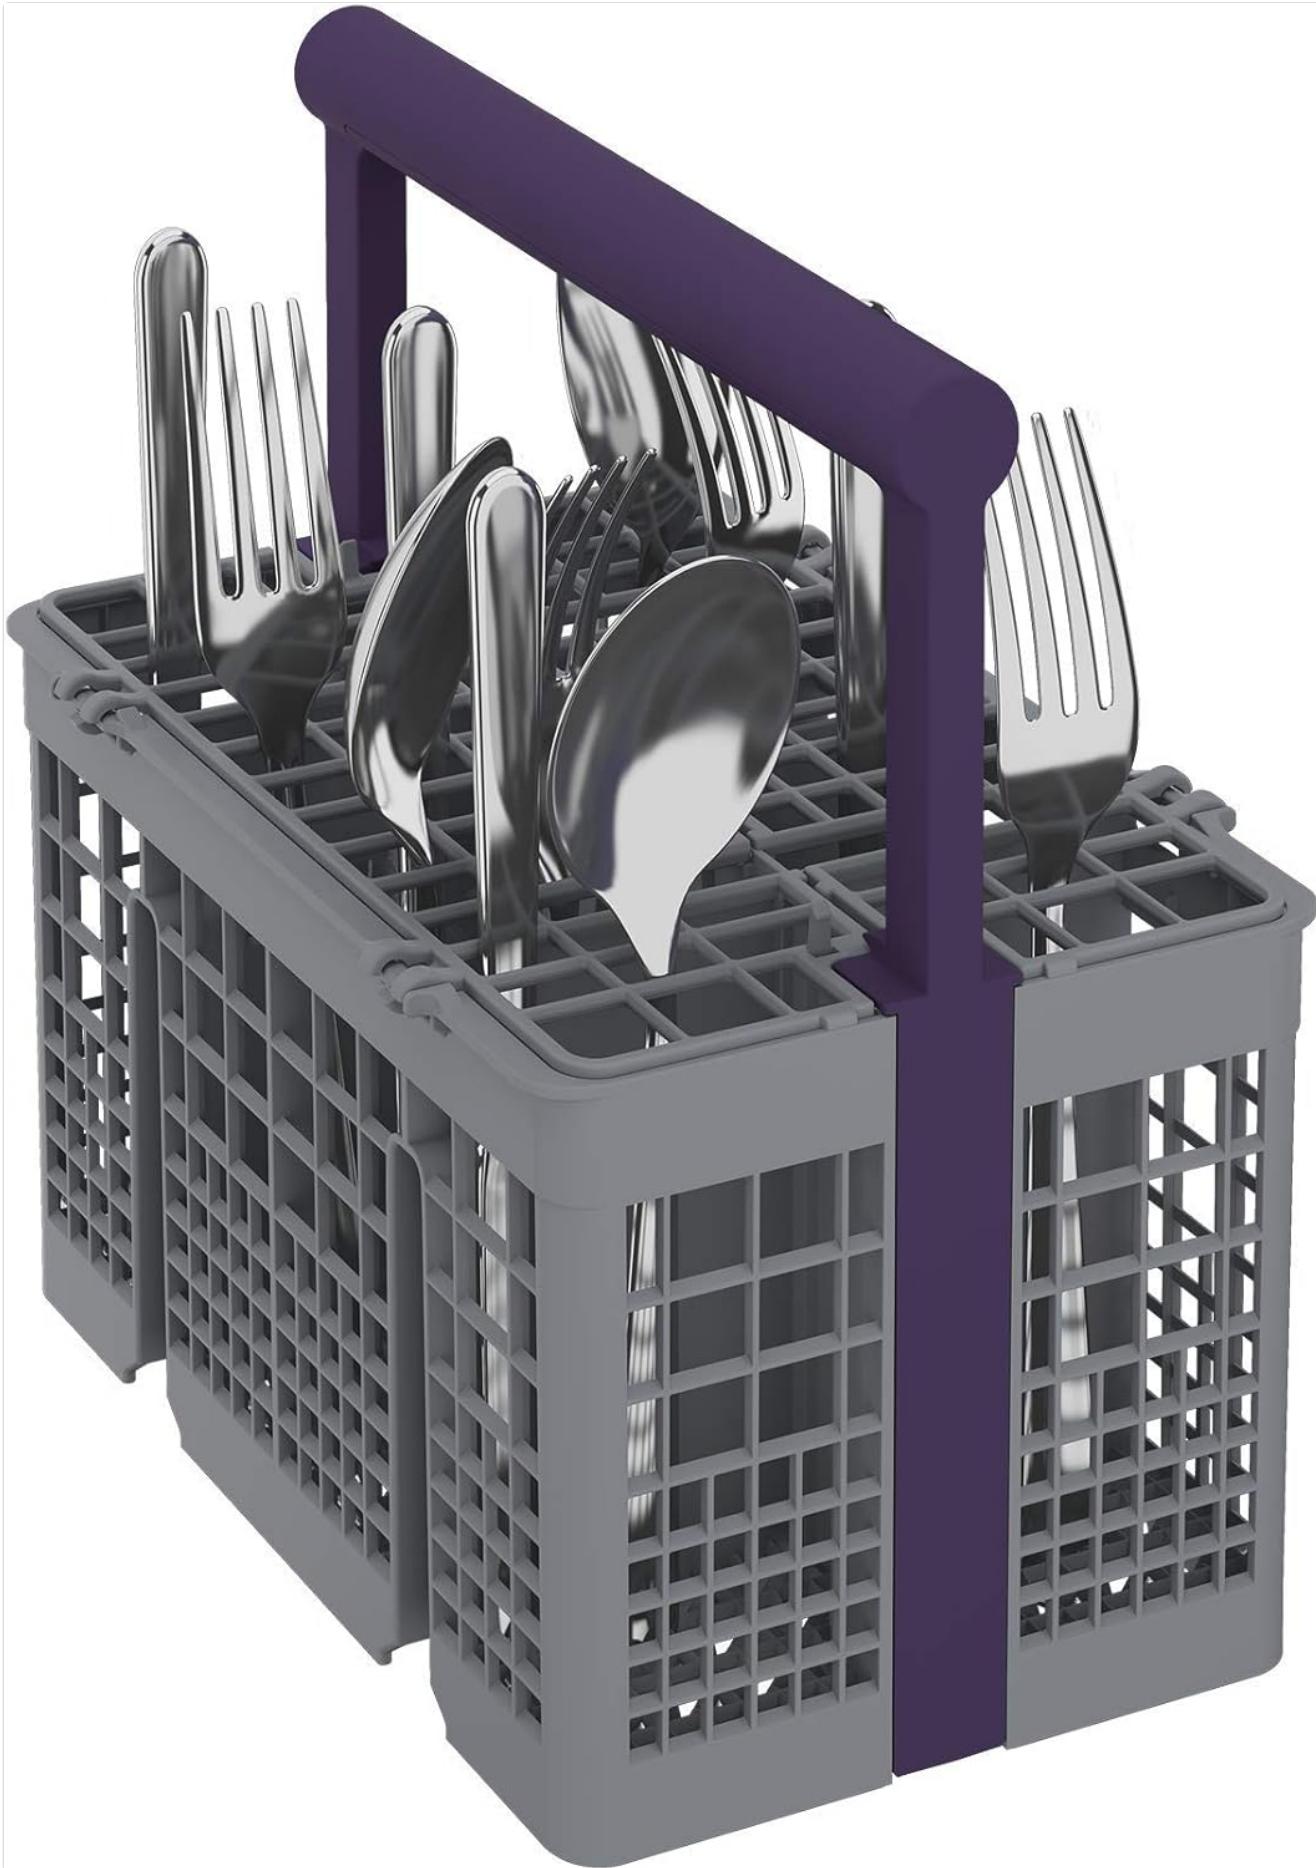


Image: The removable cutlery basket of the BEKO DFN39533G Dishwasher, filled with various utensils.

Adding Detergent and Rinse Aid

Open the detergent dispenser and add the recommended amount of dishwasher detergent. Close the dispenser lid

securely. Check the rinse aid indicator and refill the rinse aid dispenser if necessary. The rinse aid helps with drying and prevents water spots.



Image: The detergent and rinse aid dispenser inside the BEKO DFN39533G Dishwasher door.

Program Selection and Starting a Cycle

Your dishwasher offers 9 programs. Select the appropriate program based on the soil level and type of dishes. Options like "Half Load" can be selected for smaller loads to save water and energy. Press the Start button to begin the wash cycle. The ProSmart Inverter Motor ensures quiet and efficient operation (43 dB noise level). Refer to the program chart in your full user manual for detailed descriptions of each of the 9 programs and their recommended uses.

MAINTENANCE AND CARE

Cleaning the Filters

Regularly clean the filter system located at the bottom of the dishwasher tub. Remove the coarse filter, fine filter, and microfilter, rinse them under running water to remove food particles, and reassemble them correctly. A clogged filter can lead to poor washing results.



Image: Close-up view of the filter assembly and spray arm at the bottom of the BEKO DFN39533G Dishwasher tub.

Cleaning Spray Arms

Check the spray arm nozzles for blockages. If necessary, remove the spray arms and clean the holes with a thin wire or toothpick. Ensure they rotate freely after reinstallation.

Exterior and Interior Cleaning

Wipe the exterior of the dishwasher with a damp cloth. For the interior, periodically run a dishwasher cleaning cycle with a specialized cleaner to remove grease and limescale buildup.

TROUBLESHOOTING GUIDE

Before contacting customer service, review the following common issues and their potential solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Dishwasher does not start	Power supply issue, door not closed properly, program not selected.	Check power connection, ensure door is latched, select a program and press start.
Poor cleaning results	Clogged filters, blocked spray arms, incorrect loading, insufficient detergent.	Clean filters and spray arms, reload dishes correctly, use appropriate detergent.
Water remaining in the tub	Clogged drain hose or filter, drain pump malfunction.	Check and clean drain hose and filters. If issue persists, contact service.
Excessive noise	Dishes interfering with spray arms, foreign object in pump, improper installation.	Rearrange dishes, check for foreign objects, ensure dishwasher is level.

TECHNICAL SPECIFICATIONS

Brand: Beko

Model: DFN39533G

Type: Freestanding Dishwasher

Color: Manhattan Grey

Place Settings: 15

Number of Programmes: 9

Motor Type: ProSmart Inverter Motor

Special Features: Aqua Intense, Half Load

Noise Level: 43 Decibels

Dimensions (D x W x H): 60D x 59.8W x 85H centimeters

Item Weight: 50.6 Kilograms

Voltage: 220 Volts

Material: Stainless Steel (interior)

WARRANTY INFORMATION

This Beko DFN39533G Dishwasher comes with a **1-Year Manufacturer Warranty**. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects under normal household use. For specific terms and conditions, refer to the warranty card included with your appliance or visit the official Beko website.

CUSTOMER SUPPORT

Should you encounter any issues not resolved by the troubleshooting guide, or require technical assistance, please contact Beko customer service. You can find contact details on the official Beko website or in your warranty documentation. When contacting support, please have your model number (DFN39533G) and serial number ready.

