

[Manuals.plus](#) /

› [MANGROOMER](#) /

› MANGROOMER 2.0 Professional Body Groomer Instruction Manual

MANGROOMER 2.0

MANGROOMER 2.0 Professional Body Groomer Instruction Manual

Model: 2.0 | Brand: MANGROOMER

1. PRODUCT OVERVIEW

The MANGROOMER 2.0 Professional Body Groomer is engineered for precise and comfortable body hair removal. This versatile tool features a unique Propivot Flexing Head, a combined double-sided trimmer and foil blade design, and is fully waterproof for wet or dry use. It is designed to provide a smooth and clean grooming experience across various body areas.

Key Features

- Shave and trim all body areas with precision and ease.
- Combined double-sided trimmer/foil blade for complete smoothness.
- Propivot pivoting head adapts to body contours.
- Includes 3 different size trimmer length attachment combs.
- Wet/Dry functionality for use in the shower.
- Red/Green indicator charging light.
- Flip-open compact charging stand.

Package Contents

- MANGROOMER 2.0 Professional Body Groomer
- 3 Trimmer Combs (various lengths)
- 1 Bonus Foil
- Charging Stand
- Power Adapter
- Instruction Manual



Image 1.1: The MANGROOMER 2.0 Professional Body Groomer, showcasing the main unit, replacement foil, three attachment combs, and the charging stand.

2. IMPORTANT SAFETY INFORMATION

Always ensure the product is fully charged or has fresh batteries before use. Do not use while charging. Keep the product clean and dry after each use to prevent bacterial growth and skin irritation. Avoid using on broken skin or near the eyes, nose, or mouth. Always follow the directions for use and care to ensure safe and optimal operation.

3. SETUP AND FIRST USE

Charging the Device

Before first use, fully charge your MANGROOMER 2.0 Body Groomer. Place the groomer into the charging stand, ensuring it is properly seated. The charging indicator light will illuminate red during charging and turn green when fully

charged. A full charge typically takes several hours.



Image 3.1: The charging indicator light on the groomer, which changes from red to green when fully charged.

Attaching Trimmer Combs

The MANGROOMER 2.0 comes with three different size trimmer combs to achieve your desired hair length. To attach a comb, align the comb with the grooming head and gently push until it clicks into place. To remove, simply pull the comb away from the head.



Image 3.2: The groomer head with an attached trimmer comb, demonstrating how combs fit onto the device.

4. OPERATING INSTRUCTIONS

General Grooming Tips

- For longer hair, start with the longest attachment comb to create shorter stubble, then switch to a shorter comb or remove it for a closer shave.
- For best results, always shave against the grain of hair growth.
- Ensure skin is taut when grooming sensitive areas to prevent nicks.
- The groomer is designed to shave areas like shoulders, chest, underarms, arms, groin, and legs.

► **TOTAL BODY GROOMER
SHAVES EVERYWHERE
ON THE BODY FOR A
CLOSE CLEAN LOOK**

SHOULDERS

CHEST

UNDERARMS

ARMS

GROIN

LEGS

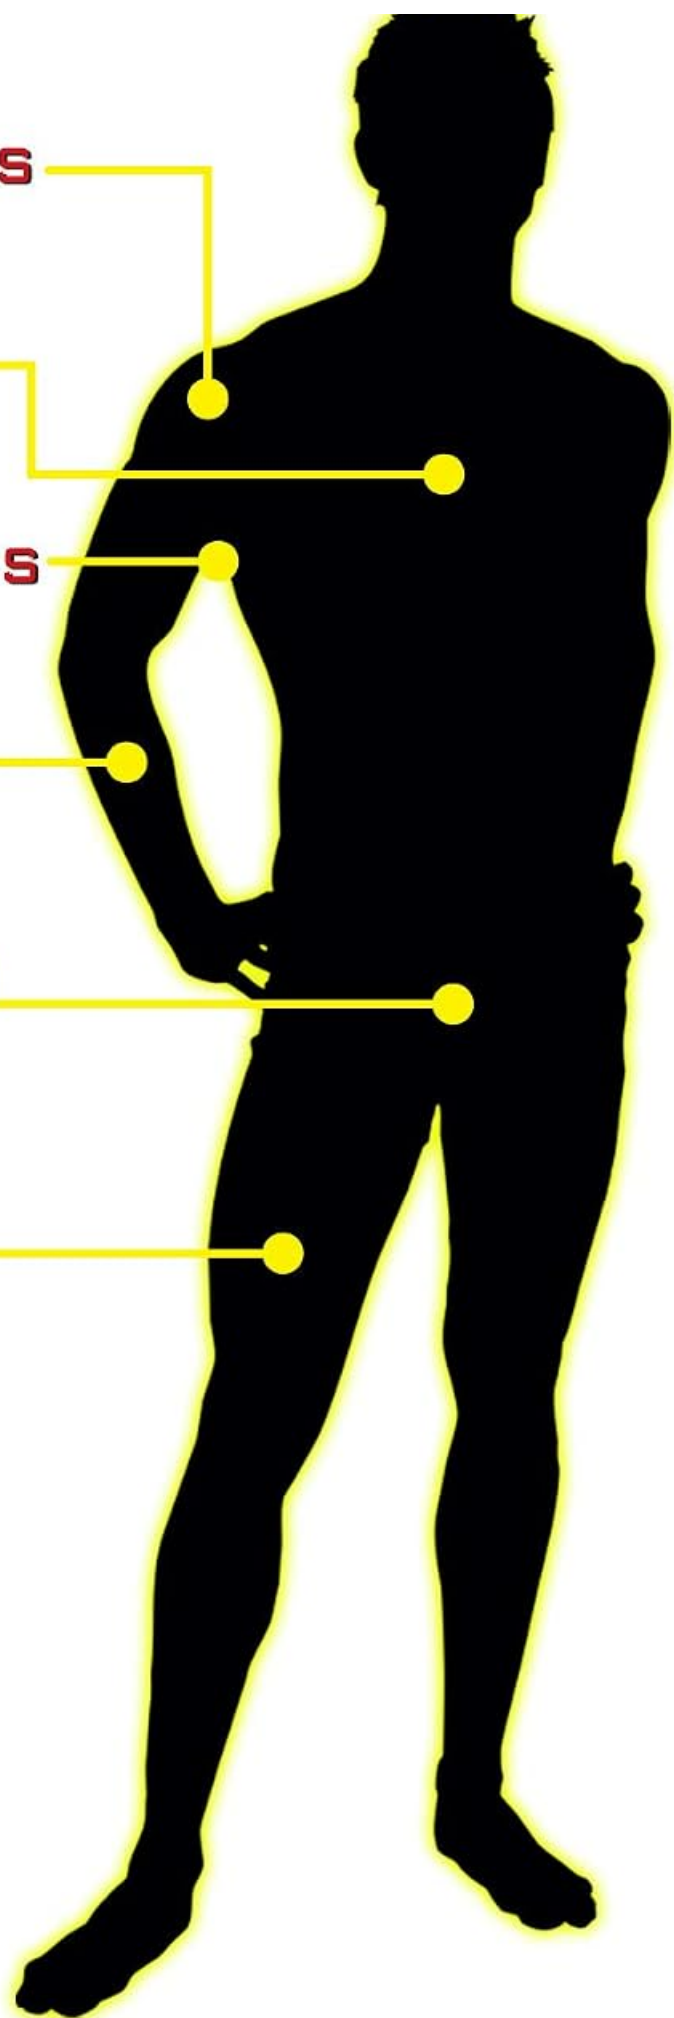


Image 4.1: A visual guide indicating the various body areas where the groomer can be effectively used for a close, clean look.

Wet/Dry Use

The MANGROOMER 2.0 is 100% waterproof and can be used in the shower for convenience. For optimal performance, ensure the device is fully charged before wet use. After wet use, rinse thoroughly and allow to air dry.



Image 4.2: The groomer shown with water, emphasizing its waterproof design for wet shaving.

Using the Propivot Flexing Head

The Propivot Flexing Head is designed to follow the contours of your body, ensuring maximum contact and a consistent shave. This feature allows for effortless gliding over curves and difficult-to-reach areas, reducing the need for multiple passes.



Image 4.3: A detailed view of the Propivot flexing head, highlighting its adaptive movement for contouring.

Using Trimmer Combs

Select the appropriate trimmer comb for your desired hair length. The combs are ideal for maintaining stubble or reducing bulk before a closer shave. Always ensure the comb is securely attached before operating the device.

5. CARE AND MAINTENANCE

Cleaning the Groomer

After each use, especially after wet shaving, rinse the grooming head thoroughly under running water. For a more thorough cleaning, detach the head and rinse both the head and the main unit. Ensure all hair clippings are removed. Allow the device to air dry completely before storing or recharging.

Storage

Store the MANGROOMER 2.0 in its charging stand or a dry, cool place away from direct sunlight and extreme temperatures. Ensure the device is clean and dry before storage to maintain its longevity and performance.

6. TROUBLESHOOTING

Issue	Possible Cause	Solution
Device not turning on	Low battery; Device not charged	Ensure the device is fully charged. Check charging stand connection.
Poor trimming/shaving performance	Blades are dull or clogged with hair; Incorrect technique	Clean the grooming head thoroughly. Ensure you are shaving against the grain and skin is taut. Consider replacing the foil/blade if performance does not improve.
Nicks or irritation	Skin not taut; Applying too much pressure; Dull blades	Gently stretch the skin in the area being groomed. Use light pressure. Ensure blades are clean and sharp.
Charging indicator not working	Improper connection to charging stand; Faulty charging stand/adaptor	Ensure the groomer is correctly seated in the charging stand. Check power adapter connection.

7. PRODUCT SPECIFICATIONS

Product Dimensions:

6.5 x 3.5 x 10 inches; 1 Pound

Item Model Number:

2.0

Batteries:

1 AA batteries required (included)

UPC:

853496003891

Manufacturer:

MANGROOMER

ASIN:

B07VF5KQ2B

Recommended Uses For Product:

BODY GROOMER, BALL TRIMMER AND BODY TRIMMER

Special Feature:

Hypoallergenic

Power Source:

Battery Powered

Model Name:

Mangroomer XL Ultra-Ergo

GTIN:

853496003891

8. WARRANTY AND SUPPORT

The MANGROOMER 2.0 Professional Body Groomer comes with a full 2-year warranty from the manufacturer. This

warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical support, or any inquiries regarding your product, please contact MANGROOMER customer service. Refer to the packaging or the official MANGROOMER website for the most current contact information.

© 2023 MANGROOMER. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question