

MODDEDZONE MK 11

MODDEDZONE MK 11 Custom Joy-Con Controllers User Manual

For Nintendo Switch

INTRODUCTION

This manual provides instructions for the MODDEDZONE MK 11 Custom Joy-Con Controllers, designed for use with the Nintendo Switch console. These versatile controllers offer multiple ways to enhance your gaming experience, functioning independently or together.

PACKAGE CONTENTS

- One (1) MODDEDZONE MK 11 Joy-Con (L) Controller
- One (1) MODDEDZONE MK 11 Joy-Con (R) Controller
- Original Packaging

SETUP

Initial Pairing

To pair your MODDEDZONE MK 11 Custom Joy-Con controllers with your Nintendo Switch console:

1. Power on your Nintendo Switch console.
2. From the HOME Menu, select "Controllers" > "Change Grip/Order".
3. While the screen displays "Press L + R on the controller", attach the Joy-Con controllers to the side rails of the console. Ensure they slide down until you hear a click.
4. The console will automatically register the Joy-Cons. Once registered, you can detach them for wireless play.

Charging

The Joy-Con controllers are battery-powered and rechargeable.

- To charge, attach the Joy-Cons to the Nintendo Switch console while it is docked or connected to its AC adapter.
- Alternatively, use a Joy-Con Charging Grip (sold separately) or a Joy-Con Charging Dock (sold separately) for charging.

OPERATING THE CONTROLLERS

Usage Modes

The MODDEDZONE MK 11 Custom Joy-Con controllers support various play styles:

- **Handheld Mode:** Attach both Joy-Cons to the console for a portable gaming experience.
- **TV Mode / Tabletop Mode (Wireless):** Use two Joy-Cons independently in each hand, or combine them into one game controller using a Joy-Con Grip (sold separately).
- **Multiplayer:** Each Joy-Con can act as a standalone controller, allowing two players to enjoy supported games with a single pair of Joy-Cons.

Motion Controls

Each Joy-Con includes an accelerometer and gyro-sensor, enabling independent left and right motion control for compatible games.



Image: Rear view of the MODDEDZONE MK 11 Custom Joy-Con controllers, highlighting the design and connection points.

MAINTENANCE AND CARE

- Keep the controllers clean by wiping them with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- Store the controllers in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid dropping the controllers or subjecting them to strong impacts.
- Do not attempt to disassemble or modify the controllers, as this will void the warranty and may cause damage.

TROUBLESHOOTING

Controllers Not Pairing

- Ensure the Nintendo Switch console is updated to the latest system software.
- Verify that the Joy-Cons are fully charged.
- Try detaching and reattaching the Joy-Cons to the console.
- If using wirelessly, ensure there are no strong interferences (e.g., other wireless devices) nearby.

Input Lag or Disconnections

- Ensure the console is not too far from the controllers during wireless play.
- Check for any physical obstructions between the controllers and the console.
- Fully charge the controllers.

Buttons Not Responding

- Clean around the buttons with a soft, dry cloth to remove any debris.
- Ensure the controllers are properly paired and charged.
- Test the buttons in the Nintendo Switch's controller test menu (System Settings > Controllers and Sensors > Test Input Devices).

SPECIFICATIONS

Feature	Detail
Compatible Devices	Nintendo Switch
Controller Type	Gamepad
Connectivity	Wireless (USB for charging/initial pairing)
Power Source	Battery Powered
Motion Control	Accelerometer, Gyro-sensor
Model Number	MK 11
Brand	MODDEDZONE
UPC	635133942929
ASIN	B07VF76YLC

WARRANTY INFORMATION

MODDEDZONE warrants this product against defects in material and workmanship under normal use for a specified period from the date of purchase. Please retain your proof of purchase. For specific warranty terms and conditions, refer to the documentation included with your product or contact MODDEDZONE customer support.

CUSTOMER SUPPORT

For technical assistance, troubleshooting, or warranty inquiries, please contact MODDEDZONE customer support.

Online Support: Visit the [MODDEDZONE Store on Amazon](#) for more information and contact options.
Please have your product model number (MK 11) and ASIN (B07VF76YLC) ready when contacting support.

© 2026 MODDEDZONE. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question