

VINABTY RC1994925

VINABTY Replacement Remote Control Instruction Manual

Model: RC1994925

INTRODUCTION

This manual provides instructions for the VINABTY replacement remote control, model RC1994925. This remote is designed to be compatible with various Thomson TV models, including RC1994920, RC1994906, RC1994946, 40FS6646, 40FR5234, 40FR5634, 40FS3246, 42E90NF32, 40FE9234B, 42FE9234A, 42FE9234B, 42FR6634, 46E91NF32, 46FE9234B, 46FF9234, 46FS6646, 52FE9234, 52FE9234B, 55FS6646, and many others listed in the product description. Please read this manual carefully before use to ensure proper operation and to maximize the lifespan of your remote control.

SETUP

1. Battery Installation

The remote control requires two AAA alkaline batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

Note: Ensure batteries are inserted correctly to prevent damage to the remote control.

2. Initial Use

This replacement remote control is pre-programmed for compatible Thomson TV models. No additional setup or pairing is typically required. Once batteries are installed, the remote should function immediately.

with your television.

OPERATING INSTRUCTIONS

The remote control features a standard layout for easy navigation and control of your Thomson TV. Refer to the image below for button identification and their primary functions.



Image: Front view of the VINABTY replacement remote control, displaying its full button layout. The remote is black with white and colored buttons, including numerical keys, navigation pad, volume, channel, and function buttons.

Button Functions:

- **Power (Red Button):** Turns the TV on or off.
- **Source/Input:** Selects the input source (e.g., HDMI, AV, TV).
- **TV/DVD:** Switches between TV and DVD modes if applicable.
- **Number Buttons (0-9):** Directly selects channels or enters numerical values.
- **LIST:** Displays the channel list.
- **AV:** Selects the AV input source.
- **EXIT:** Exits the current menu or function.
- **FAV:** Accesses favorite channels.

- **Menu:** Opens the TV's main menu.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates through menus and confirms selections.
- **GUIDE:** Displays the electronic program guide.
- **INFO:** Displays information about the current program or input.
- **PRESETS:** Accesses preset settings or functions.
- **RETURN:** Returns to the previous screen or menu.
- **Volume (+/-):** Adjusts the volume level.
- **Mute:** Mutes or unmutes the TV sound.
- **PR (+/-):** Changes channels up or down.
- **TEXT:** Activates or deactivates Teletext.
- **Subtitles:** Toggles subtitles on or off.
- **Digital/Media:** Accesses digital media functions.
- **Stop/Play/Pause/Fast Forward/Rewind:** Controls media playback.
- **ZOOM (+/-):** Adjusts the screen zoom level.
- **T.LINK:** Activates Thomson Link (HDMI-CEC) functions.

MAINTENANCE

1. Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

2. Cleaning

To clean the remote control, wipe it with a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild cleaning solution. Do not use abrasive cleaners, alcohol, or solvents, as these can damage the surface or internal components.

3. Storage

Store the remote control in a cool, dry place away from direct sunlight, high temperatures, and humidity. If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

TROUBLESHOOTING

- **Remote control is not working:**
 - Check if the batteries are installed correctly with the correct polarity (+/-).
 - Replace the batteries with new ones.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Make sure you are within the effective operating range (up to 10 meters).
- **Some buttons are not responding:**
 - This may indicate low battery power. Replace the batteries.
 - Ensure the remote is pointed directly at the TV's IR receiver.

- Verify that the specific function is supported by your TV model.
- **Remote control does not control the TV:**
 - Confirm that your TV model is listed as compatible with this VINABTY remote control. While this remote is designed for broad compatibility, some specific TV models may vary.
 - Ensure the TV is powered on and not in standby mode.

SPECIFICATIONS

- **Brand:** VINABTY
- **Model Name:** RC1994925
- **Connectivity Technology:** Infrared
- **Maximum Range:** 10 Meters
- **Compatible Devices:** Thomson Home Cinema / TV (various models including RC1994920, RC1994906, RC1994946, 40FS6646, etc.)
- **Battery Type:** AAA Alkaline (2 required)
- **Color:** Black
- **Special Feature:** Ergonomic design

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the seller directly. VINABTY aims to provide reliable replacement remote controls, and support is available for product-related inquiries.