

## Easytry123 Replacement Remote Control for LG LH20-UA and LH9000 Series HDTVs

# Easytry123 Replacement Remote Control User Manual

For LG Plasma HDTV Models: 19LH20-UA, 22LH20-UA, 26LH20-UA, 32LH20-UA, 37LH20-UA, 42LH20-UA, 55LH9000

## 1. INTRODUCTION

This document serves as a user manual for the Easytry123 Replacement Remote Control, designed for use with various LG Plasma HDTV models. This remote control is a functional replacement and may not offer all the advanced features or exact button layouts of your original television remote. Please review the compatible models listed on the product packaging or description to ensure proper functionality with your specific LG television.

### Important Note:

- This is a replacement remote control. Some advanced functions or specific smart TV features present on your original remote may not be supported.
- Ensure your television model is listed as compatible to guarantee basic functionality.
- Batteries are not included with this remote control.

## 2. SETUP

### 2.1 Battery Installation

The Easytry123 Replacement Remote Control requires two (2) AAA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



**Figure 1:** Rear view of the remote control with the battery cover removed, illustrating the correct orientation for AAA battery insertion.

Once batteries are installed, the remote is ready for use. No programming is typically required for compatible LG TV models.

### **3. OPERATING INSTRUCTIONS**

This remote control operates using infrared (IR) technology. Ensure there is a clear line of sight between the remote control and the IR receiver on your LG television for optimal performance. Point the remote directly at the TV when pressing buttons.



Figure 2: Front view of the remote control, highlighting the button layout.

### 3.1 Basic Functions

- **POWER** (●): Turns the television on or off.
- **INPUT/SOURCE**: Cycles through available input sources (HDMI, AV, Component, etc.).
- **NUMBER PAD (0-9)**: Directly selects channels.
- **LIST**: Displays the channel list.
- **VOL (+/-)**: Adjusts the volume level.
- **MUTE** ( ): Mutes or unmutes the television audio.
- **CH** (▲/▼): Changes channels up or down.
- **MENU**: Accesses the television's main menu.
- **NAVIGATION BUTTONS** (◀ ▲ ▶ ▼): Navigates through menu options.
- **ENTER**: Confirms a selection in the menu.
- **RETURN/BACK**: Returns to the previous screen or menu.
- **RATIO**: Adjusts the screen aspect ratio.
- **CC (Closed Caption)**: Toggles closed captions on or off.
- **FLASHBK**: Recalls the previous channel.
- **COLOR BUTTONS (Red, Green, Yellow, Blue)**: Used for specific functions within certain menus or

applications, as indicated on the TV screen.

- **TIMER:** Accesses timer settings.
- **ALARM:** Accesses alarm settings.
- **SAP:** Selects Secondary Audio Program.
- **EJECT:** (Functionality may vary or be unsupported depending on TV model and external devices).

For specific advanced functions or smart TV features, please refer to your LG television's original user manual, as this replacement remote may not support all such functionalities.

## 4. MAINTENANCE

---

### 4.1 Cleaning

To clean your remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's surface or internal components.

### 4.2 Battery Care

- Replace batteries when the remote's response becomes sluggish or stops working.
- Always replace both batteries at the same time with new ones of the same type (AAA).
- Do not mix old and new batteries, or different types of batteries.
- If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- Dispose of used batteries according to local regulations.

## 5. TROUBLESHOOTING

---

If you experience issues with your Easytry123 Replacement Remote Control, try the following troubleshooting steps:

- **Remote not responding:**
  - Check if the batteries are installed correctly with the correct polarity (+/-).
  - Replace the batteries with fresh AAA batteries.
  - Ensure there is a clear line of sight between the remote's IR emitter and the TV's IR receiver. Remove any obstructions.
  - Make sure you are pointing the remote directly at the television.
- **Only some functions work:**
  - As a replacement remote, some specific or advanced functions of your original TV remote may not be supported. Refer to the "Introduction" section.
  - Verify that your LG TV model is listed as compatible with this remote control.
- **TV not responding to any remote:**
  - Check if the TV itself is powered on and functioning correctly.
  - Try using the manual controls on the TV itself to rule out a TV issue.

If the problem persists after trying these steps, please contact the seller for further assistance.

## 6. SPECIFICATIONS

---

- **Brand:** Easytry123
- **Compatible Devices:** LG Plasma HDTVs (Specific models: 19LH20-UA, 22LH20-UA, 26LH20-UA, 32LH20-UA, 37LH20-UA, 42LH20-UA, 55LH9000)
- **Connectivity Technology:** Infrared (IR)
- **Controller Type:** Button Control
- **Special Feature:** Ergonomic design
- **Batteries Required:** 2 x AAA (not included)

## 7. WARRANTY AND SUPPORT

---

Specific warranty information for this Easytry123 Replacement Remote Control is not provided in the product details. For any warranty claims, technical support, or further assistance, please contact the seller directly through the platform where the purchase was made. Keep your purchase receipt or order number handy for faster service.

For information regarding your LG television's features or advanced settings, please consult the original user manual provided with your LG TV.