

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Bewinner](#) /

> [Bewinner Mini FHD 1080P Media Player User Manual](#)

## Bewinner Bewinnerqcro60k8g1-02

# Bewinner Mini FHD 1080P Media Player User Manual

Model: Bewinnerqcro60k8g1-02

## INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Bewinner Mini FHD 1080P Media Player. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your viewing experience. This compact media player is designed to support a wide range of high-definition video and audio formats, offering versatile connectivity options for your home entertainment system.

## SAFETY WARNINGS



**To avoid suffocation hazard, keep this plastic bag away from babies and children.**

This warning is crucial for safe handling of packaging materials. Always dispose of plastic bags properly or store them out of reach of infants and young children.

- Do not expose the device to rain or moisture.
- Do not disassemble the device. Refer all servicing to qualified personnel.
- Ensure proper ventilation around the device to prevent overheating.
- Use only the provided power adapter.
- Keep the device away from direct sunlight, heat sources, and extreme temperatures.
- Avoid dropping or subjecting the device to strong impacts.

## PRODUCT OVERVIEW

The Bewinner Mini FHD 1080P Media Player is a compact and versatile device designed for playing various media files on your television or display. It supports a wide array of video, audio, and image formats, and features multiple connectivity options for external storage and display.



Figure 1: Top view of the Bewinner Mini FHD 1080P Media Player, showing its compact design and various supported formats listed on the top panel.

## Key Features:

- **Strong Compatibility:** Supports all mainstream high-definition movies with perfect 1080p decoding and encoding up to 100 Mbps.
- **Versatile Storage Support:** Compatible with USB drives, portable hard drives (up to 2.5T/3.5 inch), and SD cards.
- **Compact and Aesthetic Design:** Small footprint, ideal for placement next to your TV.
- **Rich Video Output Interfaces:** Features real HDMI 1.3 digital interface, YUV component video output, and AV composite video output.
- **Extensive Video Decoding:** Supports RM/RMVB (real8/9/10) up to 1920x1080, H.264 (MKV, MOV, AVI, M2TS, TP, TRP, IFO, ISO) at 1080P, and WMV9/VC-1 at 1080P.
- **Multi-language OSD & Subtitle Support:** Offers multi-language On-Screen Display (OSD) and supports external SRT subtitles with adjustable size, position, and color.
- **Breakpoint Playback:** Resumes playback from where you left off.
- **Super Remote Control Reception:** Effective range up to 5 meters, with a special long-range infrared remote control for reliable operation up to 12 meters without interference.
- **High-Quality Power Supply:** Includes a 5.4V/2A power supply capable of powering an external 2.5-inch 1TB hard drive.

## SETUP

---

Follow these steps to set up your Bewinner Mini FHD 1080P Media Player:

### 1. Connecting to Power

1. Locate the DC 5.4V/2A power input port on the media player.
2. Connect the provided power adapter to this port.
3. Plug the power adapter into a suitable electrical outlet (AC 100-240V 50/60Hz).
4. The power indicator light on the device should illuminate.

## 2. Connecting to Your TV/Display

The media player offers multiple video output options. Choose the one that best suits your display device.



Figure 2: The media player connected to a television, demonstrating its use in a home entertainment setup.

- **HDMI Connection (Recommended for HD):**

- a. Connect one end of an HDMI cable (not included) to the HDMI 1.3 HD Interface port on the media player.
- b. Connect the other end of the HDMI cable to an HDMI input port on your TV or display.
- c. Select the corresponding HDMI input on your TV using its remote control.

- **AV Composite Video Connection:**

- a. Connect the AV cable (included) to the AV output ports on the media player (Yellow for video, Red for right audio, White for left audio).
- b. Connect the other end of the AV cable to the corresponding AV input ports on your TV.
- c. Select the corresponding AV input on your TV.

• **VGA Connection:**

- a. Connect a VGA cable (not included) to the VGA output port on the media player.
- b. Connect the other end of the VGA cable to a VGA input port on your display.
- c. Note: VGA only transmits video. You will need separate audio cables for sound if using VGA.



Figure 3: Detailed view of the media player's input and output ports, including power, AV, HDMI, VGA, and USB connections.

### 3. Inserting Storage Media

The media player supports various external storage devices:

- **USB Drives/Hard Drives:** Insert your USB flash drive or external USB hard drive into one of the USB ports on the side of the player.
- **SD/MMC Cards:** Insert your SD or MMC card into the SD Card Slot.

# Super remote reception

Effective range up to 5 m, maximum support 12M without interference



Figure 4: The compact size of the media player, easily held in one hand, highlighting its portability.

## OPERATING INSTRUCTIONS

---

Once the device is connected and powered on, you can navigate its functions using the included remote control.

### Remote Control Functions:



Figure 5: The remote control for the media player, showing various buttons for navigation and media playback.

- **Power Button:** Turns the device on/off.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Used to navigate menus and select options.
- **Return/ESC:** Go back to the previous menu or exit current function.
- **Volume +/-:** Adjust audio volume.
- **Play/Pause, Stop, Fast Forward, Rewind:** Standard media playback controls.
- **Movie, Music, Photo, Setup:** Direct access buttons for different media types and settings.
- **OSD:** Access On-Screen Display settings.
- **SUB-T:** Subtitle control.
- **AV/HDMI/YUV:** Select video output mode.
- **MUTE:** Mute/unmute audio.

The remote control has a super reception unit with an effective range of up to 5 meters, and can operate up to 12 meters without interference under optimal conditions.

### Media Playback:

After connecting your storage device, the player will typically display a menu allowing you to browse files. Use the navigation buttons on the remote to select the desired media type (Movie, Music, Photo) and then browse your files.

- **Supported Video Formats:** MKV, AVI, TS/TP, M2TS, RM/RMVB, MOV, VOB, FLV, WMV.
- **Supported Audio Formats:** MP3, OGG, WMA, APE.
- **Supported Image Formats:** JPEG, GIF, PNG, BMP.
- **Supported Encoding:** DTS, AC3, FLAC, AAC.
- **Subtitle Support:** Supports external SRT, SSA, SUB subtitle formats. You can adjust subtitle size, position, and color via the OSD menu.
- **Breakpoint Playback:** The device supports resuming playback from the last stopped point.

## MAINTENANCE

---

Proper maintenance ensures the longevity and optimal performance of your media player.

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the device. Do not use liquid cleaners or aerosols.
- **Storage:** When not in use for extended periods, store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Ventilation:** Ensure the device has adequate airflow around it. Do not block ventilation openings.
- **Power Off:** Always power off the device properly before disconnecting it from power or storage media.

## TROUBLESHOOTING

---

If you encounter issues with your media player, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
No power / Device does not turn on.	<ul style="list-style-type: none"> <li>◦ Ensure the power adapter is securely connected to the device and the power outlet.</li> <li>◦ Verify the power outlet is functional.</li> <li>◦ Check if the power adapter is damaged.</li> </ul>
No video output.	<ul style="list-style-type: none"> <li>◦ Check all video cables (HDMI, AV, VGA) are securely connected to both the player and the TV.</li> <li>◦ Ensure your TV is set to the correct input source (e.g., HDMI 1, AV, VGA).</li> <li>◦ Try a different video cable or input port on your TV.</li> <li>◦ Verify the TV format setting (PAL/NTSC) on the media player matches your TV.</li> </ul>
No audio output.	<ul style="list-style-type: none"> <li>◦ Check audio cable connections (for AV/VGA).</li> <li>◦ Ensure the volume on the media player and your TV is not muted or set too low.</li> <li>◦ Verify the audio settings in the player's menu.</li> </ul>

Problem	Possible Cause / Solution
Remote control is unresponsive or slow.	<ul style="list-style-type: none"> <li>◦ Ensure there are no obstructions between the remote and the player's IR receiver.</li> <li>◦ Replace the batteries in the remote control.</li> <li>◦ Ensure you are within the effective range (up to 5 meters, max 12 meters without interference).</li> </ul>
Cannot read USB drive/SD card.	<ul style="list-style-type: none"> <li>◦ Ensure the storage device is properly inserted.</li> <li>◦ Check if the storage device is formatted to a supported file system (FAT16, FAT32, NTFS).</li> <li>◦ Try a different USB port or SD card slot.</li> <li>◦ Test the storage device on another computer to ensure it is functional.</li> </ul>
Playback issues (stuttering, unsupported format).	<ul style="list-style-type: none"> <li>◦ Verify the media file format is listed as supported (MKV, AVI, etc.).</li> <li>◦ Ensure the video encoding (H.264, WMV9, etc.) and audio encoding (DTS, AC3, etc.) are supported.</li> <li>◦ Try playing a different file to see if the issue is specific to one file.</li> <li>◦ For large files or high bitrates, ensure your storage device is fast enough.</li> </ul>

## SPECIFICATIONS

Feature	Detail
Product Dimensions	14.5 x 9.5 x 2 cm; 390 grams
Manufacturer	Bewinner
Model Number	Bewinnerqcro60k8g1-02
Connectivity Technology	HDMI, USB
Connector Type	Component
Special Feature	Portable
Resolution	1080p
Supported Internet Services	Spotify (Note: This might be a misinterpretation from the source data, as a simple media player typically doesn't support streaming services directly. It's included as per source.)
Controller Type	Remote Control

Feature	Detail
Form Factor	TV Box
Color	EU (likely refers to power plug type)
Compatible Devices	Television
Power Input	AC 100-240V 50/60Hz
Power Output	DC 5.4V / 2A
Operating Temperature	-5°C to +50°C
TV System	PAL/NTSC
Video Output	1.0+/-0.2Vp-p, 75Ω
Audio Output	2.0 +/- 0.2V (RMS)
Signal-to-Noise Ratio	≥ 80dB
Storage Media Support	USB Hard Disk, USB Disk, SD/MMC/MS Card, SDHC
Hard Disk Format Support	FAT16 / FAT32 / NTFS

Note: Specifications are subject to change without notice.

## WARRANTY AND SUPPORT

Specific warranty information for the Bewinner Mini FHD 1080P Media Player is not provided within this manual. For details regarding warranty coverage, returns, or technical support, please refer to the product packaging, the retailer's website where you purchased the device, or contact Bewinner customer service directly.

You may also find additional support resources, FAQs, and updated drivers (if applicable) on the official Bewinner website.

For general inquiries or assistance, please visit the [Bewinner brand page on Amazon.sa](#).