

[Manuals.plus](#) /

> [JOYROOM](#) /

> JOYROOM Capacitive Stylus Pen User Manual

JOYROOM stylus pen

JOYROOM Capacitive Stylus Pen User Manual

Model: Stylus Pen

PRODUCT OVERVIEW

The JOYROOM Capacitive Stylus Pen is designed for use with various touch screen devices, including tablets, smartphones, and computers. It offers a smooth and precise writing and drawing experience.

Fits for All Touch Screens

Tablets / Smart Phones / Computers



Image: The JOYROOM Stylus Pen shown alongside various compatible touch screen devices, including tablets and smartphones, illustrating its broad compatibility.

SLIM BODY, LIGHTWEIGHT

It's light enough that you kid doesn't have to have a death grip on it and cramp hand



Image: A hand holding the JOYROOM Stylus Pen, with annotations indicating its length (6.5 inches) and diameter (0.35 inches), highlighting its lightweight design at 0.7 oz.

SETUP

The JOYROOM Capacitive Stylus Pen is designed for immediate use without the need for Bluetooth pairing or charging. Simply uncap and begin using it on your compatible touch screen device.

Tip Installation and Replacement

The stylus comes with a transparent disc tip. This tip is crucial for proper functionality. The package includes two replacement disc tips.

1. To replace the disc tip, gently pull out the existing tip by holding the middle part of the small metal bar.
2. Carefully push a new disc tip into the stylus until it is securely in place.



Image: A diagram illustrating the process of replacing the stylus tip. It shows the cap being removed, the old tip being pulled out, and a new tip being inserted.

Your browser does not support the video tag.

Video: An official product video demonstrating the use of the JOYROOM Stylus Pen, including how to change the tip and its immediate functionality without charging.

OPERATING INSTRUCTIONS

General Use

The stylus is ready for use directly out of the box. Simply touch the disc tip to your device's screen to interact. It provides a smooth, lag-free, and precise experience for writing, drawing, and navigation.

Palm Rejection Feature

The stylus is designed to work with a palm rejection glove, allowing you to rest your hand comfortably on the screen while drawing or writing without unintended input.

Comes with a Palm Rejection Glove

OURS



OTHER'S

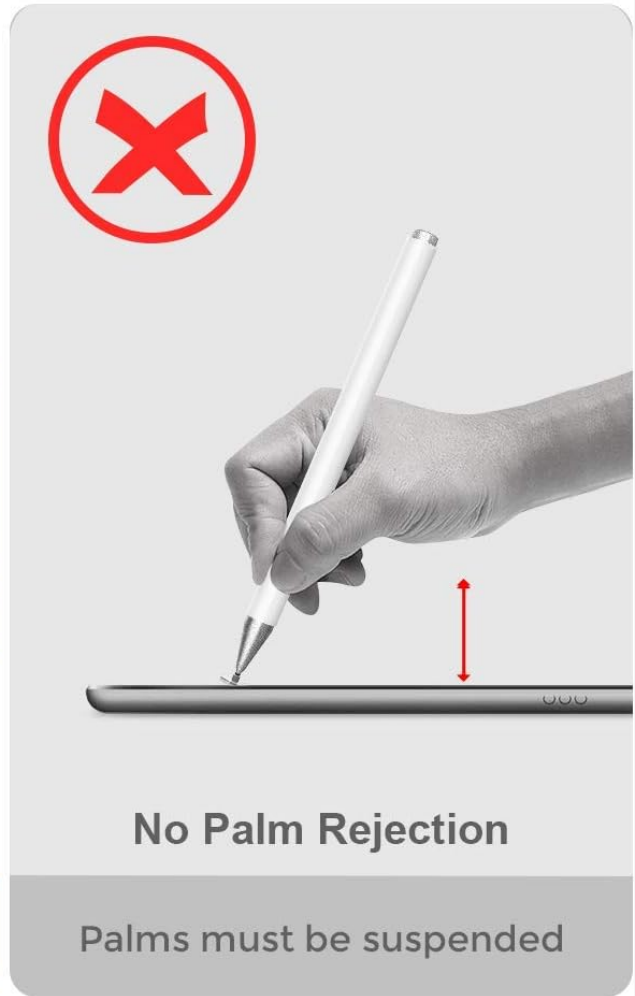


Image: A visual comparison demonstrating the palm rejection feature. One side shows a hand resting on the screen with the included glove, allowing free drawing. The other side shows a hand without a glove, indicating the need to suspend the palm to avoid unwanted touches.

Compatibility

The stylus is compatible with a wide range of touch screen devices. Refer to the specifications section for a detailed list of compatible models.

Compatible with All Touch Screens

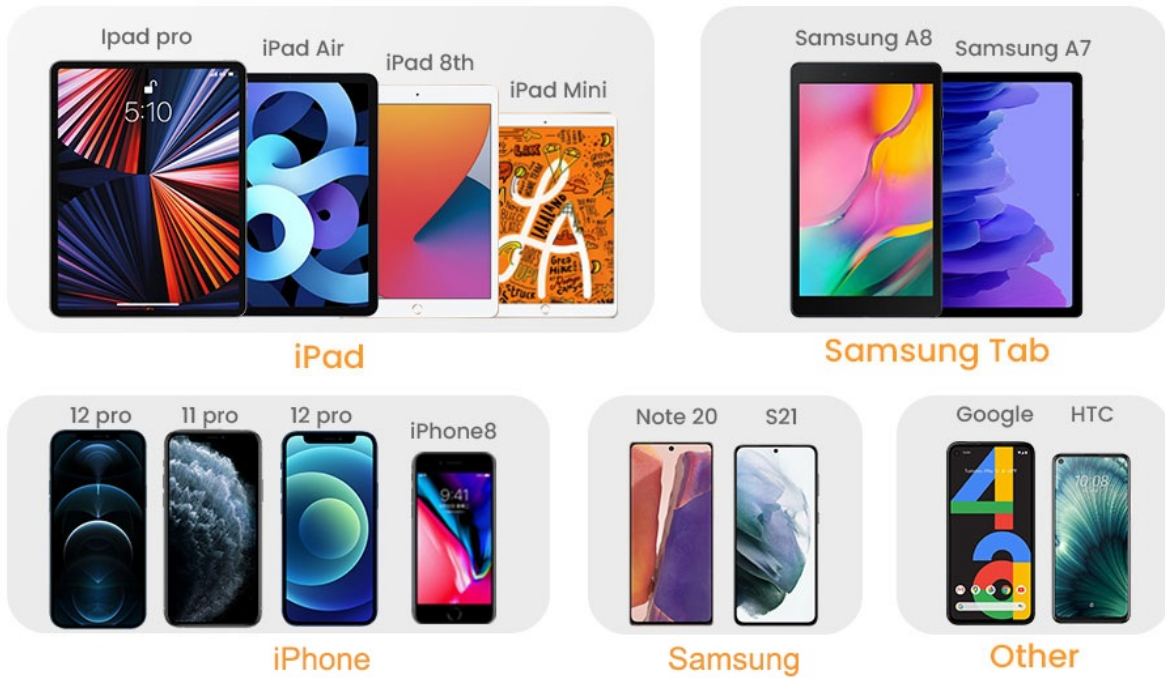


Image: A chart detailing the compatibility of the JOYROOM Stylus Pen with various iPad, Samsung Tab, iPhone, and other smartphone models.

MAINTENANCE

Cleaning the Disc Tip

Regularly clean the disc nib to ensure optimal performance and prevent dust accumulation. Use a soft, dry cloth to gently wipe the tip.

Protecting the Tip

The stylus features a magnetic cap to protect the disc tip when not in use. Always place the cap back on the stylus to prevent damage.

The disc tip is a necessary part for the stylus to work properly. Avoid pulling on the disc itself; only remove the tip by holding the metal bar as described in the Setup section.

TROUBLESHOOTING

- **Stylus not responding:** Ensure the disc tip is clean and free of debris. Verify that the tip is securely installed. The stylus does not require charging or pairing, so these are not factors.
- **Inaccurate input:** Clean the disc tip. Ensure your device's screen is clean. If using a screen protector, ensure it is thin and properly applied.
- **Palm rejection issues:** Ensure you are wearing the included palm rejection glove correctly. Some applications or older device models may have limited palm rejection capabilities.

- **Tip damage:** If the disc tip is damaged or worn, replace it with one of the included spare tips as per the instructions in the Setup section.

SPECIFICATIONS

Brand	JOYROOM
Model Number	stylus pen
Material	Aluminum
Item Weight	35 Grams
Item Dimensions (L x W x H)	6.5 x 0.35 x 0.35 inches
Batteries Required	No
Compatible Devices	Tablet, Smartphone, Computer
Minimum Required Operating System	iOS 13
Compatible Tablet Models	Apple iPad (5th, 6th, 7th, 8th generation), Apple iPad Air (1st, 2nd, 3rd, 4th, 5th generation), Apple iPad Pro (10.5-inch, 11-inch, 12.9-inch), Apple iPad mini (1st, 2nd, 3rd, 4th, 5th generation), Samsung Galaxy Tab S6/S7/Tab A7 10.4/A8.0, Amazon Fire HD 10 13th Generation
Compatible Smartphone Models	iPhone 13 mini, iPhone 13 Pro Max, iPhone 12 Pro Max/12 Pro/12 Mini/11 Pro/11/XS MAX/XS/X/XR/8/7 Plus, iPhone SE (1st/2nd Gen), Samsung Galaxy S21+/S20+/S20 Ultra/S9/S10+/Note 20/10/A90/A72/A80/A52/A50, Edges/G50/P50/G8/G7/E5, Blackberry KEY2/DTEK60/GhostPro/Evolve, HTC, Google, LG, and other smartphones.

WARRANTY AND SUPPORT

JOYROOM offers a 2-year product service for this stylus pen. For any issues or support needs, please refer to the seller's information provided on the card included with your purchase.