

[Manuals.plus](#) /

› [Crock-Pot](#) /

› Crock-Pot Express Easy Release Multi-Cooker (Model 2100467) Instruction Manual

Crock-Pot 2100467

Crock-Pot Express Easy Release Multi-Cooker

Model: 2100467

INTRODUCTION

The Crock-Pot Express Easy Release Multi-Cooker is a versatile kitchen appliance designed to simplify your cooking process. It combines the functions of a pressure cooker, slow cooker, sear/sauté pan, and steamer into one convenient unit. This manual provides essential information for safe and effective operation, maintenance, and troubleshooting.

With its 6-quart capacity, this multi-cooker is suitable for preparing meals for 7 or more people, making it ideal for family dinners or entertaining guests. It features an intuitive control panel with preset functions and adjustable settings to achieve perfect results for a variety of dishes.

IMPORTANT SAFETY INFORMATION

- Always read all instructions before operating the appliance.
- Ensure the lid is properly closed and locked before starting any pressure cooking function.
- Use the front steam release dial to keep hands away from hot steam when releasing pressure.
- Do not overfill the cooking pot. Refer to the maximum fill lines inside the pot.
- Always check that the sealing gasket is correctly seated in the lid before use to prevent steam leaks.
- Keep children away from the appliance during operation.

PRODUCT OVERVIEW



Figure 1: Exploded view of the Crock-Pot Express Multi-Cooker showing the main unit, lid, removable non-stick cooking pot, steaming rack, and serving spoon.



Figure 2: Front view of the Crock-Pot Express Multi-Cooker with its illuminated digital display and various function buttons.

Components:

- **Main Unit:** Houses the heating element and control panel.
- **Lid:** Features a steam release dial, sealing gasket, and pressure indicator.
- **Removable Non-Stick Cooking Pot:** 6-quart capacity, designed for easy cooking and cleanup.
- **Steaming Rack:** Used for steaming vegetables, fish, or other items above liquid.
- **Serving Spoon:** Included for convenience.

Control Panel:

The control panel features a digital display and various one-touch preset buttons for different cooking functions. It also includes buttons for adjusting pressure levels, temperature, and cook time.

Video 1: An overview of the Crock-Pot Express Easy Release Pressure Cooker, demonstrating its features and ease of use. This video highlights the appliance's design and basic functionality.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Wash the removable non-stick cooking pot, lid, sealing gasket, and steaming rack with warm, soapy water. Rinse thoroughly and dry.
3. **Assemble:** Place the clean non-stick cooking pot into the main unit. Ensure the sealing gasket is properly seated around the lid's rim.
4. **Placement:** Position the multi-cooker on a stable, level, heat-resistant surface away from walls or cabinets to allow for proper ventilation.

OPERATING INSTRUCTIONS

General Operation:

1. Add ingredients to the non-stick cooking pot.
2. Secure the lid by aligning it and twisting clockwise until it locks into place. Ensure the steam release dial is set to the 'Seal' position for pressure cooking.
3. Select your desired cooking function from the control panel.
4. Adjust time, pressure, or temperature settings as needed using the '+' and '-' buttons.
5. Press 'Start/Stop' to begin cooking.
6. Once cooking is complete, the unit will beep. Carefully release pressure using the steam release dial or allow for natural pressure release as per your recipe.

Specific Functions:

- **Pressure Cook:** Cooks food up to 70% faster. Use for meats, stews, beans, and more. Adjust pressure (High/Low) and time.
- **Slow Cook:** Ideal for tenderizing ingredients over a longer period. Select desired time and temperature.
- **Brown/Sauté:** Allows you to brown meats or sauté vegetables directly in the pot before pressure cooking or slow cooking.
- **Steam:** Use the included steaming rack to steam vegetables, seafood, or other delicate foods.
- **Rice/Risotto:** Optimized settings for various rice types.
- **Yogurt:** For making homemade yogurt.
- **Keep Warm:** Automatically activates after most cooking cycles to keep food at serving temperature.
- **Manual:** Provides full control over pressure and time for custom recipes.
- **Delay Start:** Allows you to program the cooker to start at a later time.



Figure 3: A user carefully opening the lid of the multi-cooker after a cooking cycle, showcasing a prepared salmon dish.

MAINTENANCE & CLEANING

- **Inner Pot:** The non-stick cooking pot is removable and dishwasher safe for easy cleaning.
- **Lid:** The lid components, including the sealing gasket, can be removed and washed by hand or in the dishwasher.
- **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
- **Sealing Gasket:** Periodically inspect the sealing gasket for wear and tear. Replace if damaged to ensure proper pressure sealing.

TROUBLESHOOTING

- **Steam Leaking from Lid:** Ensure the lid is properly closed and locked. Check that the sealing gasket is correctly seated around the rim of the lid. If the gasket is worn or damaged, it may need to be replaced.
- **Pressure Not Building:** Verify that the steam release dial is set to the 'Seal' position. Check for any obstructions in the steam release valve.
- **Food Undercooked:** Ensure sufficient liquid was added according to the recipe. Verify that the correct cooking time and pressure level were selected.

SPECIFICATIONS



Figure 4: Product dimensions for the Crock-Pot Express Multi-Cooker.

Feature	Detail
Brand	Crock-Pot
Model Number	2100467
Capacity	6 Quarts (5.76 Liters)
Material	Stainless Steel
Color	Stainless Steel
Product Dimensions	13.2"D x 13.4"W x 14.8"H
Wattage	600 watts
Voltage	220 Volts
Control Method	Touch
Operation Mode	Automatic

Dishwasher Safe Parts	Yes (Inner Pot, Lid)
-----------------------	----------------------

WARRANTY & SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Crock-Pot website. Contact the manufacturer directly for assistance with product issues or replacement parts.