

[Manuals.plus](#) /

› [ORACURA](#) /

› ORACURA OC200 Dental PRO Smart Plus Water Flosser Instruction Manual

ORACURA OC200PRO-W

ORACURA OC200 Dental PRO Smart Plus Water Flosser Instruction Manual

Model: OC200PRO-W

1. INTRODUCTION

The ORACURA OC200 Dental PRO Smart Plus Water Flosser is designed to enhance daily oral hygiene by effectively removing plaque and food particles from between teeth and below the gumline. This device is suitable for general oral care and for individuals with dental implants, braces, or bridges. It features multiple water pressure settings and specialized nozzle tips to cater to various dental needs.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- ORACURA OC200 Dental PRO Water Flosser Unit (White)
- Standard Tips (x2)
- Tongue Scrapers (x2)
- Orthodontic Tip (x1)
- Pocket Tip (x1)
- Implant Tip (x1)
- Nasal Tip (x1)
- USB Charger Cable
- Protective Pouch
- Instruction Manual

Package Details Dental PRO



Manual



Orthodontic
Tip



Pocket Tip



Standard
Tip x2



Protective
Pouch



Nasal Tip



Tongue
Scraper x2



Implant Tip



USB Charger
Cable

Image: Contents of the ORACURA OC200 Dental PRO package.

3. PRODUCT FEATURES

- **0.6mm Ultra-Fine Water Jet Spray:** Provides precise cleaning.
- **360° Rotary Nozzle:** Allows for easy access to all areas of the mouth.
- **Sleek Design:** Ergonomic and portable for convenient use.
- **4 Working Modes & 8 Pressure Settings:** Customizable cleaning experience.
- **200ml Water Tank Capacity:** Sufficient volume for a single flossing session.
- **Rechargeable:** Lithium-ion battery provides extended use per charge.

Invest In Your Oral Health

For Enhanced Over-all Health



Improved
**Dental
Hygiene**



Superior
**Gum & Teeth
Protection**



Prevents
Bad Breath



Image: Key features of the ORACURA OC200 Water Flosser.

4. SETUP

1. **Charge the Device:** Before first use, fully charge the water flosser. Connect the USB charging cable to the device and a suitable power adapter. A full charge typically takes 4-5 hours.
2. **Attach Nozzle Tip:** Select the desired nozzle tip and insert it firmly into the opening at the top of the flosser handle until it clicks into place.
3. **Fill Water Tank:** Open the water tank cap. Fill the 200ml tank with lukewarm water. Distilled water is recommended to prevent mineral buildup. Close the cap securely.

Big enough for endless
freshness!

200ml Tank



Image: Filling the 200ml water tank.

5. OPERATING INSTRUCTIONS

1. **Positioning:** Lean over a sink and place the nozzle tip into your mouth, aiming it towards your teeth and gumline.
2. **Power On:** Press the 'On/Off' button to start the device.
3. **Select Mode:** Press the 'Mode' button to cycle through the available cleaning modes (Normal, Soft, Pulse, Custom).
4. **Adjust Pressure:** Within each mode (except Custom), the device has preset pressure levels. For Custom mode, you can adjust the water pressure using the dedicated pressure control buttons (if available, or by cycling through the 8 speeds).
5. **Flossing Technique:** Guide the water jet along the gumline and between each tooth. Pause briefly between teeth to allow water to clean the interdental spaces.
6. **Power Off:** Press the 'On/Off' button to stop the device after use.

6. MODES AND PRESSURE SETTINGS

The ORACURA OC200 offers four distinct cleaning modes and 8 customizable water pressure settings:

- **Normal Mode:** Provides a strong, steady stream for everyday cleaning and plaque removal.
- **Soft Mode:** Delivers a gentle stream, ideal for sensitive gums or first-time users.
- **Pulse Mode:** Offers a pulsating stream to massage gums and improve circulation.
- **Custom Mode:** Allows users to select from 8 water speed settings for a personalized cleaning experience.

MODES



Normal Mode:
Everyday freshness, easy and breezy!



Soft Mode:
Gentle hugs for gums



Pulse Mode:
Unleash a plaque-free smile



Custom Mode:
For tailored dental routine



Image: ORACURA OC200 Water Flosser operating modes.

7. NOZZLE TIPS GUIDE

The device includes 8 specialized nozzle tips for comprehensive oral care:

- **Standard Tip (x2):** For general daily cleaning.
- **Tongue Scraper (x2):** Designed for cleaning the tongue to reduce bad breath.
- **Orthodontic Tip (x1):** Specifically shaped for cleaning around braces and orthodontic appliances.
- **Pocket Tip (x1):** Features a soft rubber tip for gently delivering water into periodontal pockets.
- **Implant Tip (x1):** Designed for cleaning around dental implants, crowns, and bridges.
- **Nasal Tip (x1):** For rinsing nasal cavities (use with saline solution, not plain water).

Dental Pro

8 Nozzles for dental treatment aftercare



Standard Tip
for Everyday Use



Tongue Scraper
for Fresher Breath



Pocket Tip
for periodontal
pockets



Implant Tip
to Clean
Implant Bridges



Orthodontic Tip
for Braces &
Orthodontics



Nasal Tip
to Rinse The
Nasal Cavities



Image: Overview of specialized nozzle tips.

8. CHARGING AND BATTERY

The ORACURA OC200 Water Flosser is equipped with a rapid-charging lithium-ion battery. A full charge takes approximately 4-5 hours and provides power for 10-15 days of regular use. To charge, connect the provided USB cable to the charging port on the device and a compatible USB power source.

No Daily Plug Drama

Charge once, Floss up to 2 weeks



ORACURA®



9. MAINTENANCE AND CLEANING

- **After Each Use:** Remove the nozzle tip and rinse it under clean water. Empty any remaining water from the tank.
- **Cleaning the Unit:** Wipe the exterior of the flosser unit with a soft, damp cloth. Do not immerse the main unit in water.
- **Drying and Storage:** Allow all components to air dry before storing. Store the device with the nozzle tip detached and the tank empty to prevent bacterial growth.
- **Descaling (Monthly):** To prevent mineral buildup, fill the tank with a mixture of 1 part white vinegar to 2 parts water. Run the solution through the flosser until the tank is empty. Rinse by running a full tank of clean water through the device.

10. TROUBLESHOOTING

Problem	Possible Cause	Solution
No water flow	Water tank empty; nozzle clogged; device not charged.	Refill tank; clean nozzle; charge device.
Weak water pressure	Low battery; mineral buildup; incorrect mode.	Charge device; descale unit; select a higher pressure mode.
Device not turning on	Battery depleted.	Charge the device for 4-5 hours.
Leaking	Water tank cap not sealed; nozzle not properly inserted.	Ensure tank cap is tight; re-insert nozzle until it clicks.

11. SPECIFICATIONS

- **Model Number:** OC200PRO-W
- **Product Dimensions:** 9.09 x 3.15 x 6.26 inches (23.09 x 8.00 x 15.90 cm)
- **Item Weight:** 14.46 ounces (410 g)
- **Water Tank Capacity:** 200 ml
- **Power Source:** Battery Powered (1 AA battery included, likely internal rechargeable)
- **Material:** Plastic
- **Color:** White
- **Manufacturer:** ORACURA India

12. WARRANTY AND SUPPORT

The ORACURA OC200 Dental PRO Smart Plus Water Flosser comes with a **2-year warranty** from the date of purchase. For warranty claims, technical support, or any inquiries, please contact ORACURA customer service through their official website or the contact information provided in your purchase documentation.

13. IMPORTANT SAFETY INFORMATION

- Do not direct water under the tongue, into the ear, nose, or other delicate areas.
- Keep out of reach of children.
- Use only as directed in this manual.
- If you have a medical condition or concerns, consult your dentist or physician before use.
- Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.
- Do not use if the product or charging cable is damaged.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07VGRT3DQ>

More documents and user manuals: <https://manuals.plus/>