

Philips Kitchen Appliances HD9741/99

Philips Premium Digital Airfryer HD9741/99 User Manual

Brand: Philips Kitchen Appliances

Model: HD9741/99

[Overview](#) [Setup](#) [Introduction](#) [Safety Information](#) [Product](#)
[Operation](#) [Cleaning](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

The Philips Premium Digital Airfryer HD9741/99 is designed to prepare your favorite foods with little to no added oil, utilizing Fat Removal Technology to extract and capture excess fat. This appliance offers versatile cooking capabilities, including air frying, baking, grilling, roasting, reheating, dehydrating, and toasting. It features a digital interface with preset cooking programs and a QuickControl dial for easy temperature and time adjustments. The Airfryer is engineered for quick operation, requiring no preheat time, and is designed for easy cleaning with dishwasher-safe removable parts.



Image: The Philips Premium Digital Airfryer HD9741/99, a compact kitchen appliance.

2. IMPORTANT SAFETY INFORMATION

Before using the appliance, please read this user manual carefully and save it for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always place the appliance on a stable, horizontal, and level surface.
- Do not place the appliance against a wall or against other appliances. Leave at least 10 cm (4 inches) free space on the back and sides and 10 cm (4 inches) free space above the appliance.
- Do not cover the air inlet and air outlet openings while the appliance is operating.
- Never immerse the housing, which contains electrical components and the heating elements, in water or rinse it under the tap.
- Do not let any water or other liquid enter the appliance to prevent electric shock.
- Always unplug the appliance after use and before cleaning.

- The surfaces may become hot during use. Do not touch hot surfaces. Use handles or knobs.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep the main cord away from hot surfaces.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.

3. PRODUCT OVERVIEW

The Philips Premium Digital Airfryer HD9741/99 features a sleek design with intuitive controls. Key components include the main unit, a removable basket, and a fat reducer plate.

Rapid Air Technology

This technology circulates hot air rapidly throughout the appliance, ensuring even cooking and crispy results with little to no oil.



Rapid Air technology
Optimal airflow cooks food fast

Image: Diagram illustrating Rapid Air Technology for optimal airflow and even cooking.

Fat Removal Technology

The unique Fat Removal Technology extracts and captures excess fat from your food, contributing to healthier meals.



Fat Removal technology
Removes up to 90% fat

Image: Diagram showing Fat Removal Technology capturing excess fat in the base of the Airfryer.

4. INITIAL SETUP

Follow these steps before using your Airfryer for the first time:

1. **Unpack:** Remove all packaging materials and stickers from the appliance.
2. **Clean:** Wash the basket and fat reducer plate in hot water with some dishwashing liquid and a non-abrasive sponge. You can also clean these parts in a dishwasher. Wipe the inside and outside of the appliance with a moist cloth.
3. **Placement:** Place the Airfryer on a stable, heat-resistant surface, ensuring adequate ventilation around the unit.
4. **Power Connection:** Plug the main cord into a grounded wall outlet.

5. OPERATING INSTRUCTIONS

Controls and Digital Interface

The Airfryer features a digital display and a QuickControl dial. The digital interface allows you to select preset programs, adjust temperature, and set cooking time. The QuickControl dial provides precise control over settings.

Cooking Functions

Your Philips Airfryer can perform multiple cooking tasks:

- **Air Fry:** For crispy results with minimal oil.
- **Bake:** Ideal for cakes, muffins, and other baked goods.
- **Grill:** Perfect for meats and vegetables.
- **Roast:** For larger cuts of meat or poultry.
- **Reheat:** To warm up leftovers efficiently.
- **Dehydrate:** For making dried fruits or jerky.
- **Toast:** For bread and other items requiring a toasted finish.

General Cooking Steps

1. **Prepare Food:** Place your ingredients in the Airfryer basket. Do not overfill the basket to ensure even cooking.
2. **Insert Basket:** Slide the basket back into the Airfryer until it clicks into place.
3. **Set Temperature and Time:** Use the digital interface and QuickControl dial to set the desired temperature and cooking time. Refer to recipes or cooking charts for guidance. The Airfryer operates instantly without preheating.
4. **Start Cooking:** Press the start button. The appliance will begin the cooking process.
5. **Shake/Flip (Optional):** For some foods, shaking or flipping halfway through cooking ensures even browning. The Airfryer may have a reminder function for this.
6. **Check Doneness:** Once the timer finishes, carefully pull out the basket and check if the food is cooked to your preference.
7. **Serve:** Remove the food from the basket using non-scratch utensils.



Healthiest way to fry
Cook with little or no oil

Image: The Philips Airfryer on a kitchen counter, illustrating its ability to cook with little to no oil.

Easy to clean



Image: The Philips Airfryer in a kitchen setting, surrounded by a variety of prepared dishes, showcasing its versatility.

6. CLEANING AND MAINTENANCE

Regular cleaning of your Airfryer ensures optimal performance and extends its lifespan. Always unplug the appliance and allow it to cool down completely before cleaning.

- **Basket and Fat Reducer Plate:** These parts are dishwasher-safe. For hand washing, use hot water, dishwashing liquid, and a non-abrasive sponge. Remove any stubborn food residue by soaking the parts in hot water for about 10 minutes.
- **Inside of the Appliance:** Wipe the inside with a hot water and non-abrasive sponge. Do not use metal scouring pads or abrasive cleaning materials.
- **Outside of the Appliance:** Wipe the exterior with a moist cloth.
- **Heating Element:** Clean the heating element with a cleaning brush to remove any food residue.



Image: Removable components of the Philips Airfryer, including the basket and fat reducer, being placed into a dishwasher for easy cleaning.

7. TROUBLESHOOTING

If you encounter issues with your Airfryer, consult the table below for common problems and solutions.

Problem	Possible Cause	Solution
The Airfryer does not work.	The appliance is not plugged in.	Plug the main plug into a grounded wall socket.
Food is not cooked evenly.	Basket is overloaded; food not shaken/flipped.	Reduce food quantity; shake or flip food halfway through cooking.
White smoke comes out of the appliance.	Fat residue from previous use; oil/grease dripping onto heating element.	Clean the basket and fat reducer thoroughly; remove excess oil from food before cooking.
Fresh fries are not crispy.	Incorrect potato type; insufficient oil; too much moisture.	Use starchy potatoes; add a little oil; pat fries dry before cooking.
Appliance emits a burning smell.	Food stuck on heating element.	Unplug and let cool. Clean the heating element carefully.

8. TECHNICAL SPECIFICATIONS

- **Model Name:** Philips Airfryer
- **Item Model Number:** HD9741/99

- **Capacity:** 3 Liters (approximately 2 pounds)
- **Color:** Black
- **Material:** Plastic
- **Wattage:** 1425 Watts
- **Voltage:** 120 Volts
- **Control Method:** Touch
- **Special Feature:** Programmable
- **Min Temperature Setting:** 80 Degrees Celsius
- **Max Temperature Setting:** 350 Degrees Fahrenheit
- **Air Frying Technology:** Fat Removal Technology
- **Is Dishwasher Safe:** Yes (removable parts)
- **Product Dimensions:** 14.4 x 9.6 x 10.8 inches
- **Item Weight:** 15.08 Pounds

9. WARRANTY AND SUPPORT

Philips Kitchen Appliances provides a limited warranty for this product. For detailed warranty information, product registration, or technical support, please refer to the official Philips website or contact Philips customer service. Keep your purchase receipt as proof of purchase for warranty claims.