

Jelly Comb B07VHR72L1

Jelly Comb Wireless Keyboard and Mouse Combo

USER MANUAL

Model: B07VHR72L1

This manual provides essential information for the setup, operation, and maintenance of your Jelly Comb Wireless Keyboard and Mouse Combo.

INTRODUCTION

Thank you for choosing the Jelly Comb 2.4GHz Ultra Thin Full Size Wireless Keyboard Mouse Combo Set. This product is designed to provide a comfortable and efficient wireless experience for your computer, laptop, PC, desktop, or notebook running Windows operating systems (Windows 7, 8, 10). Please read this manual carefully before use to ensure proper operation and longevity of your device.

PACKAGE CONTENTS

Please check the package contents upon unboxing:

- 1 x Jelly Comb Wireless Keyboard
- 1 x Jelly Comb Wireless Mouse
- 1 x USB Nano Receiver (stored inside the mouse battery compartment)
- 1 x User Manual (this document)
- *Note: Batteries are not included and must be purchased separately.*

SETUP GUIDE

Follow these steps to set up your wireless keyboard and mouse combo:

1. Install Batteries:

- For the keyboard: Open the battery compartment on the back of the keyboard and insert 2 x AAA batteries (not included), ensuring correct polarity (+/-).
- For the mouse: Open the battery compartment on the bottom of the mouse and insert 1 x AA battery (not included), ensuring correct polarity (+/-).

2. **Retrieve USB Receiver:** The USB Nano Receiver is typically stored in the battery compartment of the mouse for safe keeping during transport. Carefully remove it.
3. **Connect Receiver:** Plug the USB Nano Receiver into an available USB port on your computer.
4. **Power On Devices:**
 - For the keyboard: Locate the ON/OFF switch, usually on the back or side, and slide it to the "ON" position.
 - For the mouse: Locate the ON/OFF switch on the bottom of the mouse and slide it to the "ON" position.
5. **Automatic Connection:** Your computer should automatically detect and install the necessary drivers. This process may take a few moments. Once complete, your keyboard and mouse are ready for use.

Note on Images: No specific product images were available for embedding in this manual. An image here would typically show the battery compartments of the keyboard and mouse, and the USB receiver being plugged into a computer's USB port.

OPERATING INSTRUCTIONS

Keyboard Usage

The full-size keyboard features a standard QWERTY layout with a dedicated number pad. It includes function keys (F1-F12) and may have multimedia hotkeys (e.g., volume control, play/pause) accessible via the "Fn" key in combination with specific function keys. Refer to the keycap legends for specific multimedia functions.

- **Typing:** Use as a standard keyboard for text input.
- **Number Pad:** Utilize the dedicated number pad for efficient data entry. Ensure "Num Lock" is active if needed.
- **Function Keys:** F1-F12 perform standard system functions.
- **Multimedia Keys:** If present, these keys (often marked with icons) allow quick access to media controls.

Mouse Usage

The wireless mouse provides precise cursor control and comfortable navigation.

- **Left Click:** Primary action, selection.
- **Right Click:** Context menu.
- **Scroll Wheel:** Scroll documents or web pages up and down. Can also be clicked for middle-click functionality.
- **DPI Adjustment (if applicable):** Some models may have a button near the scroll wheel to adjust the mouse's sensitivity (DPI). Pressing this button cycles through different DPI settings.

Note on Videos: No official product videos were available for embedding in this manual. A video here would typically demonstrate the basic usage of the keyboard and mouse, including special functions.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your Jelly Comb Wireless Combo.

- **Cleaning:**
 - Use a soft, dry, lint-free cloth to wipe down the surfaces of the keyboard and mouse.
 - For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
 - Do not use harsh chemicals, solvents, or abrasive materials.

- For keyboard keys, use compressed air to remove dust and debris from underneath the keycaps.

• **Battery Replacement:**

- When the keyboard or mouse performance degrades (e.g., delayed response, erratic cursor movement), it's time to replace the batteries.
- Follow the "Install Batteries" steps in the Setup Guide to replace old batteries with new ones of the correct type (AAA for keyboard, AA for mouse).
- Dispose of old batteries responsibly according to local regulations.

- **Storage:** When not in use for extended periods, turn off both the keyboard and mouse to conserve battery life. Store the USB receiver in the mouse's battery compartment.

TROUBLESHOOTING

If you encounter issues with your wireless combo, please refer to the following common problems and solutions:

Problem	Solution
Keyboard/Mouse not responding.	• Ensure batteries are correctly installed and not depleted. Replace if necessary. • Check if the ON/OFF switch on both devices is in the "ON" position. • Ensure the USB Nano Receiver is securely plugged into a working USB port on your computer. Try a different USB port. • Move the keyboard/mouse closer to the USB receiver to rule out range issues. • Restart your computer.
Erratic cursor movement or delayed typing.	• Replace batteries in the affected device. • Ensure there are no strong electromagnetic interferences nearby (e.g., other wireless devices, large metal objects). • Clean the optical sensor on the bottom of the mouse.
Keyboard keys not working.	• Check if "Num Lock" or "Caps Lock" indicators are behaving as expected. • Ensure no debris is lodged under the keys.
USB receiver not recognized by computer.	• Try plugging the receiver into a different USB port. • Restart your computer. • Check Device Manager (Windows) for any driver issues.

SPECIFICATIONS

Key technical specifications for the Jelly Comb Wireless Keyboard and Mouse Combo:

- **Model:** B07VHR72L1
- **Connectivity Technology:** 2.4GHz Wireless (Radio Frequency)
- **Operating System Compatibility:** Windows 7, 8, 10 (and later versions)
- **Compatible Devices:** Laptop, Personal Computer, Desktop, Notebook
- **Keyboard Layout:** Full Size with Number Pad
- **Mouse Type:** Optical Wireless Mouse
- **Power Source:**

- Keyboard: 2 x AAA Batteries (not included)
- Mouse: 1 x AA Battery (not included)

- **Manufacturer:** Jelly Comb
- **Date First Available:** July 18, 2019

WARRANTY AND SUPPORT

Jelly Comb products are designed for reliability and performance. This product comes with a standard manufacturer's warranty against defects in materials and workmanship.

- **Warranty Period:** Please refer to the warranty card included with your purchase or visit the official Jelly Comb website for specific warranty terms and duration.
- **Technical Support:** For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Jelly Comb customer support.
- **Contact Information:**
 - **Website:** www.jellycomb.com (Note: This is a generic placeholder URL as no specific support URL was provided in the input.)
 - **Email:** Refer to the product packaging or official website for customer service email.

Please retain your proof of purchase for warranty purposes.

© 2024 Jelly Comb. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question