

eKids FR-553v9M

eKids Frozen 2 Bluetooth Karaoke Machine with Light Show (Model FR-553v9M) Instruction Manual

Your guide to setting up and operating your eKids Frozen 2 Bluetooth Karaoke Machine.

1. INTRODUCTION

The eKids Frozen 2 Bluetooth Karaoke Machine with Light Show is designed to provide an interactive music experience. This portable device allows users to stream audio wirelessly via Bluetooth, sing along with the included wired microphone, and expand content through a USB port. It features a multi-colored LED light show and built-in memory for storing music.

2. WHAT'S IN THE BOX

- Bluetooth MP3 Karaoke Machine
- Wired Microphone
- USB Charging Cable

3. PRODUCT FEATURES

- **Bluetooth Connectivity:** Connect to any compatible Bluetooth device to stream audio wirelessly.
- **Wired Microphone:** Includes one real working wired microphone for singing along. An additional mic jack is available for a second microphone (sold separately).
- **USB Audio Player:** Features a USB port to play MP3 files from a USB flash drive (not included).
- **Recording Function:** Record performances while singing along to streaming music. Requires a USB flash drive (not included).
- **Multi-colored LED Light Show:** Integrated light show to enhance the performance experience.
- **Built-in Memory:** Store hours of music directly on the device.
- **Rechargeable Battery:** Portable design with a built-in rechargeable battery for on-the-go use.



Figure 1: Overview of the Karaoke Machine's Controls and Features.



Figure 2: Bluetooth Compatibility with various devices.

4. SETUP

4.1 Powering the Unit

The karaoke machine operates on a built-in rechargeable battery. Ensure the unit is fully charged before first use for optimal performance.

1. Connect the supplied USB charging cable to the USB charging port on the back of the unit.

2. Connect the other end of the USB cable to a standard USB power adapter (not included) or a powered USB port.
3. The charging indicator will illuminate. Allow sufficient time for a full charge.

4.2 Connecting the Microphone

The wired microphone connects to the microphone jack on the unit.

1. Locate the microphone jack on the side or back of the karaoke machine.
2. Insert the microphone plug firmly into the jack.



Figure 3: Karaoke Machine with Microphone Connected.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press and hold the **Power** button located on the control panel to turn the unit on or off.

5.2 Bluetooth Pairing

1. Turn on the karaoke machine. The Bluetooth indicator on the display will flash, indicating it is in pairing

mode.

2. On your Bluetooth-enabled device (smartphone, tablet, etc.), go to the Bluetooth settings and enable Bluetooth.
3. Select "eKids Frozen 2 Karaoke" (or similar name) from the list of available devices.
4. Once paired, the Bluetooth indicator will stop flashing and remain solid. You can now stream audio from your device.

5.3 Playing Music via USB

1. Insert a USB flash drive containing MP3 files into the USB port on the unit.
2. The unit should automatically switch to USB mode and begin playing music. If not, press the **Mode** button to select USB mode.
3. Use the **Play/Pause**, **Next Track**, and **Previous Track** buttons to control playback.

5.4 Microphone Usage

1. Ensure the microphone is securely plugged into the mic jack.
2. Press the **Microphone ON/OFF** button to activate the microphone.
3. Adjust the microphone volume using the dedicated volume controls if available, or the main volume controls.

5.5 Light Show

Press the **Light ON/OFF** button to activate or deactivate the multi-colored LED light show.

5.6 Recording Performances

To record your singing, a USB flash drive (not included) must be inserted into the USB port.

1. Ensure a USB flash drive is inserted.
2. Start playing your desired music (via Bluetooth or USB).
3. Press the **REC** button to begin recording.
4. Sing into the microphone.
5. Press the **REC** button again to stop recording. Your performance will be saved to the USB flash drive.

6. MAINTENANCE

- Clean the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Keep the unit away from direct sunlight, heat sources, and moisture.
- Store the microphone in its designated compartment on the back of the unit when not in use to prevent loss or damage.



Figure 4: Rear view with microphone storage compartment.

7. TROUBLESHOOTING

- **No Power:** Ensure the unit is charged. Connect the USB charging cable and allow it to charge.
- **No Sound:** Check the volume levels on both the karaoke machine and your connected Bluetooth device. Ensure the microphone is turned on if using it.
- **Bluetooth Not Connecting:** Make sure Bluetooth is enabled on your device and the karaoke machine is in pairing mode. Try restarting both devices. Ensure no other devices are currently connected to the karaoke machine.
- **Microphone Not Working:** Verify the microphone is securely plugged into the correct jack and the microphone ON/OFF button is activated.
- **Recording Issues:** Ensure a compatible USB flash drive is inserted and has sufficient free space.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions	8 x 3 x 10 inches
Item Weight	2.64 pounds
Model Number	FR-553v9M
Recommended Age	3 - 35 months
Batteries	3 AA batteries required (included) - <i>Note: Product description also mentions built-in rechargeable battery. Please refer to packaging for exact battery type.</i>

Special Feature	Portable, Rechargeable
Color	Older Version
Manufacturer	KIDdesigns

9. SAFETY INFORMATION

Please read and follow all safety instructions provided with the product packaging. This product is intended for use by children aged 3 and up, under adult supervision.

10. WARRANTY AND SUPPORT




This product comes with a **One Year Limited Warranty**. For warranty claims or technical support, please refer to the contact information provided in your product packaging or visit the eKids official website.




11. PRODUCT VIDEO

Your browser does not support the video tag.

Video 1: An official product video from KIDdesigns, Inc. showcasing the eKids Frozen 2 Bluetooth Karaoke Machine with Light Show, highlighting its features and design.

Related Documents - FR-553v9M

	<p>eKids DG-556 TR-556 Bluetooth MP3 Karaoke with Microphone User Manual</p> <p>Comprehensive user manual for the eKids DG-556 TR-556 Bluetooth MP3 Karaoke machine. Includes setup, operation for USB, MP3, and Bluetooth modes, voice control, troubleshooting, FCC/IC compliance, and warranty information.</p>
	<p>eKids DG-556 Bluetooth MP3 Karaoke with Microphone User Manual</p> <p>Official user manual for the eKids DG-556 Bluetooth MP3 Karaoke system with microphone. Learn how to set up, charge, use USB, MP3, and Bluetooth modes, voice control, troubleshooting, and warranty information.</p>
	<p>eKids 553 Series Bluetooth MP3 Karaoke with 2 Microphones: User Manual</p> <p>User manual for the eKids 553 Series Bluetooth MP3 Karaoke system, covering setup, operation modes (USB, MP3, Bluetooth), microphone usage, charging, troubleshooting, and warranty information.</p>

	<p>eKids 554 Series Bluetooth Karaoke with EZ Link User Manual</p> <p>This manual provides instructions for the eKids 554 Series Bluetooth Karaoke with EZ Link, covering setup, operation, maintenance, and troubleshooting. Learn how to connect via Bluetooth, use USB mode, record audio, and utilize the EZ Link app for music playlists.</p>
	<p>eKids Bluetooth Karaoke Microphone with EZ Link Technology (Model: Di-B24EN.EXv1M) - User Guide</p> <p>User guide for the eKids Bluetooth Karaoke Microphone with EZ Link Technology (Model: Di-B24EN.EXv1M). Learn about setup, charging, Bluetooth connection, EZ Link app usage, controls, warranty, and troubleshooting.</p>
	<p>eKids Bluetooth Karaoke with EZ Link Model 554 Series User Manual</p> <p>Comprehensive user manual for the eKids Bluetooth Karaoke with EZ Link (Model 554 Series). Learn how to set up, use USB and Bluetooth modes, record audio, install the EZ Link app, and troubleshoot common issues. Includes warranty information and FCC compliance details.</p>