

[Manuals.plus](#) /

› [MAO YEYE](#) /

› MAO YEYE Universal Remote Control Instruction Manual for Thomson CS-86M, CS-96, CS-100, CS-140 DVD Players

MAO YEYE CS-86M

MAO YEYE Universal Remote Control Instruction Manual

For Thomson CS-86M, CS-96, CS-100, CS-140 DVD Players

1. INTRODUCTION

This manual provides instructions for the MAO YEYE universal remote control, designed for use with various Thomson DVD player models, including CS-86M, CS-96, CS-100, and CS-140. Please read this manual carefully before using the remote control to ensure proper operation and to maximize your viewing experience.

2. PRODUCT OVERVIEW

The MAO YEYE universal remote control is a replacement or secondary remote for compatible Thomson DVD players. It features a comprehensive set of buttons to control various functions of your DVD player.



Image 1: Front view of the remote control. This image displays the layout of the buttons, including playback controls, volume, mute, and specific function buttons like EQ, Repeat, X-Bass, and Preset/Folder controls.

Key Features:

- **Universal Compatibility:** Designed for Thomson CS-86M, CS-96, CS-100, CS-140 DVD players.
- **Comprehensive Control:** Access to essential functions including playback, volume, menu navigation, and specific audio/video settings.
- **Ergonomic Design:** Comfortable to hold and easy to use.

3. SETUP

Battery Installation:

The remote control requires batteries for operation. Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.

3. Insert two new batteries (typically AAA, not included) into the compartment. Ensure that the positive (+) and negative (-) terminals of the batteries match the polarity indicators inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.



Image 2: Back view of the remote control. This image shows the battery compartment and includes a label indicating to replace with fresh batteries of the same kind and observe polarity.

Caution: Always replace with fresh batteries of the same kind. Observe correct polarity (+/-) when inserting batteries to prevent damage to the remote control.

4. OPERATING INSTRUCTIONS

To operate your DVD player with this remote control, point the remote directly at the infrared sensor on your DVD player. Ensure there are no obstructions between the remote and the player.

Basic Functions:

- **PLAY/PAUSE (▶ /-):** Starts or pauses DVD playback.

- **STOP (■)**: Stops DVD playback.
- **PREVIOUS (◀◀)**: Skips to the beginning of the current track or the previous track.
- **NEXT (▶▶)**: Skips to the next track.
- **VOL + / VOL -**: Increases or decreases the volume.
- **MUTE**: Mutes or unmutes the audio output.

Advanced Functions:

- **EQ**: Adjusts equalizer settings.
- **REPEAT**: Repeats the current track or disc.
- **X-BASS**: Enhances bass output.
- **INTRO**: Plays the first few seconds of each track.
- **DISPLAY**: Toggles on-screen display information.
- **TAPE**: Switches to tape input (if supported by your DVD player).
- **ST-MO**: Stereo/Mono audio selection.
- **RDS**: Radio Data System function (if supported).
- **BAND**: Changes radio band (if supported).
- **TUNER**: Selects tuner function (if supported).
- **REC-II**: Recording function (if supported).
- **APP**: Application button (functionality may vary).
- **CLK+TIMER**: Clock and timer settings.
- **PRESET-FOLDER + / -**: Navigates through presets or folders.
- **SLEEP**: Sets a sleep timer.
- **PROG-SET CLEAR**: Program and clear settings.

Note: The functionality of some buttons may depend on the specific features available on your Thomson DVD player model.

5. MAINTENANCE

Cleaning:

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these may damage the surface or internal components.

Battery Replacement:

Replace the batteries when the remote control's performance degrades or stops working. Always remove depleted batteries promptly to prevent leakage, which can damage the remote control. Dispose of used batteries according to local regulations.

6. TROUBLESHOOTING

- **Remote control is not working:**
 - Ensure batteries are correctly installed with the correct polarity.
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote control and the DVD player's infrared sensor.
 - Ensure you are within the effective range of the DVD player.
- **Certain functions are not responding:**
 - Verify that your specific Thomson DVD player model supports the function you are trying to use. Not all features may be available on all compatible models.

- Refer to your DVD player's original manual for specific feature compatibility.

7. SPECIFICATIONS

Manufacturer	MAO YEYE
Part Number	VS16-GHYR6-SH1844
Units in Package	1
ASIN	B07VJMDVTD
First Available Date	23 July 2019

8. WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available documentation. For warranty details, technical support, or any inquiries regarding the MAO YEYE universal remote control, please contact the manufacturer directly or refer to the retailer where the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B07VJMDVTD>

More documents and user manuals: <https://manuals.plus/>