

ORIA B07VJXK4M9

ORIA Wooden Digital Alarm Clock User Manual

Model: B07VJXK4M9

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your ORIA Wooden Digital Alarm Clock. Please read this manual thoroughly before using the product to ensure proper function and longevity.

2. PRODUCT OVERVIEW

2.1 Key Features

- Multi-functional display: Time, Date, Indoor Temperature (-20°C-50°C), and Humidity (20%-95%).
- Three adjustable alarm settings.
- Switchable 12/24-hour time format and °C/°F temperature units.
- Smart voice-activated display mode (activates display for 15 seconds).
- Three levels of adjustable LED display brightness (L1-L3).
- Elegant wooden design suitable for various indoor environments.

2.2 Package Contents

- ORIA Wooden Digital Alarm Clock
- USB Power Cable (AC adapter not included)
- User Manual

2.3 Product Diagram



Figure 1: Front view of the ORIA Wooden Digital Alarm Clock displaying time, humidity, and temperature.

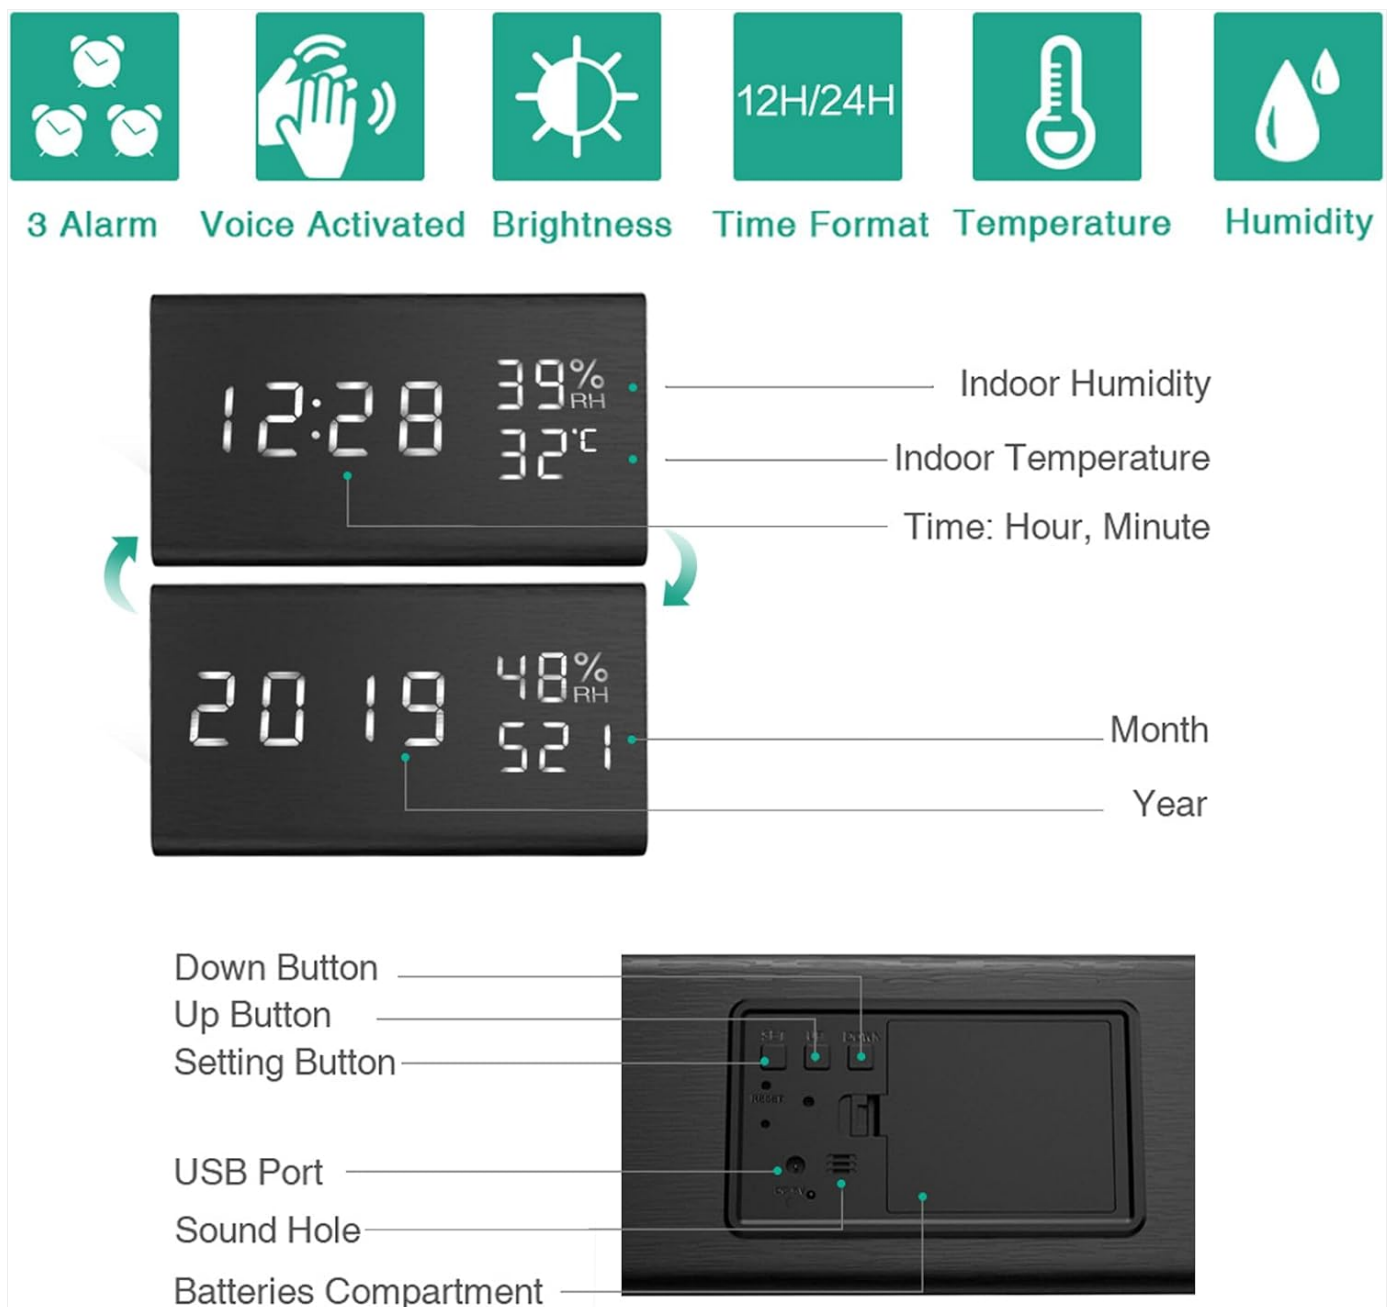


Figure 2: Rear view of the alarm clock showing the Down, Up, and Set buttons, USB port, sound hole, and battery compartment.

SET Button: Used to enter setting modes and confirm selections.

UP Button: Used to adjust values upwards and activate/deactivate voice control.

DOWN Button: Used to adjust values downwards and switch temperature units.

USB Port: For connecting the USB power cable.

Sound Hole: For voice activation and alarm sound output.

Batteries Compartment: Holds 4 AAA batteries for emergency power.

3. SETUP

3.1 Powering the Clock

The ORIA Digital Alarm Clock can be powered in two ways:

1. **USB Power (Recommended for daily use):** Connect the provided USB power cable to the USB port on the back of the clock. Plug the other end into a USB power adapter (not included) or a powered USB port. The clock display will remain on continuously in this mode.
2. **AAA Batteries (Emergency backup):** Insert 4 AAA batteries (not included) into the battery compartment on the back of the

clock, ensuring correct polarity. In battery mode, the display will automatically turn off after 15 seconds to conserve power. It can be activated by sound or touch.



Figure 3: Illustration of the USB power cable and the battery compartment for 4 AAA batteries.

3.2 Initial Settings

After powering on, the clock will typically display the time. You may need to set the correct time, date, and other preferences.

4. OPERATING INSTRUCTIONS

4.1 Setting Time and Date

1. Press the **SET** button to enter the time setting mode. The display will show "12H" or "24H". Use **UP** or **DOWN** to select your preferred time format (12-hour or 24-hour). Press **SET** to confirm.
2. The hour digits will flash. Use **UP** or **DOWN** to adjust the hour. Press **SET** to confirm.
3. The minute digits will flash. Use **UP** or **DOWN** to adjust the minute. Press **SET** to confirm.
4. The year digits will flash. Use **UP** or **DOWN** to adjust the year. Press **SET** to confirm.

5. The month digits will flash. Use **UP** or **DOWN** to adjust the month. Press **SET** to confirm.
6. The date digits will flash. Use **UP** or **DOWN** to adjust the date. Press **SET** to confirm.
7. The clock will return to normal time display after 10 seconds of inactivity in any setting mode.

4.2 Setting Alarms

The clock supports up to three independent alarms (A1, A2, A3).

1. From the normal time display, press the **SET** button repeatedly until "A1" appears.
2. Press and hold the **SET** button for 3 seconds. The hour digits for A1 will flash. Use **UP** or **DOWN** to set the alarm hour. Press **SET** to confirm.
3. The minute digits for A1 will flash. Use **UP** or **DOWN** to set the alarm minute. Press **SET** to confirm.
4. The display will show "ON:E" (alarm rings every day) or "--:E" (alarm rings on weekdays). Use **UP** or **DOWN** to select the alarm mode. Press **SET** to confirm and exit A1 setting.
5. Repeat steps 1-4 for A2 and A3 if desired.
6. To activate or deactivate an alarm, press the **SET** button until the desired alarm (A1, A2, or A3) is displayed, then press **UP** or **DOWN** to toggle it ON or OFF. An alarm icon will appear on the display when an alarm is active.
7. When an alarm rings, press any button to snooze for 5 minutes. To turn off the alarm completely, press and hold the **SET** button.

EXQUISITE DESIGN

A natural decoration: MDF Texture & Elegant appearance, matches modern design.



Figure 4: The clock displaying the three alarm settings (A1, A2, A3) with time, humidity, and temperature.

4.3 Adjusting Brightness

The clock has three brightness levels: L1 (darkest), L2 (medium), and L3 (brightest).

1. Press and hold the **UP** button for 3 seconds. The display will show "L1".
2. Use the **UP** or **DOWN** button to cycle through L1, L2, and L3.
3. The brightness will adjust immediately. The clock will return to normal time display after 5 seconds of inactivity.

VOICE ACTIVATED

Wake up the clock by sound or touch



Figure 5: Examples of the three brightness levels: High (Day), Medium (Nightall), and Low (Night).

4.4 Voice Control Mode

In battery power mode, the display automatically turns off after 15 seconds to save energy. Voice control allows you to activate the display by making a sound or touching the clock.

1. To activate/deactivate voice control, press the **UP** button briefly. "ON:SD" indicates voice control is active, and "--:SD" indicates it is inactive.
2. When voice control is active, a sound (e.g., clapping hands, tapping the table) or touching the clock will illuminate the display for 15 seconds.

3 GROUPS OF ALARM

Meet your different time needs & no worry to oversleep



Figure 6: The clock can be activated by sound (clapping) or touch.

4.5 Display Modes

The clock offers two display modes:

- **DP-1 (Alternating Display):** Press the **SET** button until "DP-1" is shown. In this mode, the display will alternate between showing Time, Temperature, and Humidity, and then Date, Temperature, and Humidity.
- **DP-2 (Permanent Display):** Press the **SET** button until "DP-2" is shown. In this mode, the display will continuously show Time, Temperature, and Humidity.

5. MAINTENANCE

- Clean the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the clock to extreme temperatures, direct sunlight, or high humidity.
- If using batteries, replace all 4 AAA batteries simultaneously when the display becomes dim or unresponsive. Remove batteries if the clock will not be used for an extended period.

6. TROUBLESHOOTING

Q: How to adjust brightness?

A: Press and hold the **UP** button for 3 seconds. "L1" will appear. Use the **UP** or **DOWN** button to adjust the brightness level (L1-L3). L3 is the brightest, L1 is the darkest.

Q: Will this alarm clock stay on?

A: The alarm clock display stays on continuously only when powered via the USB cable. When using AAA batteries, the display will turn off after 15 seconds and can be activated by voice or touch.

Q: Does the digital alarm clock include an AC adapter?

A: No, the package only includes a USB cable. An AC adapter is not included and must be supplied by the user.

Q: The clock is not responding or displaying correctly.

A: Ensure the power source is stable. If using batteries, check if they are depleted or inserted correctly. If using USB power, try a different USB port or adapter. You may also try resetting the clock by pressing the reset button (if available, usually a small pinhole) or temporarily removing all power sources.

7. SPECIFICATIONS

Feature	Detail
Brand	ORIA
Model	B07VJXK4M9
Display Type	Digital LED
Material	MDF (Medium-density fibreboard)
Item Weight	200 Grams
Power Source	USB Cable (DC 5V) or 4 x AAA Batteries (not included)
Special Features	Alarm, Temperature Display, Humidity Display, Voice Control, Adjustable Brightness
Temperature Range	-20°C to 50°C
Humidity Range	20% to 95%

8. WARRANTY AND SUPPORT

ORIA products are designed for reliability and performance. This product comes with the following support:

- **24/7 Customer Service:** For any inquiries or assistance, please contact ORIA customer service.
- **12-Month Replacement Warranty:** This product is covered by a 12-month replacement warranty from the date of purchase against manufacturing defects.
- **60-Day Money Back Guarantee:** If you are not satisfied with your purchase, you may be eligible for a refund within 60 days of purchase.

For further assistance, please visit the official ORIA store or contact customer support through your purchase platform.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question