

## Epson EP-882AW

# Epson EP-882AW Inkjet Multifunction Printer User Manual

Model: EP-882AW

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Epson EP-882AW Inkjet Multifunction Printer. It covers setup, operation, maintenance, and troubleshooting. Please read this manual thoroughly before using the product and keep it for future reference.

The Epson EP-882AW is an A4 color multifunction printer from the Colorio series. It features a compact design and utilizes 6-color dye ink for high-quality photo and document printing. Key functionalities include copying, scanning, and printing.

## 2. SAFETY INFORMATION

Always follow these basic safety precautions to reduce the risk of fire, electric shock, or injury:

- Do not attempt to service the product yourself. Refer all servicing to qualified service personnel.
- Use only the power cord supplied with the product.
- Do not place the product in a location where it may be exposed to water or moisture.
- Ensure the product is placed on a stable, flat surface.
- Keep the product away from heat sources and direct sunlight.

## 3. PACKAGE CONTENTS

Verify that all items are included in the box:

- Epson EP-882AW Printer Unit
- Setup Ink Cartridges (6 colors)
- Software Disc
- User Guide (this manual)
- Disc Tray

- Power Cord
- Warranty Card

## 4. SETUP

### 4.1 Unpacking and Placement

Carefully remove the printer from its packaging. Remove all protective tapes and materials. Place the printer on a flat, stable surface with adequate space around it for ventilation and operation.



Image: Front view of the Epson EP-882AW printer, showcasing its compact white design and central touch panel.

### 4.2 Power Connection

Connect the supplied power cord to the printer's power input and then to a wall outlet. Press the power button to turn on the printer.

### 4.3 Ink Cartridge Installation

Follow the on-screen instructions on the printer's 4.3-inch touch panel to install the setup ink cartridges. Ensure each cartridge is inserted into its correct color slot until it clicks into place.

### 4.4 Software Installation

Insert the software disc into your computer's CD/DVD drive and follow the on-screen instructions to install the printer drivers and utility software. Alternatively, download the latest software from the official Epson support website.

### 4.5 Network Connection

The EP-882AW supports wired LAN, wireless LAN (Wi-Fi), and USB connections.

#### 4.5.1 Wi-Fi Connection

On the printer's touch panel, navigate to the Wi-Fi setup menu. Select your network and enter the password. The printer also supports easy connection via QR code for smartphones.



Image: A smartphone screen displaying a QR code for quick Wi-Fi connection to the Epson printer, simplifying the setup process. Example Wi-Fi connection details (for reference, actual details will vary):[WIFI:S:DIRECT-FEDCBA98;T:WPA;P:12345678;;](#)

#### 4.5.2 USB Connection

Connect the printer to your computer using a USB cable (not included). The necessary drivers will be installed automatically or can be installed manually using the software disc.

## 5. OPERATING INSTRUCTIONS

The EP-882AW features a 4.3-inch wide touch panel for intuitive operation.



どんな空間にもなじむ  
コンパクトデザイン

Image: The Epson EP-882AW printer positioned on a wooden shelf, demonstrating its compact and space-saving design.

## 5.1 Loading Paper

The printer features a front two-stage paper feed, allowing two types of frequently used paper (e.g., plain paper and photo paper) to be loaded simultaneously. There is also a rear single-sheet manual feed for specialty media.

## 5.2 Printing Documents and Photos

From your computer or smartphone, select the print function in your application. Choose the Epson EP-882AW as your printer, adjust print settings (paper size, type, quality), and initiate printing. The printer supports automatic duplex printing for two-sided documents.



コピー・スキャン・プリントが可能

※商品画像はEP-882AWです



置き場所に困らない前面給紙

※商品画像はEP-882AWです



レーベルプリント対応

※商品画像はEP-882AWです



SDメモリーカード・USBメモリー  
からもダイレクトにプリント

※商品画像はEP-882AWです

Image: A composite image illustrating the Epson EP-882AW's capabilities: printing a document, utilizing the front paper feed, printing on a disc label, and direct printing from an SD card or USB memory.

### 5.3 Copying

Place the document face down on the scanner glass. On the printer's touch panel, select the 'Copy' function. Adjust settings such as number of copies, color/mono, and paper size, then press 'Start'.

### 5.4 Scanning

Place the document face down on the scanner glass. On the printer's touch panel, select the 'Scan' function. Choose your scan destination (e.g., computer, cloud service, memory card) and settings, then press 'Start'.

### 5.5 Direct Printing from Memory Card/USB

Insert an SD memory card or USB memory device into the designated slot on the printer. Use the touch panel to browse and select photos or documents for direct printing.





Image: A close-up view of the Epson EP-882AW's side panel, showing the slots for an SD memory card and a USB memory stick, enabling direct printing without a computer.

## 5.6 Disc Label Printing

Attach the disc tray to the printer as instructed. Use the software provided or the printer's touch panel to design and print directly onto compatible CDs/DVDs.



Image: The Epson EP-882AW printer actively printing a label onto a CD/DVD using its dedicated disc tray, highlighting its disc label printing capability.

## 5.7 Using Epson Smart Panel App

Download the Epson Smart Panel app on your smartphone or tablet. This app allows you to control the printer remotely, print, scan, and check printer status.

# リモコンのように操作できるアプリ



Epson  
Smart Panel



Image: A person using the Epson Smart Panel app on a smartphone to control the Epson EP-882AW printer, which is visible in the background on a shelf.

## 6. MAINTENANCE

### 6.1 Cleaning the Printer

Regularly wipe the exterior of the printer with a soft, damp cloth. Clean the scanner glass with a lint-free cloth and glass cleaner. Avoid using abrasive cleaners.

### 6.2 Replacing Ink Cartridges

When an ink cartridge is low or empty, a message will appear on the touch panel. Follow the on-screen instructions to replace the individual ink cartridge. Use genuine Epson ink cartridges for optimal performance.

### 6.3 Replacing the Maintenance Box

The EP-882AW features a replaceable maintenance box that collects waste ink. When the maintenance box is full, a message will appear. Refer to the printer's on-screen guide or the full user manual for instructions on how to replace it.

## 7. TROUBLESHOOTING

This section addresses common issues you might encounter.

### 7.1 Printer Not Responding

- Check if the printer is powered on.
- Verify all cables (power, USB, LAN) are securely connected.
- Ensure the printer is connected to the correct Wi-Fi network.
- Restart both the printer and your computer/device.

### 7.2 Poor Print Quality

- Check ink levels and replace any low or empty cartridges.
- Perform a nozzle check and head cleaning using the printer's utility software or touch panel.
- Ensure you are using appropriate paper settings for your print job.

### 7.3 Paper Jams

- Turn off the printer and carefully remove any jammed paper from the paper trays or output slot.
- Ensure paper is loaded correctly and not over the maximum fill line.
- Use paper that meets the printer's specifications.

## 8. SPECIFICATIONS

Feature	Specification
Model Name	EP-882AW
Functions	Print, Copy, Scan
Print Technology	Inkjet (6-color dye ink)
Maximum Print Resolution (Color)	4800 x 1200 dpi
Maximum Print Resolution (Monochrome)	600 dpi
Maximum Paper Size	A4 (8.5 x 11 inches)
Duplex Printing	Automatic
Paper Feed	Front 2-stage, Rear 1-sheet manual
Scanner Type	Photo



Operation Method	4.3-inch Wide Touch Panel
Connectivity	Wired LAN, Wireless LAN (Wi-Fi), USB
Compatible Devices	Smartphone, Computer
Product Dimensions (W x D x H)	34.9 x 34 x 14.2 cm
Item Weight	8.36 kg
Color	White

## 9. WARRANTY AND SUPPORT

### 9.1 Warranty Information

Your Epson EP-882AW printer comes with a limited warranty. Please refer to the warranty card included in your package for specific terms, conditions, and duration of coverage. Keep your purchase receipt as proof of purchase for warranty claims.


### 9.2 Customer Support

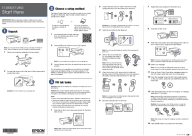




For technical assistance, troubleshooting beyond this manual, or warranty service, please contact Epson customer support. Visit the official Epson website for contact information, FAQs, and driver downloads.

Official Epson Support Website: [www.epson.com/support](http://www.epson.com/support)

© 2023 Epson Corporation. All rights reserved.

### Related Documents - EP-882AW

	<p><a href="#">Epson EcoTank L15150 A3 Color Multifunction Printer</a></p> <p>Detailed specifications and features of the Epson EcoTank L15150, an A3 color multifunction printer with low-cost printing, PrecisionCore Heat-Free Technology, and versatile paper handling. Includes information on printing, copying, scanning, faxing, connectivity, and paper management.</p>
---	--

	<p><a href="#">Epson ET-2800/ET-2803: Start Here Quick Setup Guide</a></p> <p>A comprehensive guide to setting up your Epson ET-2800 or ET-2803 printer, covering unpacking, ink tank filling, paper loading, software installation, and mobile printing options.</p>
	<p><a href="#">Epson WF-3720/WF-4720/WF-4730/WF-4740 Series Quick Guide</a></p> <p>A quick guide for Epson WF-3720, WF-4720, WF-4730, and WF-4740 series printers, covering basic information, setup, troubleshooting, and support resources.</p>
	<p><a href="#">EPSON EP-702A</a></p> <p>EPSON Colorio EP-702A</p>
	<p><a href="#">Epson ET-5850/L6570 Series User's Guide: Printing, Scanning, Faxing, and Maintenance</a></p> <p>Official user's guide for Epson ET-5850 and L6570 series printers. Learn about setup, printing, copying, scanning, faxing, maintenance, troubleshooting, and network connectivity. Visit Epson support for more.</p>
	<p><a href="#">Epson XP-2150 Series: Quick Start Guide and Setup Instructions</a></p> <p>Comprehensive guide for setting up and using the Epson XP-2150 Series printer, including unpacking, installation, control panel functions, ink cartridge replacement, and basic troubleshooting.</p>