

DEZIN 200A-CA

DEZIN Electric Kettle Model 200A-CA Instruction Manual

Your guide to safe and efficient use of your DEZIN 2L Stainless Steel Electric Kettle.

Setup

Operation

Maintenance

Troubleshooting

Specifications


Warranty & Support

1. SETUP AND FIRST USE

Before using your DEZIN Electric Kettle for the first time, please follow these steps to ensure proper function and cleanliness.

1. **Unpack:** Carefully remove all packaging materials from the kettle and its base.
2. **Clean:** Wipe the exterior of the kettle with a damp cloth. Wash the interior of the kettle with warm, soapy water, then rinse thoroughly.
3. **Initial Boil:** Fill the kettle with water to the maximum fill line (2L). Boil the water, then discard it. Repeat this process 2-3 times to remove any manufacturing residues.
4. **Position:** Place the power base on a flat, stable, heat-resistant surface. Ensure the cord is not dangling where it can be pulled or tripped over. The base features a storable cord wrap for neat organization.

Storable Cord

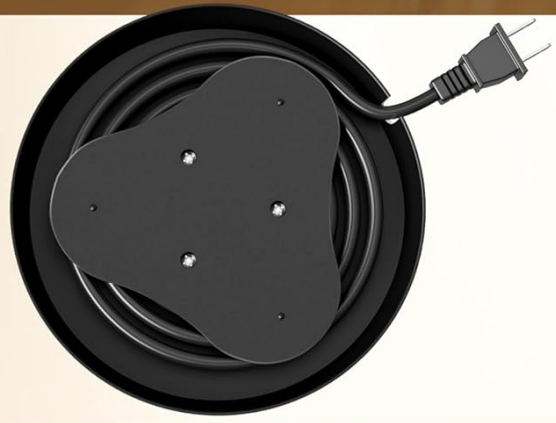

Ergonomic Cool Touch Handle



LED Indicator



Image: The kettle's base features a storable cord for tidy counter placement, and the handle is designed for an ergonomic, cool touch.

2. OPERATING INSTRUCTIONS

Your DEZIN Electric Kettle is designed for simple and safe operation.

1. **Fill the Kettle:** Open the lid and fill the kettle with the desired amount of water. Do not fill below the minimum (0.5L) or above the maximum (2L) fill lines.
2. **Place on Base:** Position the kettle securely onto its power base. The kettle is cordless when lifted from the base, allowing for easy pouring.
3. **Power On:** Press the one-touch power button located at the base of the handle. The LED indicator light will illuminate, signaling that the kettle is heating.
4. **Boiling Process:** The 1000W heating element will rapidly boil the water. The kettle features automatic shut-off and boil-dry protection for safety. Once the water reaches a rolling boil, the kettle will automatically turn off, and the LED indicator light will extinguish.

5. **Pour:** Carefully lift the kettle from its base and pour the hot water. The ergonomic cool-touch handle ensures safe handling.



Image: The 2L capacity of the DEZIN Electric Kettle is suitable for preparing up to 9 cups of hot beverages, ideal for family use.



Image: The kettle is fast, convenient, and multi-purpose, suitable for preparing coffee, hot tea, oat milk, and instant noodles.

Your browser does not support the video tag.

Video: A product overview demonstrating the DEZIN Electric Kettle's features and ease of use.

3. CARE AND MAINTENANCE

Proper care ensures the longevity and performance of your kettle.

- **Cleaning:** Always unplug the kettle and allow it to cool completely before cleaning. Wipe the exterior with a soft, damp cloth. Do not immerse the kettle or its base in water. The interior should be hand washed.
- **Descaling:** Over time, mineral deposits (limescale) may accumulate inside the kettle, especially in hard water areas. This is normal and not rust. To descale:
 - a. Fill the kettle with water and add a descaling agent like baking soda or lemon juice.
 - b. Boil the mixture and let it stand for 20-30 minutes.

c. Discard the mixture, then wipe the interior and rinse thoroughly with fresh water.

- **Storage:** When not in use, store the kettle in a dry place. You can wrap the power cord around the base for compact storage.



Image: Illustration of limescale accumulation inside the kettle after first few uses, regular use, and without cleaning.



Image: Step-by-step guide for descaling: Fill with water and baking soda/lemon juice, boil and let stand, wipe and rinse.

4. TROUBLESHOOTING

If you encounter any issues with your kettle, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Kettle does not heat up.	Not plugged in; power switch not engaged; boil-dry protection activated.	Ensure the kettle is properly plugged into a working outlet and the power switch is pressed down. If boil-dry protection activated, allow kettle to cool before refilling.

Problem	Possible Cause	Solution
Water has an unusual taste.	New appliance odor; mineral deposits.	Perform initial boil cycles as described in 'Setup'. Descale the kettle if mineral deposits are present.
Kettle leaks.	Overfilled; lid not properly closed.	Do not fill above the maximum line. Ensure the lid is securely closed before boiling.

5. PRODUCT SPECIFICATIONS

- **Model:** 200A-CA
- **Brand:** DEZIN
- **Capacity:** 2 Liters
- **Power:** 1000W
- **Material:** Food-Grade Stainless Steel Interior, Brushed Stainless Steel Exterior
- **Dimensions:** 9.25"L x 7.72"W x 7.62"H
- **Special Features:** Automatic Shut-Off, Boil Dry Protection, LED Indicator, Storable Cord, Ergonomic Cool Touch Handle
- **Care Instructions:** Hand wash



Safe and Odorless

No Plastic in Contact with Water

**Stainless Steel
Inner Lid**



**Stainless Steel
Spout**



**Stainless Steel
Interior**



Image: The kettle features a safe and odorless design with a stainless steel inner lid, spout, and interior, ensuring no plastic contact with water.



Image: The 1000W heating element ensures fast boiling, typically within 5 minutes.

Double Safety



Auto Shut-off



Boil Dry Protection



Image: Double safety features include automatic shut-off and boil-dry protection for enhanced user safety.

6. WARRANTY AND SUPPORT

DEZIN is committed to providing high-quality products. This electric kettle is manufactured under strict quality standards.

- **Warranty:** Please refer to your purchase documentation for specific warranty details.
- **Customer Service:** For any problems or inquiries, please contact our customer service team. We are dedicated to resolving your concerns promptly.

