

TopWit T630

TOPWIT T630 2.0L Electric Glass Kettle Instruction Manual

Model: T630 | Brand: TopWit

INTRODUCTION

Thank you for choosing the TOPWIT T630 2.0L Electric Glass Kettle. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read these instructions thoroughly before first use and retain them for future reference.

IMPORTANT SAFETY INFORMATION

To prevent personal injury or property damage, always follow basic safety precautions when using electrical appliances. This includes, but is not limited to:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or power base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- Avoid sudden temperature changes, such as adding cold water to a hot kettle.
- Ensure the lid is securely closed before operating.

PRODUCT COMPONENTS

The TOPWIT T630 Electric Glass Kettle consists of the following main parts:

- **Glass Kettle Body:** Made of food-grade borosilicate glass, resistant to thermal shock. Features clear water level markings (MIN, 0.6L, 1.2L, 2.0L MAX).
- **Handle:** Ergonomically designed, stay-cool handle with an integrated power switch.
- **Lid:** 100% stainless steel inner lid, designed for easy opening and closing.
- **Spout:** Glass V-shaped spout for effortless pouring.
- **Power Base:** 360° swivel base with cord storage, providing cordless convenience for the kettle body.
- **LED Indicator Lights:** Blue LED lights illuminate during heating.



Image: The TOPWIT T630 Electric Glass Kettle, highlighting its transparent glass body, stainless steel base, black handle with control switch, and lid. Water level markings are visible on the side.

Ergonomic Handle

Comfortable to Hold



Smooth Spout

Pours Effortlessly



360° Rotating Base



Image: Detailed view of the kettle's ergonomic handle, smooth pouring spout, and 360° rotating power base.

SETUP

1. **Unpack:** Carefully remove all packaging materials and inspect the kettle for any damage.
2. **Initial Cleaning:** Before first use, fill the kettle with clean water to the MAX line. Boil the water, then discard it. Repeat this process 2-3 times to remove any manufacturing residues.
3. **Place Power Base:** Position the power base on a dry, flat, and stable surface away from the edge of the counter.
4. **Connect Power:** Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

1. **Fill Kettle:** Open the lid and fill the kettle with the desired amount of fresh, cold water. Ensure the water level is between the MIN (0.6L) and MAX (2.0L) markings. Do not overfill or underfill.
2. **Close Lid:** Securely close the lid.
3. **Place on Base:** Place the kettle firmly onto the power base.

4. **Start Boiling:** Press the power switch located on the handle downwards. The blue LED indicator lights will illuminate, indicating that the kettle is heating.
5. **Auto Shut-Off:** The kettle will automatically shut off once the water reaches a rolling boil. The blue LED lights will turn off.
6. **Pour Water:** Carefully lift the kettle from its base and pour the hot water. The stay-cool handle ensures safe handling.

Calming **Blue LED** Light

Know the Boiling Status in Real Time



Image: The TOPWIT T630 Electric Glass Kettle with water boiling inside, illuminated by blue LED lights around the base, indicating active heating.

CLEANING AND MAINTENANCE

Regular cleaning and maintenance will prolong the life of your kettle.

1. **Disconnect Power:** Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
2. **Clean Exterior:** Wipe the exterior of the kettle and the power base with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
3. **Clean Interior:** The large opening design allows for easy cleaning of the interior. Rinse the inside of the

kettle with water.

- Descaling:** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. To descale:
 - Fill the kettle with a mixture of 1 part white vinegar or lemon juice and 2 parts water.
 - Boil the mixture, then let it sit for 20-30 minutes.
 - Discard the mixture and rinse the kettle thoroughly with fresh water several times.
 - For stubborn deposits, gently scrub the interior with a soft sponge.
- Do Not Immerse:** Never immerse the kettle body or the power base in water or any other liquid.



Image: A visual guide demonstrating the three steps for easy cleaning: filling with a descaling solution, boiling and soaking, and finally wiping the interior.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not heat.	Not plugged in; power switch not activated; kettle not properly seated on base.	Ensure plug is securely in outlet; press power switch down; ensure kettle is correctly placed on the power base.
Kettle shuts off before boiling.	Excessive limescale buildup.	Descale the kettle as per the 'Cleaning and Maintenance' section.
Water has an unusual taste.	New appliance odor; mineral deposits.	Perform initial cleaning steps again; descale the kettle.
Steam escapes from around the lid.	Lid not properly closed.	Ensure the lid is securely closed before boiling.

SPECIFICATIONS

- **Brand:** TopWit
- **Model Number:** T630

- **Capacity:** 2.0 Liters (2.1 Quarts)
- **Material:** Borosilicate Glass, 304 Stainless Steel (lid & bottom)
- **Color:** Black
- **Voltage:** 110 Volts (AC)
- **Wattage:** 1000 watts
- **Special Features:** Auto Shut-Off, Boil Dry Protection, LED Indicator Lights, 360° Swivel Base, BPA-Free
- **Item Dimensions (L x W x H):** 8" x 6" x 8.95"
- **Item Weight:** 2.6 Pounds

Family-Sized Large Capacity

Meets Everyone's Drinking needs



Image: The TOPWIT T630 Electric Glass Kettle displaying its 2.0L MAX, 1.2L, and 0.6L MIN capacity markings, along with overall dimensions of 9.45 inches height and 8.66 inches width.

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided with your product packaging or visit the official TopWit website. Keep your purchase receipt as proof of purchase.

