

manuals.plus /

› [Zentality](#) /

› [Zentality C-710 10-inch Dual SIM Tablet User Manual](#)

Zentality C-710

Zentality C-710 10-inch Dual SIM Tablet User Manual

Model: C-710

1. INTRODUCTION

This manual provides essential information for the proper use and maintenance of your Zentality C-710 10-inch Dual SIM Tablet. Please read this guide thoroughly before operating the device to ensure optimal performance and longevity. Keep this manual for future reference.

2. PRODUCT OVERVIEW

The Zentality C-710 is a 10-inch Android tablet designed for communication and multimedia. It features dual SIM card support for cellular connectivity, a Quad-Core processor, 1GB RAM, and 16GB of internal storage. The device includes front and rear cameras, Bluetooth, and a vibrant IPS LCD display.

2.1 Device Components

Familiarize yourself with the tablet's physical features and controls.



Image 1: Front and back view of the Zentality C-710 Tablet, showing the screen, cameras, and rear casing.



Image 2: Front view of the Zentality C-710 Tablet with the screen displaying an image, highlighting the display area.



Image 3: Side view of the Zentality C-710 Tablet, illustrating the placement of physical buttons and ports.

3. SETUP

3.1 Charging the Battery

Before first use, fully charge the tablet's battery. Connect the provided charger to the tablet's charging port and plug it into a power outlet. The battery indicator on the screen will show charging status. A full charge typically takes several hours.

3.2 Inserting SIM Cards

The Zentality C-710 supports dual SIM cards for cellular network access. Locate the SIM card slot(s) on the side or back of the tablet. Carefully insert your standard or micro SIM cards into the designated slots, ensuring they are correctly oriented as indicated by the diagram near the slot. Close the tray securely.

3.3 Inserting a MicroSD Card

To expand storage, insert a microSD card (up to 32GB, not included) into the dedicated slot. Ensure the card is oriented correctly before gently pushing it in until it clicks into place.

3.4 Powering On/Off

To power on, press and hold the Power button until the Zentality logo appears. To power off, press and hold the Power button until the power options menu appears, then select 'Power off'.

3.5 Initial Setup

Upon first power-on, follow the on-screen prompts to select your language, connect to a Wi-Fi network, set up your Google account, and configure other basic settings.

4. OPERATING

4.1 Touchscreen Gestures

Navigate your tablet using standard Android touchscreen gestures:

- **Tap:** Select an item or open an application.
- **Tap and Hold:** Access contextual menus or move icons.
- **Swipe:** Scroll through screens or lists.
- **Pinch:** Zoom in or out on images and web pages.

4.2 Connecting to Wi-Fi

Go to **Settings > Network & internet > Wi-Fi**. Turn Wi-Fi on, then select your desired network from the list and enter the password if required.

4.3 Connecting to Bluetooth Devices

Go to **Settings > Connected devices > Bluetooth**. Turn Bluetooth on, then select 'Pair new device' and choose your device from the list to connect.

4.4 Making Calls (3G)

With an active SIM card, you can make and receive calls. Open the 'Phone' application, dial the number, and press the call button.

4.5 Using the Camera

Open the 'Camera' application. Tap the shutter button to take photos. Switch between front and rear cameras using the camera toggle icon. Adjust settings like flash and mode as needed.

4.6 Managing Applications

Download new applications from the Google Play Store. To uninstall an app, tap and hold its icon on the home screen or app drawer, then drag it to the 'Uninstall' option.

5. MAINTENANCE

5.1 Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials, which can damage the display or finish. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics.

5.2 Battery Care

To prolong battery life, avoid extreme temperatures. Do not leave the tablet charging for extended periods after it's full. If storing the tablet for a long time, ensure the battery is charged to about 50%.

5.3 Software Updates

Regularly check for and install system updates to ensure your tablet has the latest features, security patches, and performance improvements. Go to **Settings > System > System update**

6. TROUBLESHOOTING

6.1 Tablet Not Turning On

Ensure the battery is sufficiently charged. Connect the charger and wait a few minutes before attempting to power on again. If the issue persists, try a different charger or contact support.

6.2 Wi-Fi Connection Issues

Check if Wi-Fi is enabled in settings. Restart your tablet and your Wi-Fi router. Ensure you are entering the correct password. If the problem continues, try forgetting the network and reconnecting.

6.3 Slow Performance

Close unnecessary background applications. Clear cache data from apps in **Settings > Apps & notifications > [App Name] > Storage & cache > Clear cache**. Consider uninstalling unused apps or performing a factory reset as a last resort (back up your data first).

6.4 App Crashes

Ensure the app is updated to its latest version. Clear the app's cache and data (this will reset the app). If the issue persists, uninstall and reinstall the app.

7. SPECIFICATIONS

Feature	Specification
Brand	Zentality
Model Name	C-710
Display Screen Size	10 inches
Display Type	IPS LCD
Operating System	Android
Processor	Quad-Core
Installed RAM Size	1 GB
Memory Storage Capacity	16 GB
Cellular Network Technology	3G
Number of SIM Cards	Dual SIM
Connectivity Type	Cellular, Bluetooth
Rear Camera Resolution	5 Megapixels
Front Webcam Resolution	1.3 Megapixels
Battery Capacity	4000 mAh

Color	Black
Item Weight	940 grams
Package Dimensions	27.4 x 27 x 3.8 cm
Date First Available	July 23, 2019

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official Zentality website. Keep your proof of purchase for warranty claims.