

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [SKMEI](#) /
- › [SKMEI 1455 Kid's Digital Watch User Manual](#)

SKMEI 1455

SKMEI Kid's Digital Watch Model 1455 Instruction Manual

Your comprehensive guide to operating and maintaining your SKMEI digital wristwatch.

INTRODUCTION

The SKMEI 1455 Kid's Watch is a durable and feature-rich digital timepiece designed for children. It features a clear LCD display and includes essential functions such as daily alarm, hourly chime, stopwatch, and a calendar displaying date, week, and month. The watch supports both 12-hour and 24-hour (military time) formats and is equipped with an electronic LED dial and LED backlight for visibility in low light conditions.



Figure 1: Front view of the SKMEI 1455 Kid's Digital Watch, showcasing its vibrant rose red and purple design with a clear digital display.

SETUP AND INITIAL CONFIGURATION

Battery Installation

The SKMEI 1455 watch comes with a CR2025 Lithium Metal battery pre-installed. No initial battery installation is required for first use.

Setting Time and Date

To set the time and date, locate the buttons on the side of the watch. Typically, there are four buttons: Mode, Light, Start/Stop, and Reset. Refer to the diagram below for button identification.



Figure 2: Angled view of the watch, showing the placement of control buttons.

1. Press the **Mode** button repeatedly until the time setting mode is activated (usually indicated by flashing digits).
2. Use the **Start/Stop** button to adjust the flashing digit (hours, minutes, date, month, day of week).
3. Use the **Reset** button to move to the next setting field.
4. Once all settings are correct, press the **Mode** button again to exit the setting mode.

12H/24H Format Selection

The watch supports both 12-hour and 24-hour time formats. While in time setting mode, or sometimes by pressing a specific button in normal time display mode (often the **Reset** button), you can toggle between 12H (with AM/PM indicator) and 24H (military time) display.

OPERATING INSTRUCTIONS

Basic Time Display

In its default mode, the watch displays the current time (hours, minutes, seconds) and the day of the week.

The date and month are also visible.

Using the Backlight

To illuminate the display in dark conditions, press the **Light** button. The LED backlight will activate for a few seconds, providing clear visibility of the digital readout.



Figure 3: The watch display with the LED backlight activated for improved visibility.

Alarm Function

The watch includes a daily alarm feature. To set the alarm:

1. Press the **Mode** button until you reach the alarm setting mode (often indicated by "AL" or a bell icon).
2. Use the **Start/Stop** and **Reset** buttons to set the desired alarm time.

3. Press **Mode** to confirm and exit.
4. To turn the alarm on or off, typically press the **Start/Stop** button while in alarm mode.

Hourly Chime

The hourly chime function, when activated, will cause the watch to beep at the top of every hour. To toggle the hourly chime, navigate to the alarm mode and look for an indicator (e.g., "SIG" or a speaker icon) that can be turned on or off, usually with the **Reset** button.

Stopwatch Function

The stopwatch allows for precise timing of activities.

1. Press the **Mode** button until you reach the stopwatch mode (indicated by "ST" or "STOP").
2. Press the **Start/Stop** button to begin timing. Press it again to pause.
3. Press the **Reset** button to clear the stopwatch to zero.
4. Press **Mode** to return to the time display.

MAINTENANCE AND CARE

Proper care will extend the life and maintain the appearance of your SKMEI watch.

- **Cleaning:** Clean the watch band and case regularly with a soft, damp cloth. Avoid harsh chemicals or abrasive materials.
- **Water Resistance (50m):** The watch is rated for 50 meters (5 ATM) water resistance, meaning it is suitable for daily use, splashes, and brief immersion.
 - **DO NOT** press any buttons underwater.
 - After contact with water, especially chlorinated or saltwater, wipe the watch dry.
 - Constant contact with water, such as prolonged swimming or showering, can reduce the durability and water resistance over time.
- **Temperature:** Avoid exposing the watch to extreme hot or cold temperatures, as this can affect battery life and display performance.
- **Impact:** While durable, avoid dropping the watch or subjecting it to strong impacts.



Figure 4: The SKMEI 1455 watch, ready for daily wear and adventures.

TROUBLESHOOTING

If you encounter issues with your watch, consider the following common solutions:

- **Display is blank or dim:** The battery may be low. While the watch comes with a battery, its lifespan depends on usage. Consider professional battery replacement if the issue persists.
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode (though this model typically doesn't have one). Try pressing buttons firmly. If the watch was recently exposed to water, ensure it is completely dry.
- **Time is incorrect:** Re-enter the time setting mode and adjust the time as per the "Setting Time and Date" section.
- **Water inside the display:** If moisture appears inside the watch, stop using it immediately and seek professional assistance. This indicates a breach in the water resistance seal.

If these steps do not resolve the issue, please refer to the "Warranty and Support" section for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	SKMEI
Model	1455
Movement	Digital movement
Mirror Material	Resin
Case Material	ABS
Band Material	PU (Polyurethane)
Buckle Material	Stainless Steel
Waterproof Rating	50m (5 ATM)
Dial Diameter	38mm (1.52 inches)
Case Thickness	13mm (0.52 inches)
Band Width	16mm (0.68 inches)
Band Length	230mm (8.8 inches)
Product Weight	31g (1.08 oz)
Battery Type	CR2025 (Lithium Metal)

WARRANTY AND SUPPORT

Your SKMEI 1455 Kid's Digital Watch is backed by a commitment to quality.

- **Warranty:** This product comes with a 12-month warranty from the date of purchase, covering manufacturing defects.
- **Money Back Guarantee:** A 30-day money-back guarantee is offered, allowing returns within 30 days of purchase if you are not satisfied.
- **Customer Support:** If you have any questions, require assistance with operation, or need to claim warranty service, please contact the seller or manufacturer through the platform where the purchase was made.