

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Timex](#) /
- › [Timex Marathon Digital Watch TW5M20900 User Manual](#)

## Timex TW5M20900

# Timex Marathon Digital Watch TW5M20900 User Manual

Model: TW5M20900

## 1. INTRODUCTION

---

This manual provides comprehensive instructions for the Timex Marathon Digital Watch, model TW5M20900. Please read this manual carefully to understand the features, operation, and maintenance of your watch. Keep this manual for future reference.

The Timex Marathon Digital Watch is designed for durability and functionality, featuring a quartz movement, digital display, and water resistance up to 30 meters.

## 2. WATCH OVERVIEW

---

Familiarize yourself with the main components of your Timex Marathon Digital Watch.



**Figure 1:** Front view of the Timex Marathon Digital Watch TW5M20900. This image displays the digital screen, the 'INDIGLO' backlight button, and the 'MODE' button on the left side. The watch features a black rubber case with a gold-tone bezel and push buttons.



**Figure 2:** Back view of the Timex Marathon Digital Watch TW5M20900. This image shows the stainless steel case back with engravings such as 'STAINLESS STEEL BACK' and 'WATER RESISTANT 30 METERS'. The black rubber strap with its gold-tone tang buckle is also visible.

The watch features a 42 mm round rubber case, a digital dial with a mineral crystal, and a 21.4 mm black rubber strap with a tang clasp. It is equipped with a quartz movement and is water resistant up to 30 meters.

### 3. SETUP AND INITIAL CONFIGURATION

#### 3.1 Setting Time and Date

1. Press the **MODE** button repeatedly until the time setting mode is displayed.
2. Use the **START/STOP** button (usually top right) to adjust the flashing digit (hours, minutes, etc.).
3. Use the **RESET** button (usually bottom right) to move to the next digit or setting.
4. Once all settings are correct, press the **MODE** button to exit the setting mode.

#### 3.2 Activating INDIGLO® Night-Light

To illuminate the watch face in low light conditions, press the **INDIGLO** button (usually top left). The backlight will remain on for a few seconds.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Chronograph (Stopwatch) Function

1. Press the **MODE** button until the chronograph display appears.
2. Press the **START/STOP** button to begin timing.
3. Press **START/STOP** again to pause the timing.
4. To resume, press **START/STOP**.
5. To reset the chronograph to zero, press the **RESET** button while the chronograph is paused.

### 4.2 Alarm Function

1. Press the **MODE** button until the alarm setting mode is displayed.
2. Use the **START/STOP** and **RESET** buttons to set the desired alarm time.
3. Press **MODE** to confirm and activate the alarm.
4. To turn the alarm on or off, typically press the **START/STOP** button while in alarm mode.

## 5. MAINTENANCE AND CARE

---

- **Cleaning:** Clean your watch regularly with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials.
- **Water Resistance:** This watch is water resistant up to 30 meters (3 ATM). It is suitable for splashes or brief immersion in water, but not for swimming, showering, or diving. Do not operate buttons underwater.
- **Battery Replacement:** When the display dims or functions become erratic, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure water resistance is maintained.
- **Temperature:** Avoid exposing your watch to extreme temperatures, both hot and cold, as this can affect battery life and watch performance.

## 6. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Watch display is blank or dim.	Low or dead battery.	Replace the battery. Consult a professional watch technician.
Time is incorrect.	Time needs to be reset.	Refer to Section 3.1 "Setting Time and Date" to adjust the time.
Buttons are unresponsive.	Watch may be in a locked mode or battery is very low.	Try pressing all buttons to see if any function. If not, consider battery replacement.
Water appears inside the watch.	Water resistance compromised.	Immediately take the watch to a service center. Do not attempt to dry it yourself.

## 7. SPECIFICATIONS

---

**Model Number:** TW5M20900

**Brand:** Timex

**Movement:** Quartz

**Display:** Digital

**Case Material:** Rubber

**Case Diameter:** 42 mm

**Case Thickness:** 14 mm

**Crystal:** Mineral

**Strap Material:** Rubber

**Band Width:** 21.4 mm

**Clasp Type:** Tang Buckle

**Water Resistance:** 30 Meters (3 ATM)

**Additional Features:** Chronograph, Light Up (INDIGLO®), Stopwatch

**Department:** Unisex-adult

## 8. WARRANTY AND SUPPORT

---

Timex watches are manufactured to high standards and are backed by a limited warranty. For specific warranty details, please refer to the warranty card included with your purchase or visit the official Timex website.

For technical support, service, or parts, please contact Timex customer service. Contact information can typically be found on the official Timex website or in the packaging materials.

When contacting support, please have your watch model number (TW5M20900) and purchase date available.