

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [IBELL](#) /
- › [IBELL WIND79 PRO High Pressure Washer Instruction Manual](#)

IBELL WIND 79 PRO

IBELL WIND79 PRO High Pressure Washer Instruction Manual

Model: WIND 79 PRO

1. INTRODUCTION

Thank you for choosing the IBELL WIND79 PRO High Pressure Washer. This powerful 1900W induction motor unit is designed for efficient and effective cleaning of various surfaces, including cars, bikes, homes, and outdoor areas. With a maximum pressure of 150 Bar and a flow rate of 7.5 L/min, it provides robust cleaning performance. This manual provides essential information for the safe and proper operation, maintenance, and troubleshooting of your pressure washer. Please read it thoroughly before first use and keep it for future reference.



Image 1.1: The IBELL WIND79 PRO High Pressure Washer with its included accessories, showcasing the main unit, spray gun, hose, and various nozzles.

2. SAFETY GUIDELINES

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury. Failure to follow these instructions may result in serious injury or property damage.

- **Read All Instructions:** Familiarize yourself with the controls and proper use of the pressure washer.
- **Electrical Safety:** Ensure the power source matches the voltage specified on the product. Use only grounded outlets. Do not operate with damaged cords or plugs.
- **Personal Safety:** Wear appropriate personal protective equipment (PPE) such as safety glasses, gloves, and protective footwear. Do not direct the spray at people, pets, or electrical devices.
- **Water Connection:** Connect the pressure washer to a cold water supply only. Do not use hot water. Ensure the water inlet filter is clean and properly installed.
- **Chemical Use:** Use only detergents recommended for pressure washers. Follow detergent manufacturer's instructions for

dilution and use.

- **Children and Bystanders:** Keep children and bystanders away from the operating area.
- **Maintenance:** Disconnect from the power supply before performing any maintenance or cleaning.

3. PRODUCT COMPONENTS

The IBELL WIND79 PRO High Pressure Washer comes with several components designed for versatile cleaning tasks. Ensure all parts are present and undamaged upon unpacking.

Included Components:

- High Pressure Washer Unit
- Spray Gun
- Nozzle
- Shampoo Jar (Foam Bottle)
- High Pressure Hose (5 Metres)
- Inlet Connector
- Inlet Filter

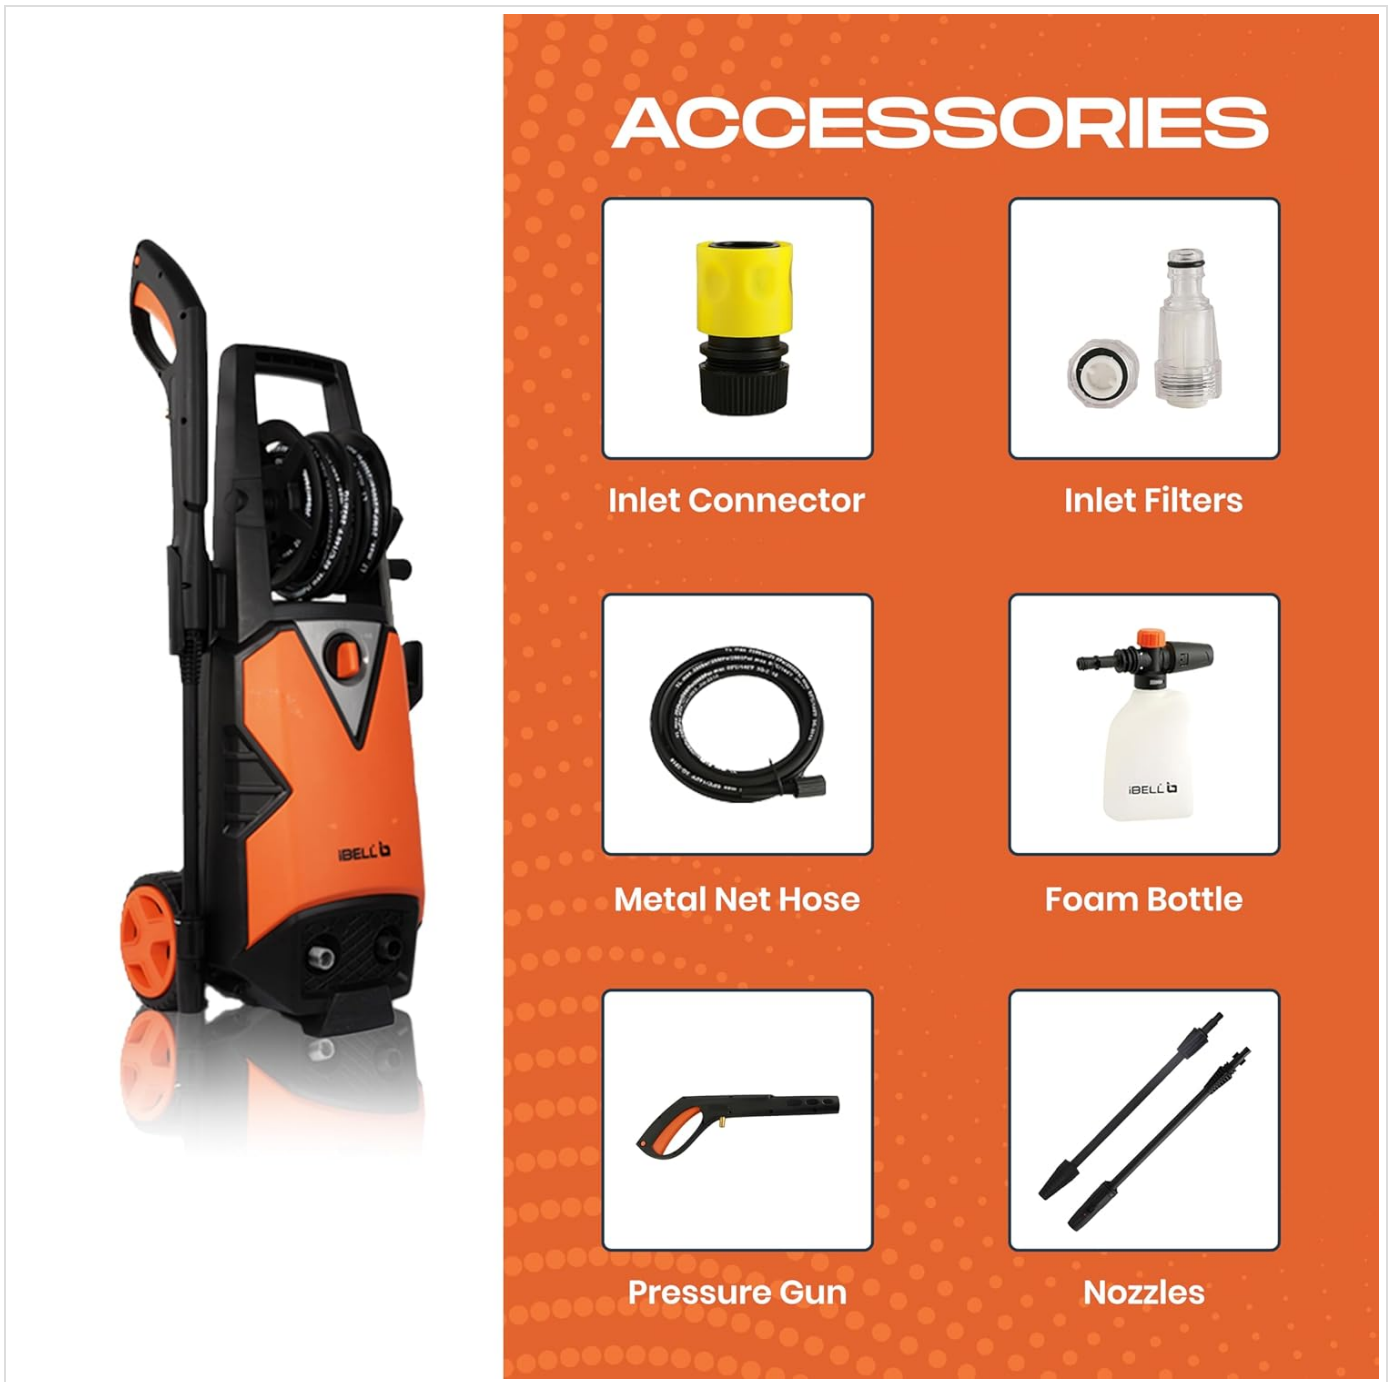


Image 3.1: Detailed view of the accessories, including the inlet connector, inlet filters, metal net hose, foam bottle, pressure gun, and various nozzles.

4. TECHNICAL SPECIFICATIONS

Understanding the specifications of your pressure washer is crucial for optimal performance and safety.

Specification	Value
Brand	IBELL
Model Number	WIND 79 PRO
Power Source	Corded Electric
Motor Type	Induction Motor

Specification	Value
Motor Power	1900W
Rated Pressure	150 Bar
Maximum Flow Rate	7.5 Liters Per Minute
Hose Length	5 Metres
Item Weight	5 Kilograms
Product Dimensions (L x W x H)	30L x 30W x 30H Centimeters
Tank Volume (Shampoo Jar)	7.2 Litres
Country of Origin	China



IBELL
WIND79PRO

- 

INDUCTION MOTOR
- 

**MOTOR POWER
1900 W**
- 

**RATED PRESSURE
150 BAR**
- 

**MAX.FLOW RATE
7.5L/MIN**

Image 4.1: Visual representation of key specifications including induction motor, 1900W motor power, 150 Bar rated pressure, and 7.5 L/min max flow rate.

5. ASSEMBLY & SETUP

Follow these steps to assemble and set up your IBELL WIND79 PRO High Pressure Washer before first use.

1. **Unpack:** Carefully remove all components from the packaging.
2. **Attach Wheels (if not pre-assembled):** Securely attach the wheels to the base of the unit as per the diagrams in the quick start guide (if provided).
3. **Connect High Pressure Hose:** Connect one end of the high-pressure hose to the high-pressure outlet on the washer unit and the other end to the spray gun. Ensure connections are tight to prevent leaks.
4. **Install Inlet Filter:** Insert the inlet filter into the water inlet port of the pressure washer. This prevents debris from entering the pump.
5. **Connect Water Supply:** Attach the garden hose (not included) to the inlet connector, then connect the inlet connector to the water inlet port of the pressure washer. Ensure the garden hose is connected to a reliable cold water source.
6. **Purge Air:** Before plugging in the unit, turn on the water supply and squeeze the trigger on the spray gun to allow water to flow through the system and purge any air. Continue until a steady stream of water emerges from the nozzle.
7. **Connect Power:** Once air is purged, plug the power cord into a grounded electrical outlet.

6. OPERATING INSTRUCTIONS

This section details how to operate your pressure washer for various cleaning tasks.

Starting the Pressure Washer:

1. Ensure the unit is properly assembled and connected to water and power.
2. Turn on the water supply completely.
3. Press the ON/OFF switch to the 'ON' position. The motor will start.
4. Squeeze the trigger on the spray gun to begin spraying.

Using the Auto-Stop Function:

The IBELL WIND79 PRO features an auto-stop function that automatically shuts off the pump when the trigger is not engaged. This saves energy and prolongs the life of the pump. The motor will restart automatically when the trigger is squeezed again.

Applications:



VEHICLE CLEANING

Efficiently removes dirt, salt, and mud from vehicles




HOME EXTERIOR CLEANING

Removes dirt, mildew, and stains from wood, vinyl, or brick siding.



GARDEN AND YARD MAINTENANCE

Washes away dirt, moss, and algae on wood or vinyl fences.

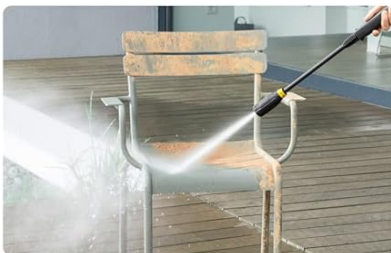

OUTDOOR FURNITURE

Quickly cleans plastic, metal, or wood patio furniture, making it ready for seasonal use.

Image 6.1: Examples of cleaning applications including vehicle cleaning, home exterior cleaning, garden and yard maintenance, and outdoor furniture cleaning.

- **Vehicle Cleaning:** Efficiently removes dirt, salt, and mud from cars and bikes. Use the appropriate nozzle for the task, starting with a wider spray and moving closer as needed.
- **Home Exterior Cleaning:** Removes dirt, mildew, and stains from wood, vinyl, or brick siding. Always test on an inconspicuous area first.
- **Garden and Yard Maintenance:** Washes away dirt, moss, and algae on wood or vinyl fences, patios, and walkways.
- **Outdoor Furniture:** Quickly cleans plastic, metal, or wood patio furniture.

Using the Shampoo Jar (Foam Bottle):

1. Fill the shampoo jar with appropriate pressure washer detergent, following the detergent manufacturer's dilution instructions.
2. Attach the shampoo jar to the spray gun.
3. Spray the detergent onto the surface to be cleaned. Allow it to soak for a few minutes (do not let it dry).
4. Remove the shampoo jar and rinse the surface with clean water using the pressure washer.

7. MAINTENANCE & STORAGE

Proper maintenance and storage will extend the life of your IBELL WIND79 PRO High Pressure Washer.

After Each Use:

- **Flush System:** Run clean water through the system for a few minutes to remove any detergent residue.
- **Disconnect:** Turn off the power, unplug the unit, and turn off the water supply.
- **Relieve Pressure:** Squeeze the trigger on the spray gun to release any remaining pressure in the system.
- **Drain Water:** Disconnect all hoses and drain any remaining water from the pump, hoses, and spray gun.
- **Clean Inlet Filter:** Regularly check and clean the inlet filter to ensure proper water flow and prevent pump damage.

Storage:

Store the pressure washer in a dry, frost-free area. Freezing temperatures can damage the pump and hoses.



Image 7.1: The pressure washer features integrated storage for the gun handle, power cord, and water pipe, promoting an organized and

clutter-free storage solution.

- Utilize the integrated storage features for the spray gun, hose, and power cord to keep all components organized and prevent damage.
- If storing for an extended period, consider using a pump protector or antifreeze solution to prevent internal corrosion and freezing.

8. TROUBLESHOOTING

This section provides solutions for common issues you might encounter with your pressure washer.

Problem	Possible Cause	Solution
Motor does not start	No power supply Thermal overload activated	Check power connection and outlet Allow motor to cool down (approx. 30 mins)
No water pressure or low pressure	Water supply off or restricted Air in pump Clogged inlet filter Nozzle clogged	Turn on water supply fully; check for kinks in hose Purge air from system (see Assembly & Setup) Clean inlet filter Clean or replace nozzle
Pulsating pressure	Air in pump Water supply restricted Clogged nozzle	Purge air from system Check water supply and hoses Clean or replace nozzle
Water leaks	Loose connections Damaged O-rings/seals	Tighten all connections Inspect and replace damaged O-rings/seals

9. WARRANTY & CUSTOMER SUPPORT

IBELL is committed to providing quality products and support.

Warranty Information:

The IBELL WIND79 PRO High Pressure Washer comes with a **12 Months Warranty**. This includes a 6 Months Standard Warranty plus an additional 6 Months Warranty upon registration. Registration must be completed within 30 days from the date of purchase to avail the full warranty.

Customer Support:

For any queries, technical assistance, or warranty claims, please contact IBELL customer service.



Keep Your Trust in Aftercare Purchase.

Customer service support

 **+91 98956 00055**



To avail the full warranty, product registration must be completed within 30 days from the date of purchase.

Image 9.1: Customer service support contact information, including a WhatsApp number for assistance.

Customer Service Support: +91 98956 00055

You can also visit the official IBELL store on Amazon for more information: [IBELL Store](#)