

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [WMF](#) /

› [WMF Bueno Pro Long Slot Toaster Instruction Manual](#)

### WMF 414150011

## WMF Bueno Pro Long Slot Toaster Instruction Manual

Model: 414150011 | Brand: WMF

### INTRODUCTION

The WMF Bueno Pro Long Slot Toaster is designed for versatile toasting, accommodating both standard and longer bread slices. Its elegant matte Cromargan stainless steel finish complements any kitchen. This toaster features 6 adjustable browning levels, integrated bread centering for even results, and illuminated function buttons for stop, reheat, and defrost. A removable bun warmer rack and crumb tray enhance its functionality and ease of use.

### IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Do not operate unattended.

## PRODUCT COMPONENTS



**Overall View:** The WMF Bueno Pro Long Slot Toaster with its removable bun warmer rack positioned on top.



**Control Panel:** Features a browning level dial (1-6) and illuminated function buttons for Stop, Reheat, and Defrost.



**Crumb Tray:** A pull-out tray located at the bottom for easy cleaning of crumbs.



**Bun Warmer Rack:** A removable wire rack designed to warm buns, croissants, or pastries.

## Key Parts:

- **Long Toasting Slots:** Two extra-long slots designed to accommodate up to four standard slices or two long slices of bread.
- **Browning Control Dial:** Adjustable dial with 6 settings for desired toast shade.
- **Stop Button:** Immediately cancels the toasting cycle.
- **Reheat Button:** Warms already toasted bread without further browning.
- **Defrost Button:** Defrosts and toasts frozen bread.
- **Bread Centering Guides:** Automatically adjust to hold bread centrally for even browning.
- **High Lift Lever:** Allows for easy removal of smaller items.

## SETUP

1. **Unpacking:** Carefully remove the toaster and all packaging materials. Retain packaging for future storage or transport.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials like curtains or walls. Ensure adequate ventilation around the appliance.

3. **First Use (Burn-Off Cycle):** Before first use, operate the toaster without bread on the highest browning setting (6) for a few cycles. This will burn off any manufacturing residues and odors. A slight odor or smoke is normal during this process. Ensure the area is well-ventilated.
4. **Cord Management:** Unwind the power cord fully. The base of the toaster includes a cord winder for neat storage when not in use.

## OPERATING INSTRUCTIONS

### Toasting Bread:

1. **Plug In:** Ensure the toaster is plugged into a suitable electrical outlet (230 Volts).
2. **Insert Bread:** Place up to four standard slices of bread or two long slices into the toasting slots. The integrated bread centering guides will automatically adjust to hold the bread centrally.
3. **Select Browning Level:** Turn the browning control dial to your desired setting from 1 (lightest) to 6 (darkest). Experiment to find your preferred shade.
4. **Start Toasting:** Press the toast lever down until it locks into place. The toasting cycle will begin, and the selected function button (if any) will illuminate.
5. **Cycle Completion:** Once the selected browning level is reached, the toast will automatically pop up, and the toaster will switch off.
6. **Remove Toast:** Use the high lift lever to raise the toast higher for easier removal, especially for smaller items.

### Using Special Functions:

- **Defrost Function:** For frozen bread, insert the bread and press the toast lever down. Then, press the **Defrost** button. The indicator light will illuminate, and the toaster will automatically adjust the toasting time to first defrost and then toast the bread.
- **Reheat Function:** To warm up already cold toast or pastries without further browning, insert the item and press the toast lever down. Then, press the **Reheat** button. The indicator light will illuminate, and the toaster will briefly warm the item.
- **Stop Function:** To interrupt the toasting cycle at any time, press the **Stop** button. The toast will pop up immediately.

### Using the Bun Warmer Rack:

1. **Attach Rack:** Place the removable bun warmer rack securely onto the top of the toaster slots.
2. **Place Items:** Place buns, croissants, or other pastries on the rack.
3. **Activate:** Set the browning control to a lower setting (e.g., 1 or 2) and press the toast lever down. The heat from the slots will warm the items on the rack.
4. **Monitor:** Keep an eye on the items to prevent burning. The cycle will complete automatically.
5. **Remove:** Carefully remove the warmed items from the rack.



The WMF Bueno Pro Toaster efficiently prepares multiple slices of bread, ensuring even browning for a perfect breakfast.

## Maintenance and Cleaning

Regular cleaning ensures optimal performance and extends the life of your toaster.

- Unplug and Cool:** Always unplug the toaster from the power outlet and allow it to cool completely before cleaning.
- Empty Crumb Tray:** Pull out the removable crumb tray from the bottom of the toaster. Dispose of the crumbs. Wipe the tray clean with a damp cloth and dry thoroughly before reinserting. Ensure the crumb tray is fully pushed in before operating the toaster.
- Clean Exterior:** Wipe the exterior of the toaster with a soft, damp cloth. For stubborn marks on the stainless steel, use a mild stainless steel cleaner. Do not use abrasive cleaners or scouring pads, as they can scratch the surface.
- Internal Cleaning:** Never insert any objects into the toasting slots to clean them. If bread becomes stuck, unplug the toaster and carefully dislodge the bread after it has cooled.
- Storage:** When not in use, store the toaster in a clean, dry place. You can use the cord winder at the base to keep the power cord tidy.

## Troubleshooting

If you encounter issues with your WMF Bueno Pro Toaster, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure the toaster is securely plugged into a working outlet. Check your circuit breaker.
Bread is not toasting evenly.	Uneven bread thickness; crumb buildup.	Ensure bread slices are of uniform thickness. Clean the crumb tray regularly. The integrated centering guides should help, but very irregular bread might still toast unevenly.

Problem	Possible Cause	Solution
Toast is too light or too dark.	Browning level setting is incorrect.	Adjust the browning control dial to a higher setting for darker toast or a lower setting for lighter toast.
Bread stuck in toaster.	Bread too thick or small pieces.	Unplug the toaster and allow it to cool. Carefully remove the bread using non-metallic tongs. Never use metal utensils.
Smoke coming from toaster.	Crumbs burning; food stuck; first use.	Immediately press the Stop button and unplug. Clean the crumb tray. If it's the first use, this is normal (see Setup). If not, ensure no food is stuck inside.

## SPECIFICATIONS

Feature	Detail
Brand	WMF
Model Number	414150011
Color	Stainless Steel
Dimensions (L x W x H)	43.5 x 22 x 27 cm (17.1 x 8.7 x 10.6 inches)
Item Weight	1 Kilogram (1000 Grams)
Power	1550 Watts
Voltage	230 Volts
Material	Cromargan® (Stainless Steel)
Number of Slots	2 long slots (accommodates 4 standard slices)
Browning Levels	6 adjustable levels
Special Features	Automatic stop, Defrost function, Reheat function, Integrated bread centering, Removable bun warmer rack, Removable crumb tray, Cord winder
Country of Origin	China

## WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or contact WMF customer service directly. Keep your proof of purchase for any warranty claims.

Spare parts availability for this product is currently unavailable as per product information. For further assistance or technical support, please contact your retailer or the official WMF customer service in your region.

