

Manuals.plus /

› STAR WARS /

› STAR WARS The Black Series Darth Revan Force FX Elite Lightsaber Instruction Manual Model E8940

## STAR WARS E8940

# STAR WARS The Black Series Darth Revan Force FX Elite Lightsaber

Model: E8940

Brand: STAR WARS

## INTRODUCTION

---

This manual provides essential information for the safe and effective use of your STAR WARS The Black Series Darth Revan Force FX Elite Lightsaber. This collectible item features advanced LED technology and authentic sound effects, allowing you to experience the iconic weapon of Darth Revan from the Star Wars lore. Please read these instructions thoroughly before assembly and operation.



Image: The product packaging for the Darth Revan Force FX Elite Lightsaber, highlighting its features and design.

## SAFETY INFORMATION

---

**WARNING: This toy produces flashes that may trigger epilepsy in sensitized individuals.**

- Adult supervision is recommended, especially during assembly and initial use.
- Keep out of reach of small children due to small parts that may pose a choking hazard.
- Do not aim the lightsaber directly at eyes or faces.
- Do not modify the product in any way, as this may compromise safety and void the warranty.

## WHAT'S IN THE BOX

---

Upon opening your package, please ensure all the following components are present:

- Darth Revan Force FX Elite Lightsaber Hilt
- Lightsaber Blade
- Display Stand (unassembled)
- Removable Kyber Crystal
- Instruction Manual (this document)

## SETUP

---

### 1. Battery Installation

1. Locate the battery compartment on the lightsaber hilt.
2. Open the compartment cover.
3. Insert the required batteries, observing the correct polarity (+/-) as indicated inside the compartment. (Note: The product requires 1 A batteries. Please refer to the product packaging for the exact battery type and quantity, as '1 A battery' is an uncommon specification.)
4. Close the battery compartment cover securely.

### 2. Blade Attachment

1. Carefully align the lightsaber blade with the opening on the hilt.
2. Insert the blade into the hilt.
3. **Push down firmly on the blade and twist it clockwise until it locks securely into place.** This action ensures proper electrical connection and prevents the blade from detaching during use.

### 3. Kyber Crystal Insertion

1. Locate the small compartment on the hilt designed for the Kyber crystal.
2. Open the compartment and gently insert the removable Kyber crystal.
3. Ensure the crystal is seated correctly for the glowing effect.



*Image: The lightsaber hilt with the removable Kyber crystal displayed separately.*

#### **4. Display Stand Assembly**

1. Assemble the display stand by connecting the pieces as shown in the diagrams on the product packaging.
2. Once assembled, place the lightsaber hilt securely on the stand for display.



*Image: The Darth Revan Force FX Elite Lightsaber hilt resting on its display stand.*

# OPERATING INSTRUCTIONS

---

## 1. Power On/Off

Press the main power button located on the hilt to activate the lightsaber. The blade will progressively ignite with accompanying sound effects. Press the main power button again to deactivate the lightsaber.

## 2. Blade Color Change

The Darth Revan Force FX Elite Lightsaber features a color-changing blade. While the lightsaber is active, press and hold the secondary button on the hilt to cycle between purple and red blade colors. Release the button to select your desired color.





*Images: The lightsaber displaying its purple blade (left) and red blade (right).*

### 3. Special Effects

- **Blaster Deflection Effect:** Quickly press the secondary button on the hilt to activate the blaster deflection sound and light effect.
- **Wall-Cutting Effect:** Press and hold the main power button while the lightsaber is active to activate the wall-cutting effect.
- **Motion-Activated Sound Effects:** The lightsaber features realistic motion-sensor activated sound effects, including hum, clash, and swing sounds, which respond to movement.

## MAINTENANCE

---

- **Cleaning:** Wipe the lightsaber hilt and blade with a soft, dry cloth. Do not use abrasive cleaners, solvents, or immerse the product in water.
- **Storage:** Store the lightsaber in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** Remove batteries from the lightsaber during prolonged periods of non-use to prevent potential leakage and damage to the electronics.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Blade not illuminating or flickering	Loose blade connection, low batteries, incorrect battery installation.	Ensure batteries are fresh and correctly installed with proper polarity. Verify the blade is fully inserted into the hilt, pushed down, and twisted clockwise to lock securely. A loose connection is a common cause of this issue.
No sound effects	Low batteries, lightsaber not powered on.	Check battery installation and replace if necessary. Ensure the lightsaber is powered on using the main button.
Kyber crystal not glowing	Incorrect crystal insertion, lightsaber not powered on.	Ensure the Kyber crystal is correctly inserted into its compartment. Verify the lightsaber is powered on.

## SPECIFICATIONS

---

- **Product Dimensions:** 3.19 x 14 x 9 inches
- **Item Weight:** 3.48 pounds
- **Model Number:** E8940
- **Recommended Age:** 14 years and up
- **Batteries:** 1 A battery required (Note: Please refer to product packaging for exact battery type and quantity, as '1 A battery' is an uncommon specification.)
- **Manufacturer:** Hasbro

## WARRANTY AND SUPPORT

---

For detailed warranty information, customer service inquiries, or technical support, please refer to the product packaging or visit the official Hasbro website. It is recommended to retain your proof of purchase for any warranty claims.

