

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Hirisi Tackle](#) /

› [Hirisi Tackle XT1 Anti-Theft Motion Detector LED Light Alarm User Manual](#)

## Hirisi Tackle XT1

# Hirisi Tackle XT1 Anti-Theft Motion Detector LED Light Alarm

User Manual

## INTRODUCTION

The Hirisi Tackle XT1 is a motion-activated security device designed to monitor your surroundings, particularly useful for carp fishing and camping. It features an integrated infrared sensor with a 120-degree detection angle. When motion is detected within its range, the device activates visual and audible alerts to notify you of approaching individuals or animals. The XT1 can be configured for sound and light alerts or light-only alerts, offering flexibility for various situations.

## PACKAGE CONTENTS

- 1 x Hirisi Tackle XT1 Motion Detector

## SETUP

### 1. Battery Installation

The XT1 requires 3 x 1.5V AAA alkaline batteries (not included). To install the batteries:

1. Locate the battery compartment cover on the back of the device.
2. Carefully remove the cover.
3. Insert three AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover securely.



Image: Battery compartment with cover removed, showing where to insert AAA batteries.

## 2. Mounting the Device

The XT1 is designed to be mounted on a bankstick using its standard 3/8-inch thread. For optimal performance, mount the device at a height of approximately one meter (3.3 feet) to ensure the sensor has a clear line of sight.



Image: The XT1 motion detector in an outdoor setting, demonstrating its detection range.

## OPERATING INSTRUCTIONS

### 1. Power On/Off

To turn the device on or off, press and hold the power button located on the side of the unit for 3 seconds.

### 2. Adjusting Volume

To adjust the volume, short press the power button. The device offers 7 adjustable volume levels. Continue short pressing until your desired volume is reached.

### 3. Detection and Alerts

Once powered on, the XT1's infrared sensor will monitor an area with a 120-degree angle and a detection distance of 2-4 meters. When motion is detected:

- A red LED light on top will illuminate steadily, and a light will flash.
- The high-output speaker will emit an audible tone (if not in silent mode).
- Simultaneously, a signal is sent to your receiver (if paired).

### 4. Silent Mode (LED Only)

The device can be set to operate with only LED alerts and no sound. Refer to the volume adjustment steps; one of the settings will correspond to silent operation with visual alerts only.



Image: Side view of the XT1, indicating the on/off and volume control button.



Image: Detailed views of the sensor and side LED lights on the XT1.

## MAINTENANCE

- **Cleaning:** Wipe the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the device's performance diminishes or if it fails to power on. Always use fresh AAA alkaline batteries. Remove batteries if the device will not be used for an extended period to prevent leakage.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Dead or incorrectly installed batteries.	Check battery polarity. Replace with fresh AAA batteries.
No sound from the device.	Volume set to minimum or silent mode.	Short press the power button to increase volume. Ensure it's not in silent (LED-only) mode.

Problem	Possible Cause	Solution
Poor detection range or false alarms.	Obstructions, incorrect mounting height, or environmental factors.	Ensure a clear line of sight for the sensor. Mount at approximately 1 meter height. Avoid placing near heat sources or moving foliage.
LEDs not flashing/illuminating.	Device not powered on or faulty unit.	Ensure the device is powered on. If the issue persists after checking batteries, contact customer support.

## SPECIFICATIONS

- Model:** XT1
- Brand:** Hirisi Tackle
- Manufacturer:** HIRISI
- Power Source:** Battery Powered
- Battery Type:** 3 x 1.5V AAA Alkaline (not included)
- Sensor Angle:** 120 degrees
- Detection Distance:** 2-4 meters (6.5-13 feet)
- Volume Levels:** 7 adjustable steps
- Mounting:** 3/8-inch thread for bankstick
- Package Dimensions:** 13.5 x 8.1 x 4.7 cm (5.3 x 3.2 x 1.85 inches)
- Weight:** 70 grams (2.5 ounces)
- ASIN:** B07VM8QCB1
- UPC:** 028753605747

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact Hirisi Tackle customer service directly. Contact details can typically be found on the manufacturer's official website or through your retailer.