

## Uten Uten 1088TS Air Fryer

# Uten 6.9QT/6.5L Digital Air Fryer

Model: Uten 1088TS Air Fryer

## INTRODUCTION

The Uten 6.9QT/6.5L Digital Air Fryer is designed to provide a healthier alternative to traditional deep frying, utilizing rapid hot air circulation to cook food with significantly less oil. This appliance offers a large capacity suitable for family meals and features an intuitive LED digital touchscreen for easy operation. It is equipped with multiple pre-set cooking modes and advanced safety features to ensure a convenient and secure cooking experience.

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury.

- Read all instructions before operating the appliance.
- Do not immerse the cord, plug, or the appliance housing in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use attachments not recommended by the appliance manufacturer.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

### Integrated Safety Features:

- **Enclosed Cooking System:** Minimizes exposure to hot surfaces during operation.

- **Auto-Pause:** The air fryer automatically pauses operation when the basket is pulled out, resuming when reinserted.
- **Auto Shut-Off:** Prevents overcooking and ensures safety by automatically turning off the appliance after the set cooking time or if overheating occurs.
- **High Temperature Resistant Material:** Constructed with materials designed to withstand high cooking temperatures safely.
- **Thermal Fuse Protection:** Provides an additional layer of safety by cutting off power in case of extreme temperature fluctuations.



Figure 1: Overview of the Uten Air Fryer's 5 Security Protection Features.

## PRODUCT COMPONENTS

Familiarize yourself with the main parts of your Uten Air Fryer:

- **Main Unit:** Houses the heating element, fan, and control panel.
- **LED Digital Touchscreen:** For setting time, temperature, and selecting pre-set modes.
- **Removable Fryer Basket:** The primary cooking container, featuring a non-stick coating.
- **Interlayer/Crisper Plate:** Sits inside the basket to allow air circulation around food and drain excess fat.

- **Handle:** For safely pulling out and reinserting the fryer basket.



Figure 2: Uten 6.9QT/6.5L Digital Air Fryer Main Unit.

## Uten Upgraded Air Fryer with Interlayer



VS

## Other fried baskets



☒ Easy to clean

☒ Save space



☒ Bulky

☒ Cleaning trouble

Figure 3: Removable Fryer Basket and Interlayer Design.

## SETUP AND FIRST USE

1. **Unpack:** Carefully remove all packaging materials from the air fryer.
2. **Clean:** Wash the removable fryer basket and interlayer with warm soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a stable, heat-resistant surface, ensuring adequate air circulation around the unit. Do not place it directly against a wall or other appliances.
4. **Initial Run (Optional):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 350°F (175°C) to eliminate any manufacturing odors. A slight odor may be present, which is normal and will dissipate.

## OPERATING INSTRUCTIONS

The Uten Air Fryer uses 360° hot air circulation technology to cook food evenly and efficiently.



# 360° HOT AIR CIRCULATION HEATING

No oil added & Healthy & Delicious



Figure 4: 360° Hot Air Circulation Heating Technology.

## Basic Operation:

1. **Prepare Food:** Place your ingredients into the fryer basket. Do not overfill the basket to allow for proper air circulation.
2. **Insert Basket:** Slide the fryer basket firmly into the main unit until it clicks into place.
3. **Power On:** Plug the air fryer into a grounded electrical outlet. The digital touchscreen will illuminate.
4. **Set Temperature and Time:**
  - Use the temperature control buttons (usually + and -) to adjust the desired cooking temperature.
  - Use the time control buttons (usually + and -) to set the cooking duration.
5. **Start Cooking:** Press the Start/Pause button to begin the cooking process.
6. **Shake/Flip (Optional):** For even cooking, especially for fries or smaller items, pull out the basket halfway through the cooking time and shake or flip the contents. The air fryer will pause automatically. Reinsert the basket to resume cooking.
7. **End of Cooking:** The air fryer will beep when the cooking time is complete and automatically shut off. Carefully pull out the basket and transfer the cooked food.

## Using Pre-Set Modes:

The Uten Air Fryer features 8 pre-set cooking modes for common dishes. To use a pre-set mode:

1. After placing food in the basket and inserting it, press the Menu/Mode button on the touchscreen to cycle through the available pre-sets.
2. Once the desired pre-set icon is selected, the air fryer will automatically set the optimal temperature and time for that food type.
3. Press the Start/Pause button to begin cooking. You can manually adjust the time and temperature even after selecting a pre-set if needed.



Figure 5: Pre-set Cooking Modes and Example Times.

## COOKING GUIDE (APPROXIMATE)

The following table provides approximate cooking times and temperatures for various foods. Actual times may vary based on food quantity, size, and desired crispiness. Always ensure food is cooked to safe

internal temperatures.

Food Item	Temperature	Time
Chicken	180°C (356°F)	8-18 minutes
Cake	160°C (320°F)	8-25 minutes
Meat	180°C (356°F)	10-25 minutes
Fries	180°C-200°C (356°F-392°F)	9-22 minutes
Shrimp	180°C (356°F)	4-8 minutes
Steak	180°C (356°F)	10-12 minutes
Fish	180°C (356°F)	7-10 minutes

## CARE AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your air fryer.

- **Before Cleaning:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
- **Fryer Basket and Interlayer:** The removable fryer basket and interlayer are dishwasher-safe. For manual cleaning, wash with warm water, a mild detergent, and a non-abrasive sponge. The special non-stick coating helps prevent food from bonding, making cleanup easy.
- **Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not use harsh abrasive cleaners or scouring pads, as they may damage the surface.
- **Interior:** If necessary, wipe the interior of the appliance with a damp cloth. Do not immerse the main unit in water.
- **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.

## TROUBLESHOOTING

If you encounter issues with your Uten Air Fryer, refer to the following common problems and solutions:

- **Appliance does not turn on:**
  - Ensure the power cord is securely plugged into a grounded electrical outlet.
  - Check if the fryer basket is fully inserted into the main unit. The appliance will not operate if the basket is not correctly seated.
- **Food is not cooked evenly:**
  - Do not overfill the basket. Cook food in smaller batches if necessary.
  - Shake or flip the food halfway through the cooking process to ensure even browning.
  - Ensure the correct temperature and time settings are used for the specific food item.
- **White smoke comes from the appliance:**
  - This may indicate that fatty residue from previous use is burning off. Clean the basket and interior thoroughly after each use.
  - If cooking very fatty foods, excess oil may drip into the drawer. Remove excess oil from the drawer during cooking if needed.

- **Basket is difficult to insert or remove:**
  - Ensure the basket and interlayer are clean and free of food debris.
  - Push the basket in firmly until it clicks into place.

## SPECIFICATIONS

Feature	Specification
Model Name	Uten 1088TS Air Fryer
Capacity	6.9QT / 6.5L (6.53 Liters)
Output Wattage	1700 Watts
Voltage	120 Volts
Control Method	Touch (LED Digital Touchscreen)
Color	Black
Material	Stainless Steel
Product Dimensions (DxWxH)	16.22"D x 13.97"W x 13.97"H
Item Weight	11.2 Pounds
Nonstick Coating	Yes
Dishwasher Safe Parts	Yes (Removable Basket)
Special Feature	Temperature Control

## WARRANTY AND SUPPORT








For product support, warranty information, or to inquire about replacement parts, please contact Uten customer service. Refer to the product packaging or the official Uten website for the most current contact details.

Keep your purchase receipt as proof of purchase for any warranty claims.

© 2025 Uten. All rights reserved.

### Related Documents - Uten 1088TS Air Fryer



<div data-bbox="118 107 309 353"><p><b>AIR FRYER</b> USER'S GUIDE</p><p>HF-1088 (UEA022)</p></div>	<p><a href="#">User's Guide for UTEN HF-1088 Air Fryer</a></p> <p>Comprehensive user's guide for the UTEN HF-1088 Air Fryer, covering setup, operation, safety precautions, cleaning, and troubleshooting for healthy cooking with hot air. Includes detailed settings and usage instructions.</p>
<div data-bbox="118 495 309 741"><p> <b>10 L AIR OVEN</b> User Manual</p><p>AFO 44880(TXG-TM10L) CAPACITY: 10L</p></div>	<p><a href="#">Uten 10L Air Oven User Manual: Operation, Features, and Safety</a></p> <p>Comprehensive user manual for the Uten 10L Air Oven (Model AFO 44880/TXG-TM10L). Learn about its features, operating instructions, safety precautions, cleaning, and troubleshooting.</p>
<div data-bbox="118 808 309 1088"><p>Instruction Manual</p><p>Model No.: SBL359AB (UEA029)</p></div>	<p><a href="#">Uten Blender Instruction Manual</a></p> <p>Instruction manual for the Uten Blender, Model No.: SBL359AB (UEA029). This guide provides operating instructions, safety precautions, and cleaning information for the appliance.</p>
<div data-bbox="118 1133 309 1290"><p>SM-508 Quick Start Guide</p><p>Please read the instructions carefully before using the machine.</p><p>Model No.: SM-508 (UEA029)</p></div>	<p><a href="#">SM-508 Sewing Machine Quick Start Guide and User Manual</a></p> <p>Comprehensive guide for the SM-508 sewing machine, covering setup, operation, maintenance, and troubleshooting. Learn how to thread the machine, wind bobbins, sew various stitches, and maintain your sewing machine for optimal performance.</p>
<div data-bbox="118 1435 309 1648"><p>The Ultrasonic Cleaner is the best choice for the home use of the Ultrasonic Cleaner.</p><p>Model No.: UC-100 (UEA029)</p></div>	<p><a href="#">Uten Ultrasonic Cleaner Troubleshooting Guide: Common Issues and Solutions</a></p> <p>Find solutions for common problems with your Uten Ultrasonic Cleaner. This guide addresses issues like the device not working, buttons not responding, and cleaning effectiveness for jewelry, glasses, and more.</p>
<div data-bbox="118 1749 309 2007"><p><b>AIR FRYER</b> USER'S GUIDE</p><p>Model No.: HF-1088TS (UEA023)</p></div>	<p><a href="#">Air Fryer User Guide - Model HF-1088TS</a></p> <p>Comprehensive user guide for the HF-1088TS Air Fryer, detailing its features, operation, safety precautions, cleaning, troubleshooting, and settings for various foods.</p>

