

Dibea DT10

Dibea DT10 Cordless Lightweight Stick Vacuum Cleaner

USER MANUAL

1. Important Safety Instructions

Please read all instructions carefully before using this appliance. Retain this manual for future reference.

- Do not use the vacuum cleaner outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without the dust cup and filter in place.
- Turn off the appliance before connecting or disconnecting the motorized brush, extension tube, or other accessories.
- Use only manufacturer-recommended attachments.
- Charge the battery only with the charger specified by the manufacturer.
- Store the appliance indoors in a cool, dry place.

2. Package Contents

Verify that all components are present in the package:

- Dibea Cordless Stick Vacuum Cleaner (Main Unit)
- Electric Brush (Main Motorized Floor Brush)
- Extension Tube
- Mini Motorized Brush
- Long Crevice Nozzle
- 2-in-1 Bristle Brush
- Wall Bracket (with screws and stickers)
- Charging Adapter
- User Manual

- Lithium Ion Battery (pre-installed or separate)



Image 2.1: Overview of the Dibe DT10 Cordless Stick Vacuum Cleaner and its included accessories, including the main unit, extension tube, floor brush, mini motorized brush, crevice tool, and 2-in-1 brush.

3. Product Overview and Features

The Dibe DT10 is a versatile cordless stick vacuum cleaner designed for various cleaning tasks.

Key Features:

- **15000Pa Powerful Suction:** Provides strong cleaning performance for dust and pet hair.
- **Two Working Modes:** Allows selection between different suction levels for varied cleaning needs.
- **Advanced Cyclonic Filtration System:** Features a washable sponge filter with a metal pre-filter case to maintain suction and capture fine particles.

- **Large Motorized Brush with LED Lights:** Designed for deep cleaning carpets and hard floors, with LED lights to illuminate dark areas.
- **Mini Motorized Brush:** Specialized attachment for removing dust, pet hair, and dander from upholstery, beds, and car interiors.
- **Detachable and Rechargeable Lithium-Ion Battery:** Offers cordless convenience and can be recharged independently.
- **Multi-functional Attachments:** Includes a long crevice nozzle and a 2-in-1 bristle brush for various cleaning scenarios.



Image 3.1: Illustration of the vacuum's power and suction capabilities, highlighting the 150W motor and 15KPa suction, along with the control for two suction modes.



MINI MOTORIZED BRUSH

Removing dust, dander, hairs on bed,
couch, pet bed.

Image 3.2: A user demonstrating the mini motorized brush attachment for cleaning dust and pet hair from a bed surface.



Image 3.3: The main motorized brush with LED lights effectively cleaning debris from a carpeted floor, indicating deep cleaning capability.



Image 3.4: A collage showing the multi-functional applications of the vacuum, such as cleaning high ceilings, beds, car interiors, and under furniture.

4. Setup and Assembly

4.1 Assembly

1. **Attach the Extension Tube:** Insert the extension tube into the main vacuum unit until it clicks securely into place.
2. **Attach the Floor Brush:** Connect the motorized floor brush to the other end of the extension tube, ensuring it locks.
3. **Attach Other Accessories:** For handheld use, attach the desired accessory (e.g., crevice nozzle, 2-in-1 brush, mini motorized brush) directly to the main unit.

4.2 Charging the Battery

The battery can be charged while attached to the main unit or independently.

1. Connect the charging adapter to a power outlet.
2. Plug the charging adapter into the charging port on the main unit or the separate battery charging base.
3. The battery indicator lights will show the charging status. A full charge typically takes several hours.

4. Ensure the vacuum is turned off during charging.



Image 4.1: The two available charging methods for the Dibe DT10 battery: directly plugging into the vacuum or using a separate charging dock for the detached battery.

5. Operating Instructions

5.1 Power On/Off and Suction Modes

- Press the power button to turn the vacuum cleaner on. It will start in the standard suction mode.
- Press the mode button (if available) to switch between standard and max suction modes.
- Press the power button again to turn the vacuum cleaner off.

5.2 Using Attachments

- **Motorized Floor Brush:** Ideal for cleaning large areas of hard floors and carpets. The LED lights assist in illuminating dust in dark corners.
- **Mini Motorized Brush:** Use for deep cleaning upholstery, pet beds, mattresses, and car seats to remove embedded dust and pet hair.
- **Long Crevice Nozzle:** Perfect for reaching narrow gaps, corners, and tight spaces, such as between sofa cushions or along baseboards.

- **2-in-1 Bristle Brush:** Can be used as a soft brush for delicate surfaces or extended as a stiff brush for more stubborn dirt on various surfaces like car interiors, stairs, and shelves.

6. Maintenance

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

6.1 Emptying the Dust Bin

1. Ensure the vacuum is turned off.
2. Press the dust bin release button to detach the dust cup from the main unit.
3. Hold the dust cup over a trash bin and press the bottom release latch to open the dust cup and empty its contents.
4. Close the dust cup bottom and reattach it to the main unit until it clicks.

6.2 Cleaning the Filter System

The washable sponge filter and metal pre-filter should be cleaned regularly to maintain suction power.

1. Remove the dust bin as described above.
2. Twist and pull out the filter assembly from the dust bin.
3. Separate the sponge filter from the metal pre-filter.
4. Rinse both filters under running water until the water runs clear. Do not use detergent.
5. Allow the filters to air dry completely for at least 24 hours before reassembling. Do not use a dryer or direct heat.
6. Reassemble the filters and place them back into the dust bin, then reattach the dust bin to the main unit.



Image 6.1: Step-by-step visual guide on how to detach the dust cup, remove the filter components, and clean them under water.

6.3 Cleaning the Brush Roll

- Turn off the vacuum and detach the motorized floor brush.
- Locate the brush roll access latch on the side or bottom of the brush head. Open it to remove the brush roll.
- Remove any tangled hair, threads, or debris from the brush roll using scissors or a cleaning tool.
- Reinsert the clean brush roll and secure the access latch.

7. Troubleshooting

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged; Battery not properly installed; Power button malfunction.	Charge the battery; Ensure battery is securely clicked into place; Contact customer service.

Problem	Possible Cause	Solution
Low suction power	Dust bin is full; Filter is clogged; Nozzle/tube is blocked.	Empty the dust bin; Clean the filter system; Check and clear any blockages in the nozzle or extension tube.
Brush roll not spinning	Brush roll is tangled with hair/debris; Brush head is blocked; Connection issue.	Clean the brush roll; Clear any blockages in the brush head; Ensure the brush head is securely attached.
Battery life is short	Battery not fully charged; Battery degradation; Operating in Max suction mode constantly.	Ensure battery is fully charged; Consider replacing battery if old; Use standard mode for longer runtime.

8. Specifications

Feature	Detail
Brand	Dibea
Model Number	DT10
Suction Power	15000Pa
Wattage	150.00W
Battery Type	2200mAh, 22.2V Lithium Ion
Runtime (Max Speed)	Up to 25 minutes
Dust Bin Capacity	0.55 Liters
Filter Type	Washable Sponge Filter with Metal Pre-filter
Noise Level	70 Decibels
Product Dimensions	7.48 x 9 x 27.17 inches
Item Weight	2.86 pounds
Connectivity Technology	USB (for charging adapter)

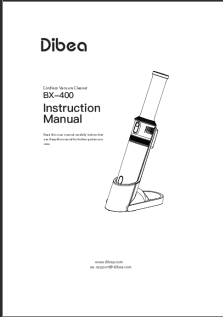
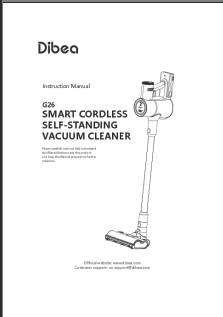
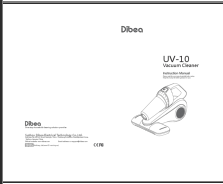
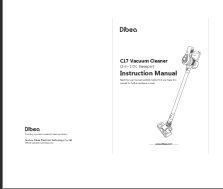

9. Warranty and Customer Support

Dibea provides a **12-month warranty** for this product, covering manufacturing defects from the date of purchase.

For any questions, technical assistance, or warranty claims, please contact Dibea customer service. Lifetime customer service is available to assist you.

Please refer to the contact information provided on the product packaging or the official Dibea website for the most up-to-date support details.

Related Documents - DT10

	<p>Dibeas BX-400 Cordless Vacuum Cleaner Instruction Manual</p> <p>Official instruction manual for the Dibeas BX-400 Cordless Vacuum Cleaner, covering setup, operation, maintenance, troubleshooting, product specifications, and warranty information.</p>
	<p>Dibeas G26 Smart Cordless Self-Standing Vacuum Cleaner Instruction Manual</p> <p>Comprehensive instruction manual for the Dibeas G26 Smart Cordless Self-Standing Vacuum Cleaner, covering assembly, operation, charging, cleaning, maintenance, troubleshooting, specifications, and warranty information.</p>
	<p>Dibeas UV-10 Vacuum Cleaner Instruction Manual</p> <p>Comprehensive instruction manual for the Dibeas UV-10 Vacuum Cleaner, detailing its features, operation, maintenance, and troubleshooting. Includes safety instructions and warranty information.</p>
	<p>Dibeas C17 Vacuum Cleaner: Instruction Manual & User Guide</p> <p>This is the instruction manual for the Dibeas C17 Vacuum Cleaner (2-in-1 DC Sweeper). It provides essential safety precautions, details on components, product installation and operation, troubleshooting tips, and technical specifications for optimal use and maintenance.</p>
	<p>Dibeas D500 Pro Robot Vacuum Cleaner Instruction Manual</p> <p>Comprehensive instruction manual for the Dibeas D500 Pro Robot Vacuum Cleaner, covering safety, maintenance, operation, and specifications.</p>