



Manuals.plus /

› Farberware /

› Farberware FCD06ABBWHA Portable Countertop Dishwasher Instruction Manual

Farberware FCD06ABBWHA

Farberware FCD06ABBWHA Portable Countertop Dishwasher Instruction Manual

Model: FCD06ABBWHA

1. INTRODUCTION

The Farberware Portable Countertop Dishwasher is designed for convenience and efficiency in small living spaces such as kitchens, apartments, RVs, and during camping trips. This compact appliance offers a powerful 7-program system to ensure thorough cleaning of various items, from delicate glassware to baby bottles. It can be connected to a water hookup or manually filled, providing flexibility for your lifestyle.

IDEAL FOR HOME OR TRAVEL



Figure 1: The Farberware Portable Countertop Dishwasher is suitable for diverse small living environments.

2. PRODUCT FEATURES

- **Compact and Portable:** Ideal for small kitchens, apartments, RVs, and boats. Accommodates dishes up to 10 inches in diameter.
- **Versatile Cleaning Options:** Features 7 wash cycles including Heavy, Normal, Baby Care, Light, Glass, Speed 45Min, and Self Clean.
- **Time-Saving Convenience:** Offers quick and efficient dishwashing solutions.
- **Easy to Use and Maintain:** Equipped with a user-friendly LED display, simple controls, and a self-cleaning option.
- **Baby Care Function:** Specifically designed to steam-clean and sterilize baby bottles.
- **Glass Program:** Ensures sparkling clean glassware.



QUIET WASHING CYCLE

7 WASH PROGRAMS

BABY CARE FUNCTION

DIGITAL TOUCH CONTROLS

CUTLERY RACK

Figure 2: Key features of the dishwasher, including its interior layout and program options.

3. WHAT'S IN THE BOX

Upon unpacking, ensure all components are present:

- Farberware Portable Countertop Dishwasher Unit
- Dish Rack
- Cutlery Basket
- Water Inlet Hose
- Drain Hose
- Water Pitcher (for manual filling)
- Water Funnel (for manual filling)

4. SETUP

4.1 Placement

Place the dishwasher on a stable, level countertop or surface. Ensure there is adequate space around the unit for ventilation and access to the water inlet and drain connections. The compact design allows for flexible placement in various settings.

COMPACT AND CONVENIENT



Figure 3: Product dimensions for proper placement.

4.2 Water Connection

The dishwasher offers two methods for water supply:

- **Direct Hookup:** Connect the water inlet hose to a compatible kitchen faucet or water line. Ensure all connections are tight to prevent leaks.
- **Manual Fill:** If a direct hookup is not desired or available, use the provided water pitcher and funnel to manually pour water into the designated opening on top of the unit. The dishwasher will signal when the water tank is full.

4.3 Drainage

Connect the drain hose to a suitable drainage point. This can be directly into a sink using the provided suction cup or into a bucket for portable use. Ensure the drain hose is securely positioned to prevent water spillage.

4.4 Power Connection

Plug the dishwasher into a standard 110-volt electrical outlet.

5. OPERATING INSTRUCTIONS

5.1 Loading Dishes

Arrange dishes in the provided dish rack and cutlery basket. Ensure items are not blocking the spray arms or detergent dispenser. The dishwasher can accommodate various dish sizes, including plates up to 10 inches in diameter.



Figure 4: Example of a loaded dishwasher interior.

5.2 Adding Detergent and Rinse Aid

Locate the detergent dispenser on the inner side of the door. Add the recommended amount of professional dishwasher detergent (liquid or powder). If using rinse aid, fill the rinse aid dispenser as per the instructions in the full user manual.

5.3 Selecting a Wash Program

Use the touch controls on the LED display to select your desired wash program. The available programs include:

- **Heavy (P1):** For heavily soiled dishes.
- **Normal (P2):** Standard wash for everyday dishes.

- **Baby Care (P3):** For sterilizing baby bottles and items.
- **Light (P4):** For lightly soiled dishes.
- **Glass (P5):** Gentle wash for delicate glassware.
- **Speed 45Min (P6):** Quick wash cycle.
- **Self Clean (P7):** For cleaning the dishwasher itself.



Figure 5: LED control panel with program options.

5.4 Starting a Cycle

Close the dishwasher door firmly. Press the 'Start' button to begin the selected wash cycle. The LED display will show the remaining time.

5.5 Drying Options

Most wash programs include a drying phase. The dishwasher may also feature an 'Air Refresh' or similar function to ensure dishes are thoroughly dried and odors are prevented.

6. MAINTENANCE

6.1 Cleaning the Filter

Regularly clean the filter located at the bottom of the dishwasher to ensure optimal performance. Remove any food debris and rinse the filter under running water. Reinstall securely.

6.2 General Cleaning

Wipe down the interior and exterior of the dishwasher with a damp cloth. For stubborn stains, use a mild detergent. Do not use abrasive cleaners.

6.3 Self-Cleaning Option

Utilize the 'Self Clean' program (P7) periodically to maintain the cleanliness and hygiene of the dishwasher's internal components.

7. TROUBLESHOOTING

- **Dishwasher not starting:** Ensure the power cord is securely plugged in and the door is completely closed. Check if the water tank is sufficiently filled (if using manual fill).
- **Water leaks:** Verify that the water inlet and drain hoses are securely connected and tightened. Ensure the drain hose is properly positioned in the sink or bucket.
- **Dishes not clean:** Check that dishes are loaded correctly and not obstructing spray arms. Ensure the correct amount of detergent is used and the filter is clean.
- **Dishwasher making unusual noise:** Ensure the spray arms are not hitting any dishes. Check for foreign objects in the filter or pump area.
- **Water not draining:** Check the drain hose for kinks or blockages. Clean the filter.

For more detailed troubleshooting, please refer to the comprehensive user manual or contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Farberware
Model Number	FCD06ABBWHA
Form Factor	Countertop
Product Dimensions (D x W x H)	19.7" x 21.7" x 17.2"
Item Weight	44.1 Pounds
Voltage	110 Volts
Option Cycles	7
Display Type	LED
Controls Type	Touch
Special Features	Compact, Digital Display, Portable

9. WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the documentation

included with your purchase or visit the official Farberware website. Customer support is available to assist with any questions or concerns regarding your dishwasher.