

CLEANmaxx 08658

CLEANmaxx Automatic Shirt Ironing Machine User Manual

Model: 08658

1. INTRODUCTION

The CLEANmaxx Automatic Shirt Ironing Machine is an innovative appliance designed to dry and iron shirts, blouses, and trousers effortlessly, eliminating the need for traditional ironing. This manual provides detailed instructions for safe and efficient operation, maintenance, and troubleshooting.

Key features include:

- Automatic drying and ironing for wrinkle-free results.
- Two ironing programs: steam ironing for dry garments and dry ironing for damp garments.
- Includes a special accessory for ironing trousers.
- Replaces conventional irons, ironing systems, and steamers.

2. SAFETY INSTRUCTIONS

Please read all safety instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the appliance is connected to a grounded power outlet with the correct voltage (240V).
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep the appliance out of reach of children and pets.
- Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been dropped.
- Always unplug the appliance from the power outlet before cleaning or when not in use.
- Use the appliance only for its intended purpose as described in this manual.
- Ensure adequate ventilation during operation, especially when using the steam function.
- Do not touch hot surfaces. Use handles or knobs.

- Never leave the appliance unattended while in operation.
- Only use original CLEANmaxx accessories and spare parts.

3. PRODUCT COMPONENTS

Familiarize yourself with the main components of your CLEANmaxx Automatic Shirt Ironing Machine:

- Main Unit (Base with motor and water tank)
- Inflatable Mannequin (for shirts and blouses)
- Adjustable Support Rods
- Trouser Accessory (inflatable leg forms)
- Control Panel (Timer, On/Off, Program Selection)



Figure 3.1: Overview of the CLEANmaxx Automatic Shirt Ironing Machine in operation, showing steam distribution within a shirt.





Figure 3.2: The adjustable height feature of the mannequin support, allowing for different garment lengths.





4. SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Assembly of Main Unit:**
 - a. Place the main unit on a stable, flat surface.
 - b. Insert the adjustable support rods into the designated slots on the main unit. Ensure they are securely locked in place.
3. **Attaching the Mannequin:**
 - a. Slide the inflatable mannequin over the support rods. The mannequin should fit snugly around the base of the main unit.
 - b. Ensure the mannequin is properly aligned and secured to prevent air leakage during operation.



Figure 4.1: The inflatable mannequin cover, ready for a shirt or blouse.

4. Filling the Water Tank (for Steam Function):

- a. Locate the water tank inlet on the main unit.
- b. Fill the tank with distilled water. Do not overfill.
- c. Close the inlet securely.

5. OPERATING INSTRUCTIONS

5.1. Ironing Shirts and Blouses

1. Prepare the garment: Ensure the shirt or blouse is clean. For best results, it can be slightly damp or dry.
2. Place the garment: Carefully pull the shirt or blouse over the inflatable mannequin. Button up the shirt if applicable. Ensure the fabric is evenly distributed and not bunched up.
3. Select Program:
 - a. For dry garments or refreshing: Select the **Steam Ironing Program**. This program uses steam to remove wrinkles and refresh the fabric.
 - b. For damp garments: Select the **Dry Ironing Program**. This program uses hot air to dry and smooth the fabric simultaneously.
4. Set Timer: Use the control panel to set the desired operating time. Start with a shorter time and adjust as needed based on fabric type and dampness.
5. Start Operation: Press the On/Off button to start the machine. The mannequin will inflate, and hot air/steam will circulate.
6. Completion: Once the timer finishes, the machine will stop. Allow the garment to cool slightly before removing it from the mannequin.

5.2. Ironing Trousers (with optional accessory)

1. Attach Trouser Accessory: Remove the shirt mannequin. Attach the inflatable trouser accessory to the main unit according to the accessory's instructions.
2. Place the garment: Carefully pull the trousers over the inflatable leg forms of the accessory. Ensure the fabric is evenly distributed.
3. Select Program: Typically, the Dry Ironing Program is suitable for trousers, especially if they are damp from washing.
4. Set Timer: Adjust the timer as needed for trousers.
5. Start Operation: Press the On/Off button. The trouser forms will inflate, and hot air will circulate.
6. Completion: Once finished, allow the trousers to cool before removing.



Figure 5.1: The trouser accessory in use, showing hot air circulation for drying and ironing.





Figure 5.2: The inflatable trouser accessory, designed to fit onto the main unit for ironing pants.

6. MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your CLEANmaxx Automatic Shirt Ironing Machine.

- **Cleaning the Main Unit:**

- a. Always unplug the appliance before cleaning.
- b. Wipe the exterior of the main unit with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- c. Ensure no water enters the electrical components.

- **Draining the Water Tank:**

- a. If the appliance will not be used for an extended period, drain any remaining water from the tank to prevent mineral buildup.

- **Cleaning the Mannequin/Accessory:**

- a. The inflatable mannequin and trouser accessory can be wiped clean with a damp cloth.
- b. Ensure they are completely dry before storing.

- **Storage:** Store the appliance in a cool, dry place, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

If you encounter any issues with your CLEANmaxx Automatic Shirt Ironing Machine, please refer to the following table before contacting customer support.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; Power outlet malfunction; Damaged power cord.	Check power connection; Try a different outlet; Inspect power cord for damage (do not use if damaged).
Mannequin does not inflate properly.	Mannequin not securely attached; Air leakage; Motor issue.	Ensure mannequin is properly sealed at the base; Check for tears or holes in the mannequin; Contact customer support if motor issue suspected.
Garments are still wrinkled.	Incorrect program selected; Insufficient operating time; Garment too dry for steam program; Garment too wet for dry program.	Ensure correct program for garment dampness; Increase operating time; Lightly dampen garment for steam program; Pre-dry very wet garments for dry program.
No steam produced.	Water tank empty; Steam function not selected.	Fill water tank; Ensure Steam Ironing Program is selected.
Unusual noise or smell.	Internal malfunction.	Immediately unplug the appliance and discontinue use. Contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	CLEANmaxx
Model Number	08658
Color	White with pant accessory
Product Dimensions (L x W x H)	16.9 x 41.2 x 108 cm
Weight	920 grams

Feature	Detail
Power	1800 Watts
Voltage	240V
Material	Plastic
ASIN	B07VN4TDL3
Manufacturer	DS Produkte GmbH
Country of Origin	China

9. WARRANTY AND SUPPORT

CLEANmaxx products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or contact your retailer. For technical support, spare parts, or service inquiries, please contact CLEANmaxx customer service. Contact details can typically be found on the product packaging or the manufacturer's official website. *Please retain your proof of purchase for warranty claims.*

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question