

[Manuals.plus](#) /

› [Deco Gear](#) /

› Deco Gear Gaming Accessory Bundle User Manual

Deco Gear E1DGMECHBRD100

Deco Gear Gaming Accessory Bundle User Manual

MODEL: E1DGMECHBRD100

Brand: Deco Gear

PRODUCT OVERVIEW

This manual provides comprehensive instructions for the Deco Gear Gaming Accessory Bundle, which includes a mechanical RGB gaming keyboard, an RGB gaming mouse, and an extended gaming mouse pad. This bundle is designed to enhance your gaming experience with responsive controls and customizable RGB lighting.



Image: The complete Deco Gear Gaming Accessory Bundle, showcasing the mechanical RGB keyboard, RGB gaming mouse, and the extended gaming mouse pad.

SETUP GUIDE

1. Keyboard Setup

1. Unpack the mechanical RGB keyboard from its packaging.
2. Connect the keyboard's USB cable to an available USB port on your computer.
3. The keyboard will automatically install necessary drivers. Wait for the installation to complete.
4. The RGB backlighting will illuminate upon successful connection.

2. Mouse Setup

1. Remove the RGB gaming mouse from its packaging.
2. Connect the mouse's USB cable to another available USB port on your computer.

3. The mouse will also install its drivers automatically.
4. The RGB lighting on the mouse will activate once connected.

3. Mouse Pad Placement

1. Unroll the extended gaming mouse pad.
2. Place it on a flat, clean surface where you intend to use your keyboard and mouse. The non-slip rubber base will ensure it stays firmly in place.

OPERATING INSTRUCTIONS

Keyboard Operation

The Deco Gear mechanical keyboard features Outemu Blue Switches for a responsive feel and anti-ghosting technology for accurate key registration.

RGB Backlight Modes

The keyboard offers 18 RGB backlight modes and 6 themed backlight modes. To cycle through these modes, press the **FN** key in combination with the **INS**, **HOME**, **PGUP**, **DEL**, **END**, or **PGDN** keys.



RGB BACKLIGHT MODES

6 Themed Backlight Modes & 18 Light Variations

Press FN + INS - PgDn to change modes.



Image: Illustration of the keyboard's FN key and the Insert, Home, Page Up, Delete, End, and Page Down keys, which are used in combination to change RGB backlight modes.

Key Functions

Standard QWERTY layout with a full numeric keypad. Function keys (F1-F12) may have secondary multimedia or system control functions when pressed with the **FN** key. Refer to the keycap legends for specific functions.

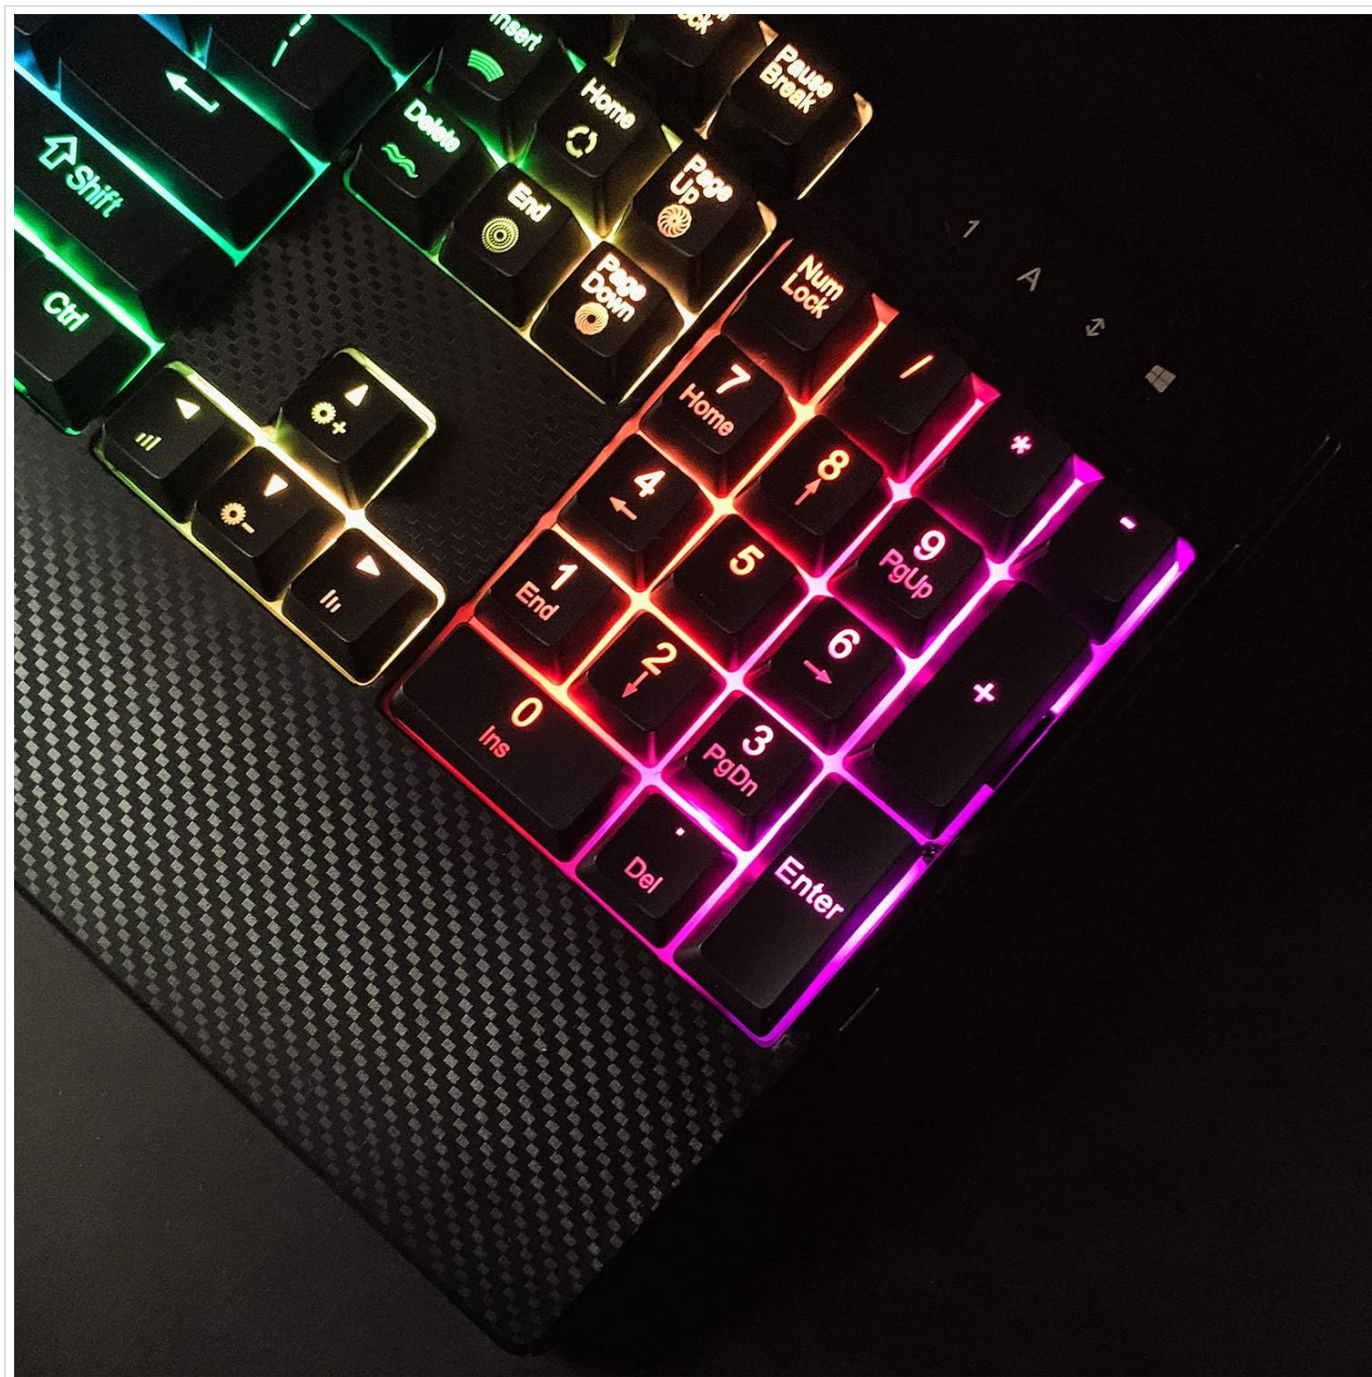


Image: A close-up view of the numeric keypad section of the keyboard, illuminated with vibrant RGB lighting.

Mouse Operation

The Deco Gear gaming mouse features an ergonomic design with adjustable DPI settings and a high polling rate for precision.

RGB Lighting Modes

The mouse has 11 themed RGB lighting modes. To change modes, press the Mouse Scroll Wheel (B3) and Mouse Button 5 (B5) simultaneously.



RGB BACKLIGHT MODES

11 Themed Backlight Modes

Press Mouse Scroll Wheel (B3) + Mouse Button 5 (B5)
to change modes.



Image: A detailed view of the gaming mouse, highlighting the scroll wheel (B3) and Mouse Button 5 (B5), which are used to cycle through the 11 RGB lighting modes.

DPI Adjustment

Adjust the mouse sensitivity (DPI) by pressing the dedicated DPI button located on top of the mouse. Available DPI settings include 800, 1200, 1800, 2500, 3200, and 5000 DPI. The mouse also features a polling rate of 1000 Hz.



Image: A close-up of the gaming mouse, with the DPI button clearly marked, indicating its function for adjusting sensitivity.

Programmable Buttons

The mouse features six buttons that can be programmed for custom functions, allowing for personalized control and efficiency in gaming. Refer to your operating system's mouse settings or third-party software for advanced customization.



Image: A side profile of the gaming mouse, showcasing its ergonomic shape and the vibrant RGB lighting along its base.

Mouse Pad Features

The extended gaming mouse pad provides a large, smooth surface for optimal mouse movement and precision. It features a non-slip rubber base and durable stitched edges.



Non-Slip Rubber Base

Dense shading and anti-slip natural rubber base can firmly grip surface



Durable Stitched Edges

Prevent wear and tear, durability ensures extended use without deformation, crimping, and degumming



12 inches

32 inches

Washable & Fade Resistant

Our multispandex locks in color, and prevents fading



Fast & Accurate Control

The smooth texture provides a slick surface ideal for quick movement and precision

Image: A visual breakdown of the mouse pad's features, including its non-slip rubber base, durable stitched edges, and washable, fade-resistant material.



USER ADJUSTABLE DPI

Press the DPI button to adjust up to 5000 DPI.

This mouse also has a polling rate of 1000 Hz



DPI Button

(800/1200/1800/2500/3200/5000)

Image: The extended mouse pad partially rolled up, clearly showing the textured non-slip rubber base designed to grip surfaces firmly.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your gaming accessories.

- **Keyboard:** Use a soft, dry cloth to wipe down the keycaps and frame. For deeper cleaning, use compressed air to remove dust and debris from between the keys. Avoid liquid cleaners directly on the keyboard.
- **Mouse:** Clean the mouse surface with a soft, slightly damp cloth. Ensure no liquid enters the internal components. Regularly clean the optical sensor area on the bottom of the mouse with a cotton swab to maintain tracking accuracy.
- **Mouse Pad:** The mouse pad is washable and fade-resistant. For cleaning, hand wash with mild soap and cold water. Air dry completely before use. Do not machine wash or tumble dry.

TROUBLESHOOTING

If you encounter issues with your Deco Gear Gaming Accessory Bundle, refer to the following common solutions:

Problem	Possible Cause / Solution
Keyboard/Mouse not responding	• Ensure USB cables are securely plugged into the computer's USB ports. • Try connecting to a different USB port. • Restart your computer. • Check device manager for driver issues.
RGB lights not working or incorrect	• For keyboard: Press FN + INS/HOME/PGUP/DEL/END/PGDN to cycle through modes. • For mouse: Press Scroll Wheel (B3) + Mouse Button 5 (B5) simultaneously to change modes. • Ensure the devices are properly connected and receiving power.
Mouse tracking issues / erratic cursor	• Clean the optical sensor on the bottom of the mouse. • Ensure the mouse pad surface is clean and free of debris. • Adjust DPI settings using the DPI button on the mouse.

SPECIFICATIONS

Feature	Detail
Product Dimensions	17.4 x 7.3 x 1.5 inches (Keyboard)
Item Weight	4 pounds (Bundle)
Model Number	E1DGMECHBRD100
Keyboard Type	Mechanical (Outemu Blue Switches)
Keyboard Backlight	18 RGB Backlit Modes
Mouse Backlight	11 RGB Lighting Modes
Mouse DPI Settings	800/1200/1800/2500/3200/5000
Mouse Polling Rate	1000 Hz
Mouse Pad Dimensions	32" x 12"
Connectivity Technology	Wired (USB)
Compatible Devices	Personal Computer

WARRANTY AND SUPPORT

Warranty Information

Deco Gear products are backed by a Full 1 Year Manufacturer's Limited Protection Plan. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please visit the official Deco Gear website or contact their customer support. You can find more information and contact details on the [Deco Gear Store Page](#).

© 2023 Deco Gear. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page
<https://manuals.plus/asin/B07VNBMHSL>
More documents and user manuals: <https://manuals.plus/>