

WINIA KOR-16SSM

WINIA KOR-16SSM Microwave Oven

Model: KOR-16SSM - User Instruction Manual

1. INTRODUCTION

Thank you for purchasing the WINIA KOR-16SSM Microwave Oven. This appliance is designed for convenient and efficient cooking, reheating, and defrosting of various food items. Please read this manual carefully before operating your new microwave oven to ensure safe and optimal performance. Keep this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Always ensure the turntable and roller ring are correctly positioned before operation.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Never use the oven for deep-frying.
- Do not use corrosive chemicals or vapors in this appliance.
- This appliance is designed for heating food. It is not designed for industrial or laboratory use.

3. SETUP AND INSTALLATION

1. **Unpacking:** Carefully remove the microwave oven from its packaging. Remove all packing materials, including any protective film or tape. Inspect the oven for any damage.
2. **Placement:** Place the microwave oven on a flat, stable, heat-resistant surface, such as a countertop. Ensure there is adequate ventilation space around the oven: at least 10 cm (4 inches) at the rear, 20 cm (8 inches) on the sides, and 30 cm (12 inches) above.
3. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the specifications of the oven (110 Volts). Do not use extension cords or adapters.
4. **Turntable Installation:** Place the roller ring in the center of the oven cavity. Then, place the glass turntable securely on top of the roller ring. Ensure it rotates freely.

4. OPERATING INSTRUCTIONS

Your WINIA KOR-16SSM microwave oven features a touch control panel for easy operation.

4.1 Basic Cooking

1. Place food in a microwave-safe container on the turntable.
2. Close the oven door securely.
3. Select the desired cooking time and power level using the touch controls.
4. Press the 'Start' button to begin cooking.

4.2 Quick Start Function

The quick start button allows for immediate cooking at full power for a set duration, typically 30 seconds or 1 minute per press. Press the 'Quick Start' button repeatedly to add more time in increments.

4.3 Defrost Function

The defrost function allows you to thaw frozen food efficiently.

1. Place the frozen food in the oven.
2. Press the 'Defrost' button.
3. Enter the weight of the food or select the appropriate defrost setting based on the food type.
4. Press 'Start'. The oven may prompt you to turn the food over halfway through the defrost cycle.

4.4 Timer Function

The timer can be used independently as a kitchen timer or to set a delayed start for cooking.

- **Kitchen Timer:** Press the 'Timer' button, enter the desired time, and press 'Start'. The oven will count down without cooking.
- **Delayed Start:** Set your cooking program first, then press 'Timer', enter the delay time, and press 'Start'. The oven will wait for the delay time to elapse before starting the cooking program.

4.5 Child Safety Lock

To prevent unintended operation, especially by children, activate the child safety lock.

- **To Activate:** Press and hold the 'Stop/Cancel' button for approximately 3 seconds until a lock indicator appears on the display.
- **To Deactivate:** Press and hold the 'Stop/Cancel' button again for approximately 3 seconds until the lock indicator disappears.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and efficient operation of your microwave oven.

- **Interior Cleaning:** After each use, wipe the interior with a damp cloth. For stubborn stains, use a mild detergent. Never use abrasive cleaners or scouring pads.
- **Exterior Cleaning:** Clean the exterior surface with a soft, damp cloth. Avoid getting water into the ventilation openings.
- **Door and Seals:** Keep the door seals and adjacent parts clean. Wipe them regularly with a damp cloth to remove any spills or splatters.
- **Turntable and Roller Ring:** The glass turntable and roller ring can be removed for cleaning. Wash them in warm, soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.
- **Odor Removal:** To remove odors, combine a cup of water with several lemon slices or a tablespoon of vinegar in a microwave-safe bowl. Heat on high for 5-7 minutes, then let it sit in the oven for a few minutes before wiping the interior.

6. TROUBLESHOOTING

If you encounter any issues with your microwave oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not start	Power cord unplugged; Door not closed properly; Child lock activated; Blown fuse/tripped circuit breaker	Ensure plug is firmly in outlet; Close door securely; Deactivate child lock; Check household fuse/circuit breaker
Food not cooking evenly	Food not stirred/rotated; Incorrect power level/cooking time; Turntable not rotating	Stir or rotate food during cooking; Adjust power/time; Ensure turntable and roller ring are correctly placed
Light inside oven not working	Bulb needs replacement	Contact qualified service personnel for bulb replacement
Unusual noise during operation	Turntable or roller ring not correctly positioned; Debris under turntable	Reposition turntable/roller ring; Clean oven cavity and under turntable

If the problem persists after trying these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	WINIA
Model Number	KOR-16SSM

Feature	Specification
Color	Black
Product Dimensions (L x W x H)	50.8 x 25.4 x 38.1 cm (20 x 10 x 15 inches)
Product Weight	8 kg (17.6 lbs)
Capacity	1.6 Cubic Feet
Power Output	110 Watts
Voltage	110 Volts
Material	Aluminum
Installation Type	Countertop
Control Type	Touch
Special Feature	Easy to Clean Interior

8. WARRANTY AND SUPPORT

WINIA products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official WINIA website. For technical support, service, or replacement parts, please contact WINIA customer service.

Please have your model number (KOR-16SSM) and purchase date ready when contacting support.