

Simply Smart Home FSM010BL

Simply Smart Home Photoshare 10-inch WiFi Digital Picture Frame User Manual

Model: FSM010BL

INTRODUCTION

This manual provides comprehensive instructions for setting up, operating, and maintaining your Simply Smart Home Photoshare 10-inch WiFi Digital Picture Frame. This device allows you to easily share photos and video clips from your phone to the frame, keeping you connected with loved ones.

WHAT'S IN THE BOX

- Photoshare 10-inch WiFi Digital Picture Frame
- Power Adapter
- Frame Stand

SETUP

Setting up your Photoshare frame is designed to be quick and easy, typically taking less than one minute.

1. **Connect Power:** Plug the power adapter into the DC Power Port on the back of the frame and then into a wall outlet. The frame will power on automatically.
2. **Position the Frame:** Attach the included stand to the back of the frame. The frame can be positioned vertically or horizontally, and the display will automatically adjust. Alternatively, the frame can be wall-mounted.
3. **Download the App:** Download the free PhotoShare Frame App on your smartphone (available for iPhone and Android devices).
4. **Connect to Wi-Fi:** Follow the on-screen instructions on the frame to connect it to your home Wi-Fi network. This enables the frame to receive photos and videos from anywhere.
5. **Pair with App:** Open the PhotoShare Frame App and follow the instructions to pair your smartphone with the digital picture frame using its unique Frame ID.

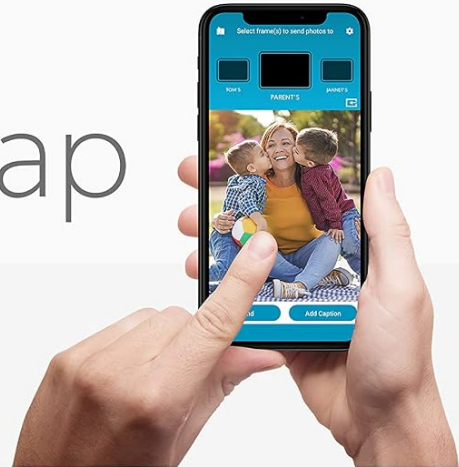


Image: Back of the frame with SD Card port, USB Port, Micro USB Port, DC Power Port, and Stand.

Snap




Tap



Share



Parent's

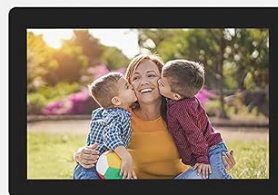

Friend's



Grandparent's

Image: The Simply Smart Home Photoshare frame displaying a family photo, ready for use.

Video: Official overview of the PhotoShare Friends and Family Smart Frame, demonstrating its ease of use and connectivity.

OPERATING INSTRUCTIONS

Sending Photos and Videos

The Photoshare frame allows you to send photos and video clips from your smartphone using multiple methods:

- **PhotoShare Frame App:** Use the dedicated app to select and send photos or videos directly to your frame. You can select specific frames if you have multiple, and invite friends and family to share their photos too.
- **Email:** Each frame has a unique email address. You can send photos and videos to this email address, and they will appear on the frame.
- **Google Photos:** Integrate with Google Photos to easily share content.

Touchscreen Navigation and Settings

The 10.1-inch HD touchscreen display provides intuitive control over your frame's functions.

- **Photo Display:** Tap the screen once to reveal options for rotating, scaling, playing, deleting, and zooming photos.

- **Slideshow Settings:** Access settings to customize transition effects (e.g., random), slideshow intervals (e.g., 10 seconds), and background music.
- **Additional Features:** The frame can display a calendar, clock, and local weather information.
- **Storage Management:** The frame includes 8 GB of internal storage, capable of holding over 5,000 photos. You can manage stored content and monitor usage through the settings.

Send Photos, Share Smiles

Bring your photos out of your phone and into your life!



Image: The PhotoShare app interface on a smartphone, showing how to select and send photos to connected frames.

Video: Simply Smart Home Brand Video, showcasing the ease of sharing memories with the PhotoShare frame.

MAINTENANCE

To ensure the longevity and optimal performance of your digital picture frame, follow these maintenance guidelines:

- **Cleaning:** Gently wipe the screen with a soft, dry, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water or a screen-safe cleaner. Avoid harsh chemicals.
- **Software Updates:** Periodically check for and install firmware updates through the frame's settings menu to ensure you have the latest features and security enhancements.
- **Placement:** Place the frame on a stable surface away from direct sunlight, excessive heat, or moisture to prevent damage.

TROUBLESHOOTING

If you encounter issues with your Photoshare frame, refer to the following common solutions:

- **Frame Not Connecting to Wi-Fi:** Ensure your Wi-Fi network is active and the password is correct. Try restarting your router and the frame.
- **Photos Not Appearing:** Verify that photos were successfully sent from the app or email. Check the frame's storage to ensure there is available space.
- **Display Issues:** If the screen is unresponsive or frozen, try restarting the frame by unplugging it and plugging it back in after a few seconds.

- **Automatic Rotation Not Working:** Ensure the frame is placed on a stable surface and not being moved excessively. Check for any specific rotation settings in the frame's menu.

For further assistance, please contact Simply Smart Home customer support.

SPECIFICATIONS

Brand	Simply Smart Home
Model Number	FSM010BL
Screen Size	10.1 Inches
Resolution	720p
Internal Storage	8 GB (Holds 5,000+ Photos)
Connectivity	WiFi
Compatible Devices	iPhone, Android
Product Dimensions	14.86 x 10.6 x 2.16 inches
Item Weight	3.1 pounds
Color	Black

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please refer to the official Simply Smart Home website or contact their customer service directly. Contact details can typically be found on the manufacturer's packaging or website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How can I download existing pictures from the Simply Smart Home Photoshare FSM010BL to save them on an SD card?

Based on the manual for the Simply Smart Home Photoshare FSM010BL, the device includes an SD card port and a Storage Management section within the settings menu. While the manual primarily focuses on sending...

[Read full answer](#)

Open the live page

<https://manuals.plus/asin/B07VNMTFHQ>

More documents and user manuals: <https://manuals.plus/>