

[Manuals.plus](#) /

› [UBay](#) /

› UBay LG AKB75055701 TV Remote Control User Manual

UBay AKB75055701

UBay LG AKB75055701 TV Remote Control User Manual

Model: AKB75055701

INTRODUCTION

This manual provides instructions for the UBay AKB75055701 replacement remote control, designed for various LG LCD/LED Smart TV models. This remote functions as a direct replacement and does not require programming for most compatible LG televisions.

PACKAGE CONTENTS

- 1 x UBay AKB75055701 IR Remote Control

Note: Batteries and user manual are not included in the package. This document serves as the user manual.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open.
3. Insert two (2) new AAA 1.5V Alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.

Once batteries are installed, the remote control is ready for use with compatible LG TVs without additional programming.





Image: Rear view of the remote control, highlighting the battery compartment. This is where two AAA batteries are inserted for operation.

The UBay AKB75055701 remote control is designed to replicate the functions of the original LG remote. Point the remote control directly at your LG TV's infrared receiver for optimal performance.





Image: Front view of the UBay AKB75055701 remote control, displaying all buttons and their labels. This remote features standard TV control buttons including power, volume, channel, navigation, and smart TV functions.

Key Functions:

- **Power ():** Turns the TV on or off.
- **TV/PC:** Switches between TV and PC input modes.
- **CAPTION:** Activates or deactivates closed captions.
- **AV MODE:** Selects audio/video input modes.
- **RATIO:** Adjusts the screen aspect ratio.
- **INPUT:** Cycles through available input sources (HDMI, AV, etc.).
- **Number Buttons (0-9):** Direct channel selection.
- **LIST:** Displays the channel list.
- **FLASHBK:** Returns to the previously viewed channel.
- **VOL (+/-):** Adjusts the volume level.
- **CH PAGE (+/-):** Changes channels up or down.
- **FAV:** Accesses favorite channels.
- **3D:** Activates or deactivates 3D mode (if supported by TV).
- **MUTE ():** Mutes or unmutes the TV audio.
- **SMART ():** Opens the Smart TV home menu or app launcher.
- **MY APPS:** Accesses custom or frequently used applications.
- **GUIDE:** Displays the electronic program guide (EPG).
- **SETTINGS:** Opens the TV settings menu.
- **Q.MENU:** Accesses the Quick Menu for common settings.
- **Navigation Buttons (▲ ▼ ◀ ▶):** Navigates through menus and options.
- **OK:** Confirms selections.
- **BACK:** Returns to the previous screen or menu.
- **EXIT:** Exits the current menu or application.
- **INFO:** Displays information about the current program or input.
- **REC (●):** Initiates recording (if supported by TV and connected device).
- **Playback Controls (, ▶, , , ■):** Controls media playback (e.g., USB, streaming apps).
- **Color Buttons (Red, Green, Yellow, Blue):** Functionality varies by TV model and application.

Compatibility:

This remote control is compatible with a wide range of LG LCD/LED Smart TV models, including but not limited to:

- 32LF5850, 32LF585B, 32LF585D

- 42LF5850, 42LF585T
- 55LF5850, 60LB5800, 60LF5850
- 60UH6150, 55UH6150, 65UH6150
- 49UH6500, 55UH6550, 65UH6550
- 55LN5400UAAUSULJR, 60PN5300, 47LN5400UAAUSYLJR, 50LN5400UAAUSYLJR, 42PN4500UABUSLLJR, 32LN5300UBAUSYLJM, 39LN5300UBBUSJLWM, 50PN4500UAAUSLLJR, 50PN6500UAAUSLLJR, 60LN5400UAAUSULJR, 39LN5300UBBUSDLWM, 39LN5300UBAUSDLJM, 42LN5400UAAUSYLJR, 60PN6500UABUSLLHR, 32LN5300UBBUSYLWM, 55LN5200, 55LN5400UABUSULHR, 55LN5400UABUSULJR, 42LN5400UABUSYLJR, 47LN5200, 50LN5400UABUSYLHR, 42LN5400UABUSYLHR, 50LN5400UABUSYLJR

This remote also replaces original LG remote models such as AKB74915304, AKB74915305, AKB74915321, AKB74915356, AKB74915393, AKB73715608, AGF76631052, AGF76692601.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA 1.5V Alkaline).
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Environment:** Avoid exposing the remote control to extreme temperatures, direct sunlight, moisture, or dust.

TROUBLESHOOTING

Problem	Solution
Remote control is not working.	• Ensure batteries are inserted correctly with the correct polarity (+/-). • Replace old batteries with new AAA 1.5V Alkaline batteries. • Check for any obstructions between the remote and the TV's IR receiver. • Verify that the remote is pointed directly at the TV.
Some buttons are not responding.	• Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris. • Ensure the TV model is listed as compatible. While this remote is a direct replacement, some specific advanced functions might vary slightly depending on the exact TV model.
Remote works intermittently.	• This often indicates low battery power. Replace the batteries. • Ensure there are no strong light sources (like direct sunlight or bright fluorescent lights) interfering with the IR signal.

SPECIFICATIONS

- **Model:** AKB75055701
- **Brand:** UBay
- **Connectivity Technology:** Infrared (IR)

- **Compatible Devices:** LG LCD/LED Smart Televisions
- **Power Source:** 2 x AAA 1.5V Alkaline Batteries (not included)
- **Product Dimensions:** 6.8 x 1.8 x 0.7 inches (approximately)
- **Item Weight:** 0.634 ounces (without batteries)
- **Special Feature:** Ergonomic design

WARRANTY AND SUPPORT

This UBay product is typically covered by a standard manufacturer's warranty. For specific warranty details, return policies, or technical support, please refer to the retailer where the product was purchased or contact UBay customer service directly.

Please retain your purchase receipt as proof of purchase for any warranty claims.

© 2023 UBay. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07VNNVYT7>

More documents and user manuals: <https://manuals.plus/>