

[Manuals.plus](#) /

› [shernbao](#) /

› Shernbao PBD-701H High Velocity Pet Grooming Dryer Instruction Manual

shernbao PBD-701H

Shernbao PBD-701H High Velocity Pet Grooming Dryer Instruction Manual

Model: PBD-701H

INTRODUCTION

Thank you for choosing the Shernbao PBD-701H High Velocity Pet Grooming Dryer. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your new dryer. Please read this manual thoroughly before first use and retain it for future reference.



IMPORTANT SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using electrical appliances. This includes, but is not limited to, the following:

- Keep away from water. Do not use while bathing your pet or near any water source.
- Unplug the unit and allow it to cool completely after each use before storing or performing maintenance.
- Keep out of reach of children and pets when not in use.
- Do not operate any appliance with a damaged cord or plug, or if the appliance malfunctions or has been dropped or damaged in any manner.
- Ensure the power outlet voltage matches the dryer's specifications.
- Never block the air openings of the appliance or place it on a soft surface where the air openings may be blocked.
- Use only attachments recommended or sold by the manufacturer.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Shernbao PBD-701H Dryer Unit
- Flexible Hose (4 ft to 8 ft expandable)
- 3 Nozzles (various shapes for different drying needs)
- Air Filters (pre-installed and/or spares)



All components included with the Shernbao PBD-701H dryer: the main unit, flexible hose, three distinct nozzles, and air filters.

PRODUCT OVERVIEW

The Shernbao PBD-701H is a high-velocity pet dryer designed for efficient and effective grooming. It features adjustable speed and temperature settings to accommodate various pet sizes and coat types.



Detailed view of the dryer's control panel, highlighting the wind speed dial and temperature switches.

Control Panel Components:

- **Wind Volume Switch (Infinitely Variable):** This dial controls the airflow speed, allowing for precise adjustment from low to high velocity.
- **Heating Switch:** Activates the heating element for warm air drying.
- **Off / Normal Temperature Switch:** Turns the unit off or selects the normal (unheated) air temperature setting.

SETUP INSTRUCTIONS

Follow these steps to prepare your dryer for use:

1. **Unpack:** Carefully remove all components from the packaging. Inspect the dryer and accessories for any signs of damage.
2. **Position:** Place the dryer on a stable, flat surface, ensuring adequate ventilation around the unit.
3. **Attach Hose:** Connect the flexible hose securely to the air outlet on the front of the dryer unit. Ensure it clicks or twists into place firmly.
4. **Select Nozzle:** Choose the appropriate nozzle for your pet's coat type and the drying task. Attach it firmly to the end of the hose.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet that matches the dryer's voltage requirements (110V).

OPERATING INSTRUCTIONS

Before operating, ensure your pet is comfortable with the sound and sensation of the dryer. Start with low settings and gradually increase as your pet adjusts.

1. **Power On:** Turn the Off / Normal Temperature Switch to the 'Normal Temperature' position. The dryer will begin to operate with unheated air.
2. **Adjust Airflow:** Rotate the Wind Volume Switch to increase or decrease the airflow speed. Start with a lower speed for

sensitive areas or pets, then increase as needed.

3. **Adjust Temperature:** If warm air is desired, activate the Heating Switch. The dryer offers two temperature settings, ranging from approximately 44°F to 111°F. The stable airflow helps dry faster with less potential for heat damage.
4. **Drying Technique:** Hold the nozzle a safe distance from your pet's skin to prevent discomfort or burns. Move the nozzle continuously to ensure even drying and to avoid concentrating heat in one area. Use the high velocity to 'blast' water from the coat, then use lower speeds for finishing.
5. **Power Off:** Once drying is complete, turn the Heating Switch off (if activated), then turn the Off / Normal Temperature Switch to the 'Off' position. Unplug the dryer from the power outlet.



Estimated drying times for various dog breeds using the Shernbao PBD-701H dryer, demonstrating its efficiency across different coat types.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your dryer.

Cleaning the Air Filter:

The air filter prevents pet hair and debris from entering the motor. Clean the filter regularly, especially after each heavy use.

1. Ensure the dryer is unplugged and completely cool.
2. Locate the filter cover at the rear of the dryer unit.
3. Remove the filter cover and carefully pull out the air filter.
4. Clean the filter by shaking out loose hair, vacuuming, or rinsing with water. If rinsing, ensure the filter is completely dry before reinserting.
5. Replace the clean, dry filter and secure the filter cover.

General Cleaning:

Wipe the exterior of the dryer with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure no moisture enters the internal components.

Breakthrough Technology to Reduce Noise





There is no silent blowing machine, we are actively working to make our blower even more quiet.

The dryer features breakthrough technology to reduce noise, with the rear filter cover shown, which is crucial for maintaining airflow and quiet operation.

TROUBLESHOOTING

If you encounter issues with your dryer, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Dryer does not turn on	No power supply; Power switch off; Damaged cord/plug	Check power outlet; Ensure switch is 'On'; Inspect cord/plug for damage (do not use if damaged)
Weak airflow	Clogged air filter; Hose/nozzle obstruction	Clean air filter; Check hose and nozzles for blockages
Overheating / Unit shuts off	Blocked air intake/exhaust; Prolonged use; Internal thermal protection activated	Ensure clear airflow; Allow unit to cool down; Clean air filter
Unusual noise or vibration	Loose components; Internal debris; Motor issue	Ensure hose/nozzles are secure; Clean air filter; If problem persists, contact customer support

If the problem persists after attempting these solutions, please contact Shernbao customer support.

PRODUCT SPECIFICATIONS

The following table outlines the technical specifications for the Shernbao PBD-701H dryer:

Feature	Detail
Brand	shernbao
Model	PBD-701H
Voltage	110V
Wind Speed	4921 FPM - 44000 FPM (Feet Per Minute)
Power	600W - 1600W
Temperature Settings	2 settings (approx. 44°F to 111°F)
Noise Level	50-75 dB
Item Weight	10.98 pounds (approx. 4.98 kg)
Product Dimensions (LxWxH)	15.75 x 10.63 x 6.69 inches
Material	Acrylonitrile Butadiene Styrene (ABS)
Included Components	Nozzles, Flexible Hose, Air Filters



Brand: shernbao	Type: PBD-701H
Voltage: 110V	Name: Professional Pet Dryer
Wind Speed: 354MPM-44000FPM	Using Objects: Dog 、 Cat
Power: 600W-1600W	Weight: 4.2 kg / 9.25 lb
Temperature: 38°C / 100°F	Noise: 50-75dB
Percussion Force: 680g	Size: 6.02×4.65×4.25 (in)

Visual representation of the product specifications, including technical details and dimensions.

WARRANTY AND CUSTOMER SUPPORT

The Shernbao PBD-701H dryer comes with a **12-month warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use.

For warranty claims, technical assistance, or any product-related inquiries, please contact Shernbao customer support. You can find our phone number or email address on the product manual included in your package or by visiting the official Shernbao USA website.

Please have your model number (PBD-701H) and proof of purchase ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question