

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Farberware](#) /

› [Farberware Countertop 1000 Watts 1.2 cu ft-Smart Sensor Microwave Oven with LED Lighting and Child Lock-Perfect for Apartments and Dorms-Easy Clean Black Interior, Stainless Steel 1.2 cu. Ft. Stainless Steel](#)

Farberware Microwave 1000 Watts

Farberware Countertop 1000 Watts 1.2 cu ft Smart Sensor Microwave Oven User Manual

Model: Microwave 1000 Watts

Brand: Farberware

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Farberware Countertop 1000 Watts 1.2 cu ft Smart Sensor Microwave Oven. Please read it thoroughly before use and retain it for future reference.

This microwave oven is designed for convenience and efficiency, making it an ideal appliance for various kitchen settings, from home kitchens to office break rooms. It features a powerful 1000-watt output and a range of settings to simplify your cooking tasks.

Key Features

- **Convenient Microwave:** Prepare quick and easy meals with 1000 watts of output power and press-and-go speed settings.
- **Powerful Settings:** Features ten power levels with multi-stage cooking. Customize cooking with six one-touch options including popcorn, potato, and pizza. Defrost by weight or by time settings.
- **Perfect Size:** Measuring 1.2 cu ft, this microwave offers full-sized cooking in a compact space, suitable for homes or offices.
- **User-Friendly Display:** Clear LED display with a kitchen timer and clock. Easy-to-view interior lighting and a child safety lock for added security.
- **Easy Clean Interior:** The interior and exterior are designed for easy cleaning.

SETUP

Unpacking

- Carefully remove the microwave oven and all packing materials from the carton.

- Check the oven for any damage, such as dents or a broken door. Do not operate the oven if it is damaged.
- Ensure all accessories are present: turntable, turntable ring, and instruction manual.

Placement

- Place the microwave oven on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in it.
- Ensure adequate ventilation. Maintain a minimum of 3 inches (7.5 cm) of space around the sides, top, and rear of the oven for proper airflow.
- Do not block air vents. Blocking vents can damage the oven and affect cooking results.
- Keep the oven away from heat and steam sources, such as ranges or sinks.
- The dimensions of the microwave are approximately 17.3"D x 20.5"W x 12.8"H. Ensure your chosen location accommodates these measurements.



Image: The microwave oven with its dimensions (20.47" wide, 17.51" deep, 12.99" high) indicated, illustrating its compact size for various spaces.

Initial Power-Up

- Plug the power cord into a standard 100-volt, 60 Hz grounded electrical outlet.
- The display will show "0:00" or a similar indicator, prompting you to set the clock.
- Refer to the 'Setting the Clock' section in Operating Instructions for details.

OPERATING INSTRUCTIONS

Control Panel Overview



Cooking Made Easy.

smart sensor technology
six auto-cook presets

defrost programs

intuitive control panel

child safety lock

one touch start

Image: A detailed view of the microwave's control panel, highlighting key features such as Smart Sensor Cook buttons, numeric keypad, and function buttons like Popcorn, Reheat, Defrost, and Start.

Setting the Clock

1. Press the 'Clock' button.
2. Use the number pad to enter the current time (e.g., 12:30).

3. Press the 'Clock' button again to confirm.

Basic Microwave Cooking

1. Place food in a microwave-safe container on the turntable.
2. Close the door securely.
3. Enter the desired cooking time using the number pad.
4. To adjust power level (default is 100%), press 'Power Level' and then a number from 1 to 10 (e.g., '5' for 50% power).
5. Press 'START/+30SEC' to begin cooking.

Smart Sensor Cook Functions

The Smart Sensor Cook feature automatically adjusts cooking time and power for optimal results based on the food's moisture and temperature.

- **Potato:** For baking potatoes.
- **Rice:** For cooking rice.
- **Frozen Entrée:** For heating pre-packaged frozen meals.
- **Reheat:** For reheating leftovers.
- **Frozen Pizza:** For cooking frozen pizzas.
- **Vegetable:** For cooking fresh or frozen vegetables.
- **Soft/Melt:** For softening butter, melting chocolate, etc.

To use: Place food in the oven, press the desired Smart Sensor Cook button, and the oven will start automatically.

Defrosting

- **1 lb Defrost (Express Cook):** Press this button for quick defrosting of 1 pound of food.
- **Auto Defrost:** Press 'Auto Defrost', then use the number pad to enter the weight of the food in pounds (e.g., 1.5 for 1.5 lbs). Press 'START/+30SEC'.

Child Safety Lock

To prevent unsupervised operation, especially by children, activate the child safety lock.

- **To Activate:** Press and hold the 'STOP/CANCEL' button for 3 seconds. A lock indicator will appear on the display.
- **To Deactivate:** Press and hold the 'STOP/CANCEL' button for 3 seconds again. The lock indicator will disappear.

MAINTENANCE

Cleaning the Interior


The microwave features an easy-to-clean interior. Regular cleaning helps maintain performance and hygiene.

- After each use, wipe the interior with a damp cloth to remove any food splatters.
- For stubborn stains, place a bowl of water with a few lemon slices inside and microwave for 2-3 minutes. The steam will loosen the grime, making it easier to wipe away.
- Remove the glass turntable and turntable ring for separate cleaning with mild soap and water. Ensure they are

dry before placing them back in the oven.

Easy, Clean, Convenient.

easy-to-clean interior is perfect for the home and office

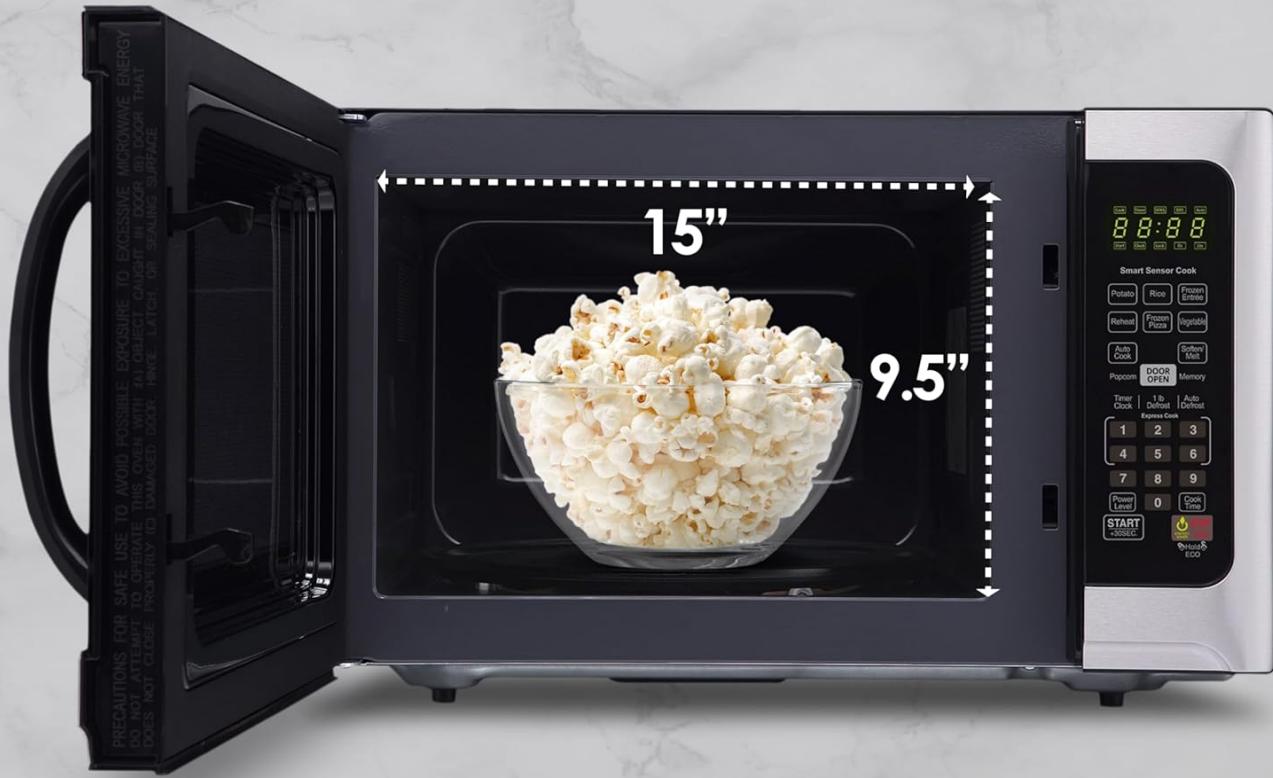

FARBERWARE®

Image: The microwave oven with its door open, revealing the spacious interior and the removable glass turntable, emphasizing its easy-to-clean design.

Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth. For stainless steel, use a specialized stainless steel cleaner if necessary, wiping in the direction of the grain.
- Do not use abrasive cleaners or scouring pads, as they can scratch the surface.
- Clean the door seal and surrounding area regularly to ensure a tight seal.

TROUBLESHOOTING

If you experience issues with your microwave oven, consult the table below for common problems and solutions. If

the problem persists, contact customer support.

Problem	Possible Cause	Solution
Oven does not start	Power cord not securely plugged in; Door not closed properly; Fuse blown or circuit breaker tripped; Electrical problem with outlet.	Ensure plug is firmly in outlet; Close door completely; Check household fuse/circuit breaker; Test outlet with another appliance.
Food not heating	Door not closed properly; Cooking time/power level set incorrectly; Food quantity too large.	Ensure door is latched; Verify settings; Adjust cooking time for larger portions.
Light not working	Bulb needs replacement.	Contact qualified service personnel for bulb replacement.
Turntable not rotating	Turntable not properly seated; Turntable motor malfunction.	Ensure turntable and ring are correctly positioned; Contact customer support if issue persists.
Unusual noise during operation	Food container touching oven walls; Turntable not properly seated.	Adjust food container position; Re-seat turntable and ring.

SPECIFICATIONS

Detailed technical specifications for your Farberware Countertop Microwave Oven.

Specification	Value
Brand	Farberware
Model Number	Microwave 1000 Watts
Capacity	1.2 Cubic Feet
Wattage	1000 watts
Voltage	100 Volts
Product Dimensions (D x W x H)	17.3"D x 20.5"W x 12.8"H
Item Weight	1 Pounds
Color	Stainless Steel
Material	Stainless Steel
Installation Type	Countertop
Special Feature	Child Safety Lock
Country of Origin	China

Specification	Value
Date First Available	July 26, 2019



Image: Visual representation of the microwave's key performance metrics: 1.2 cubic feet capacity, 10 power levels, and 1000 watts of power.

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official user guide provided with your product.

You can also access the comprehensive User Guide in PDF format:

[Download Official User Guide \(PDF\)](#)

For further assistance, please contact Farberware customer service through their official website or the contact information provided in the full user guide.