



[Manuals.plus](#) /

› [LNMBBS](#) /

› LNMBBS X109 10-inch 4G LTE Tablet User Manual

LNMBBS X109

LNMBBS X109 10-inch 4G LTE Tablet User Manual

Model: X109

1. INTRODUCTION

The LNMBBS X109 is a versatile 10-inch 4G LTE tablet designed for a seamless user experience. Featuring Android 9.0, 4GB RAM, and 64GB internal storage, it offers smooth performance for various applications. This tablet supports dual SIM cards for 4G LTE connectivity, Wi-Fi, Bluetooth, and GPS, making it suitable for both communication and navigation. This manual provides essential instructions for setting up, operating, maintaining, and troubleshooting your device.



Image: Front and back view of the LNMBBS X109 tablet, showcasing its sleek design and display.



Android
9.0



4GB RAM+
64GB ROM




1280*800
Resolution



Type-c
interface



Front 2.0 MP
Rear 5.0MP

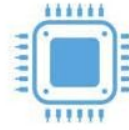

Quad-Core
Processor



Image: Diagram highlighting key features including Android 9.0, 4GB RAM, 64GB ROM, 1280x800 resolution, Type-C interface, 2.0MP front camera, 5.0MP rear camera, and Quad-Core Processor.

2. SETUP GUIDE

2.1 Package Contents

- 1 x LNMBBS X109 Android 10-inch Tablet
- 1 x USB Cable
- 1 x OTG Cable
- 1 x EU Charger
- 1 x User Manual (this document)

2.2 Device Layout

Familiarize yourself with the tablet's physical layout, including ports and buttons.



① Type-c interface ② Headphone jack ③ Vol+

④ Vol- ⑤ Power ⑥ Reset button ⑦ Microphone

Image: Diagram illustrating the location of the Type-C interface, Headphone jack, Volume buttons (Vol+, Vol-), Power button, Reset button, and Microphone.

1. **Type-C interface:** For charging and data transfer.
2. **Headphone jack:** For connecting 3.5mm audio devices.
3. **Vol+:** Increase volume.
4. **Vol-:** Decrease volume.
5. **Power:** Press and hold to power on/off or restart. Press briefly to turn screen on/off.
6. **Reset button:** Use a thin object to press for a forced restart if the tablet becomes unresponsive.
7. **Microphone:** For audio input.

2.3 Inserting SIM and SD Cards

The tablet supports two SIM cards and one microSD card for expanded storage. The card slots are located under a removable panel on the back of the tablet.



Image: Close-up view of the dual SIM card slots (SIM1, SIM2) and the TF-Card (microSD) slot located under a panel on the tablet's rear.

1. Locate the removable panel on the back of the tablet. This panel may be stiff and require gentle prying with a non-metallic, pointed object to open.
2. Insert your standard-sized SIM cards into the designated SIM1 and SIM2 slots. If you have a micro-SIM, you will need a SIM adapter.
3. Insert your microSD card (SDHC/SDXC compatible) into the TF-Card slot.
4. Carefully close the panel until it clicks into place.
5. **Important:** After inserting SIM cards, **restart the tablet** for them to be recognized. If the SIM is not recognized, restart the device.

2.4 Charging the Tablet

Before first use, fully charge the tablet. Connect the provided EU charger to the Type-C interface on the tablet and plug it into a power outlet. The battery indicator on the screen will show charging status.

2.5 Powering On/Off


- **To Power On:** Press and hold the Power button until the screen lights up.
- **To Power Off:** Press and hold the Power button until a menu appears, then select "Power off".

- **To Restart:** Press and hold the Power button until a menu appears, then select "Restart".

3. OPERATING INSTRUCTIONS

3.1 Android 9.0 Interface

Your tablet runs on Android 9.0, offering a user-friendly interface. Navigate by tapping, swiping, and pinching on the touchscreen. The home screen provides access to your apps, widgets, and notifications.

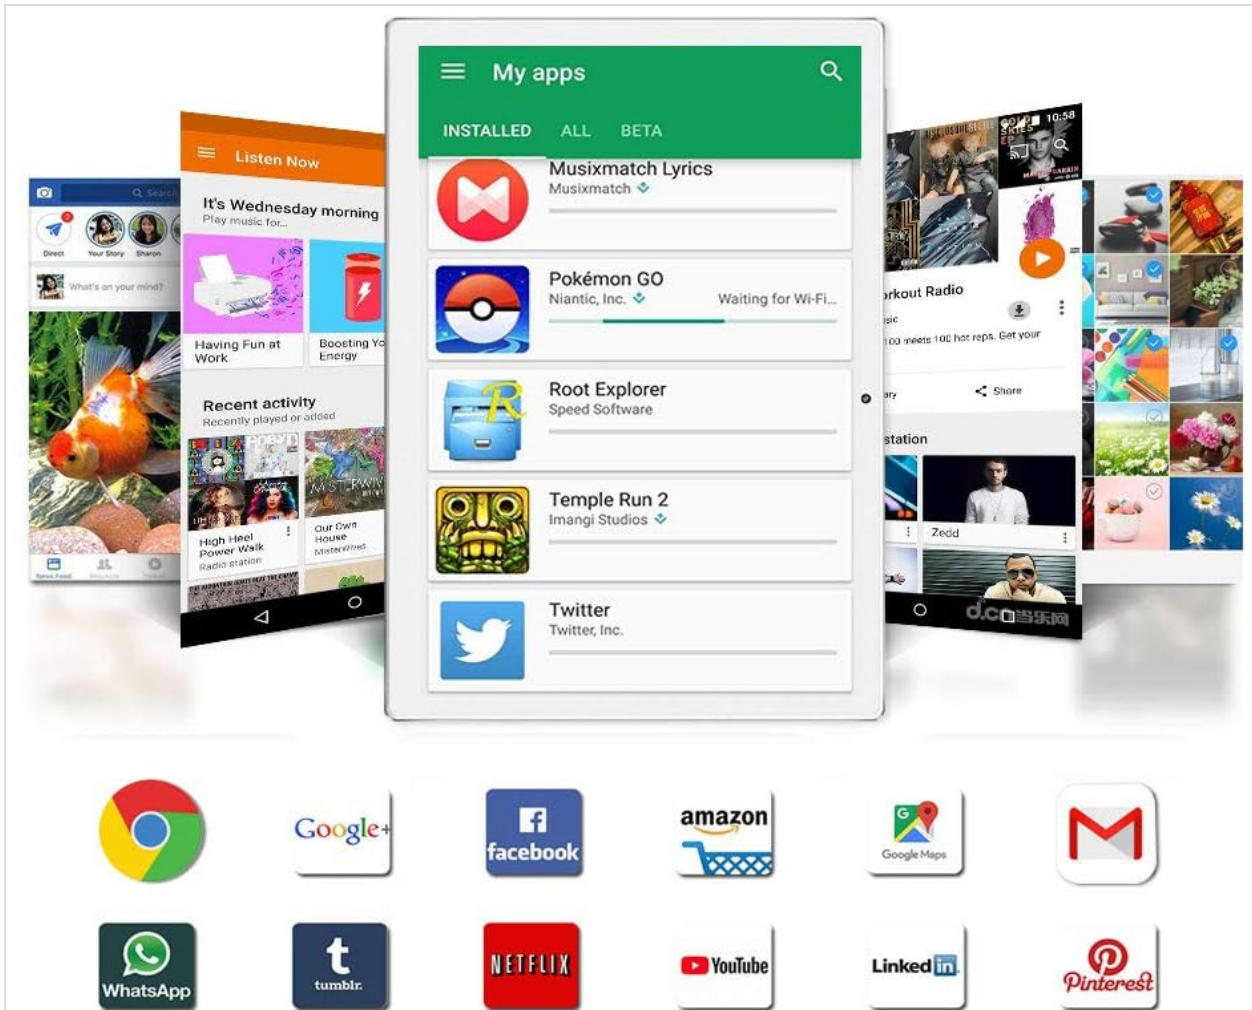

Google GMS Certification Android 9.0 System

Support for downloading and installing the latest version of Google software.

Simple, smooth operating system, more intelligent and humanize.

Image: The tablet display showing the 'My apps' screen, indicating support for Google GMS Certification and the ability to download and install Google software.

3.2 Connectivity

- **Wi-Fi:** Go to Settings > Network & internet > Wi-Fi to connect to available wireless networks.
- **Bluetooth:** Go to Settings > Connected devices > Bluetooth to pair with Bluetooth devices like keyboards, mice, or headphones.

- **4G LTE (Mobile Data):** After inserting a compatible SIM card and restarting, enable mobile data in Settings > Network & internet > Mobile network. Ensure your SIM card supports GSM and WCDMA networks.
- **GPS:** The integrated GPS allows for location services and navigation. Enable location services in Settings > Location.

3.3 Camera Operation

The tablet features a 2.0MP front camera and a 5.0MP rear camera.



Image: The tablet screen showing the camera application interface, ready to capture photos or videos.

- Open the Camera application from the home screen or app drawer.
- Tap the shutter button to take a photo.
- Switch between front and rear cameras using the camera toggle icon.
- Access settings within the camera app to adjust modes, resolution, and other parameters.

3.4 Connecting OTG Devices

Use the provided OTG cable to connect external peripherals such as USB keyboards, mice, or USB flash drives to your tablet.

4. MAINTENANCE

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body. Avoid harsh chemicals or abrasive materials.
- **Battery Care:** To prolong battery life, avoid extreme temperatures. Do not let the battery fully discharge frequently. Use the original charger for optimal charging.
- **Software Updates:** Periodically check for system updates in Settings > System > Advanced > System update to ensure your tablet has the latest features and security patches.
- **Storage Management:** Regularly clear unnecessary files and uninstall unused applications to maintain optimal performance.

5. TROUBLESHOOTING

- **Tablet does not power on:** Ensure the tablet is charged. Connect the charger and wait a few minutes before attempting to power on again.
- **Tablet is unresponsive:** Press and hold the Power button for about 10-15 seconds to force a restart. If this does not work, use a thin object to press the Reset button (refer to Device Layout).
- **SIM card not recognized / "NO CARD" message:** Ensure the SIM card is correctly inserted and the panel is closed. **Restart the tablet** after insertion. Verify that your SIM card is compatible with GSM and WCDMA networks. Activate the internet network from the tablet's drop-down menu after restarting.
- **Slow performance:** Close unused applications, clear cache, and ensure sufficient storage space. Restarting the tablet can also improve performance.
- **Wi-Fi/Bluetooth connectivity issues:** Try turning Wi-Fi/Bluetooth off and on again. Restart the tablet and the router/Bluetooth device.

6. SPECIFICATIONS

Feature	Specification
Brand	LNMBBS
Model Number	X109
Operating System	Android 9 Pie
Processor Brand	Qualcomm
Number of Cores	4
RAM	4 GB

Feature	Specification
Hard Drive Size	64 GB
Display Technology	CRT (Note: This might be an error in source data, typically IPS for tablets)
Screen Size	10.1 Inches
Screen Resolution	1920 x 1200 pixels (Note: Product description states 800x1280, using spec data)
Max Display Resolution	720p HD Ready
Graphics Card Description	Integrated
Connectivity Type	Wi-Fi, 802.11bgn
Wireless Technology Type	802.11bgn
Hardware Interface	SDHC, SDXC, USB
Connector Type	Wi-fi, Bluetooth, GPS
Battery Life	6000 hours (Note: This likely refers to mAh capacity, not actual usage hours)
Product Dimensions (L x W x H)	24 x 17 x 0.4 cm
Product Weight	456 Grams
Special Features	3G, Android 9.0, Bluetooth, GPS, WIFI
Battery Type	1 Lithium-polymer (included)

7. WARRANTY AND SUPPORT

Specific warranty information for the LNMBBS X109 tablet is not provided in this manual. For details regarding warranty coverage, repair services, or technical support, please refer to the documentation included with your purchase or contact LNMBBS customer service directly. Information on spare parts availability and guaranteed software updates is not available at this time.