

mooas MT-C1

mooas Cube Timer (Mint) Instruction Manual

Model: MT-C1

INTRODUCTION

The mooas Cube Timer is a simple and intuitive device designed to enhance your time management for various activities such as studying, cooking, exercising, and more. Its unique cube design allows for quick and easy timer activation, promoting focus and productivity.

PRODUCT OVERVIEW

The mooas Cube Timer is a compact, cube-shaped device with pre-set time intervals on each face. It features an adjustable alarm volume and a digital display for remaining time.

Key Features

- **Pre-set Time:** 1, 3, 5, 10 min (for this Mint model)
- **Easy to Use:** Simply turn the timer so that the side with the desired number faces up, and the timer starts counting right away.
- **Simple Design:** A timer with a clean cube design, available in various colors, makes it a versatile addition to any space.
- **Diverse Applications:** Each cube timer has various time sets suitable for many uses such as exercising, studying, cooking, and taking a nap.
- **Adjustable Alarm Volume:** The alarm volume can be adjusted to high or low by flicking the switch. Flick the switch to 'off' to turn off the timer completely.
- **Visual Indicator:** A red light blinks continuously when the timer is in use.
- **Battery Operated:** Requires 2 AAA batteries to use (batteries not included).



This image displays several mooas Cube Timers, each with different pre-set times and colors, highlighting the simple and aesthetic design suitable for various settings.

SETUP

Battery Installation

The mooas Cube Timer requires two AAA batteries (not included). Locate the battery compartment on the bottom of the timer, open it, insert the batteries according to the polarity markings, and close the compartment securely.

Size: .2.6 x 2.6 x 2.6 inch (W x D x H)

Weight: 0.16 lb



This image illustrates the underside of the timer, indicating where to install the AAA batteries and the location of the volume control switch.

Initial Power On

After installing batteries, slide the power switch on the bottom to either the 'Low vol.' or 'High vol.' position to turn the timer on. The digital display will show '00:00'.

This video demonstrates how to power on the mooas Cube Timer and activate the low or high volume settings. It also shows the initial display of '00:00' before a timer is set.

OPERATING INSTRUCTIONS

Setting a Timer

To start a timer, simply rotate the cube so that the desired time (e.g., "1 min", "3 min", "5 min", "10 min") faces upwards. The timer will automatically begin counting down. The digital display on the bottom will show the remaining time, and a red light will blink to indicate it is active.



This image highlights the different pre-set minute options available on the faces of the mint moos Cube Timer, demonstrating its intuitive design.



This image shows the action of flipping the cube to select and start a timer, illustrating the ease of use.

Stopping or Pausing the Timer

To stop the active timer, turn the cube so that the side with the LCD screen or the side without any numbers faces upwards. The timer will reset to '00:00'.

Adjusting Alarm Volume

The alarm volume can be adjusted using the switch located on the bottom of the timer. Slide it to select between 'Low vol.', 'High vol.', or 'Off' to completely silence the alarm.

This video demonstrates how to power on the mooas Cube Timer, activate the low or high volume settings, and stop the timer by turning the cube to an empty side.

MAINTENANCE

To ensure optimal performance and longevity of your mooas Cube Timer, keep it clean and dry. Avoid exposing it to extreme temperatures or direct sunlight. Replace batteries promptly when the display dims or the timer functions become unreliable.

TROUBLESHOOTING

Rattling Sound

A rattling sound may be heard when shaking the timer. This is due to an internal weight necessary for proper timer functioning and is not a defect.



This image clarifies that any rattling sound from the timer is a normal operational characteristic caused by an internal component and does not indicate a fault.

Timer Not Starting or Inconsistent Operation

Ensure batteries are correctly installed and have sufficient charge. If the timer is unresponsive, try removing and reinserting the batteries. Make sure the cube is placed on a flat, stable surface when setting a time.

SPECIFICATIONS

- **Brand:** mooas
- **Model:** MT-C1
- **Color:** Mint
- **Material:** Acrylonitrile Butadiene Styrene
- **Product Dimensions:** 2.6"D x 2.6"W x 2.6"H
- **Item Weight:** 81.5 Grams

- **Number of Settings:** 5 (Pre-set times: 1, 3, 5, 10 min for this model)
- **Power Source:** 2 AAA batteries (not included)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact mooas customer service directly.