

Fartools 115339

FARTOOLS 115339 Heat Gun Instruction Manual

1. INTRODUCTION

This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your FARTOOLS 115339 Heat Gun. Please read these instructions carefully before using the tool and keep them for future reference.

2. SAFETY INSTRUCTIONS

WARNING: Failure to follow these safety instructions may result in electric shock, fire, and/or serious injury.

- Always wear appropriate personal protective equipment, including safety glasses and heat-resistant gloves.
- Ensure the work area is well-ventilated to prevent the accumulation of hazardous fumes, especially when stripping paint or working with plastics.
- Do not point the heat gun at yourself, other people, or flammable materials.
- Keep children and bystanders away while operating the tool.
- Do not block the air intake or output nozzles. Overheating can damage the tool and pose a fire hazard.
- Allow the tool to cool down completely before storing it.
- Never use the heat gun as a hair dryer.
- Disconnect the power plug from the power source before making any adjustments, changing accessories, or storing the tool.
- Do not use the tool in damp or wet conditions.

3. PACKAGE CONTENTS

Carefully unpack your FARTOOLS 115339 Heat Gun and check for any damage. Ensure all items listed below are present.



Image: The FARTOOLS 115339 Heat Gun with its various accessories, including different nozzles and a scraper, laid out on a surface. The product packaging is also visible.

- FARTOOLS 115339 Heat Gun Unit
- Assorted Nozzles (e.g., concentrator, deflector)
- Scraper Tool
- Instruction Manual
- Carrying Case



Image: The FARTOOLS 115339 Heat Gun and its accessories neatly stored within its durable carrying case, ready for transport or storage.

4. SETUP

1. **Unpacking:** Remove the heat gun and all accessories from the carrying case. Inspect for any visible damage.
2. **Nozzle Attachment:** Select the appropriate nozzle for your application. Align the nozzle with the heat gun's output and push it firmly into place. Ensure it is securely seated before operation.
3. **Power Connection:** Ensure the heat gun's switch is in the 'OFF' position. Plug the power cord into a suitable electrical outlet (220-240V, 50/60Hz).

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

- To turn on the heat gun, slide the power switch to the desired airflow setting (I or II).
- To turn off the heat gun, slide the power switch to the '0' (OFF) position.

5.2 Temperature and Airflow Adjustment

The FARTOOLS 115339 Heat Gun features adjustable temperature and two airflow settings:

- **Airflow Settings:**

- Setting I: Lower airflow (approx. 250 L/min)
- Setting II: Higher airflow (approx. 500 L/min)
- **Temperature Adjustment:** Use the temperature control dial to select a temperature between 50°C and 550°C. Start with a lower temperature and gradually increase it as needed for your application.

5.3 Applications

This heat gun is suitable for various tasks, including:

- Stripping paint and varnish
- Bending and welding plastics
- Shrinking heat-shrink tubing
- Thawing frozen pipes (use extreme caution)
- Loosening rusted nuts and bolts

6. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your heat gun.

- **Cleaning:** After each use, ensure the tool is unplugged and cool. Wipe the exterior with a damp cloth. Use a soft brush or compressed air to clear any dust or debris from the air intake and output vents.
- **Storage:** Store the heat gun and its accessories in the provided carrying case in a dry, secure location, out of reach of children.
- **Cord Inspection:** Regularly inspect the power cord for any signs of damage. If the cord is damaged, it must be replaced by a qualified service technician to avoid hazards.
- **No User Serviceable Parts:** The internal components of the heat gun contain no user-serviceable parts. Do not attempt to open or repair the tool yourself.

7. TROUBLESHOOTING

If you encounter issues with your heat gun, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Heat gun does not turn on.	No power supply; faulty power cord; internal fault.	Check power outlet and plug. Inspect power cord for damage. If problem persists, contact customer support.
Insufficient heat output.	Incorrect temperature setting; blocked air vents.	Increase temperature setting. Ensure air intake and output vents are clear of obstructions.
Overheating/Shuts off automatically.	Blocked air vents; prolonged use at high temperature.	Unplug and allow to cool. Clear any obstructions from vents. Use for shorter periods or at lower settings.

If these solutions do not resolve the issue, please contact FARTOOLS customer support or a qualified service technician.

8. SPECIFICATIONS

- **Model:** 115339
- **Power:** 2000 W
- **Temperature Range:** 50 - 550 °C
- **Airflow Settings:** 250 L/min (Setting I), 500 L/min (Setting II)
- **Power Source:** Electric
- **Weight:** 2.33 kg
- **Country of Origin:** China

9. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or contact your retailer. You may also visit the official Fartools website for further assistance.