

XP-PEN Artist 13.3Pro

XPPen Artist13.3 Pro Graphics Tablet User Manual

Model: Artist 13.3Pro | Brand: XP-PEN

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your XPPen Artist13.3 Pro Graphics Tablet. Please read it thoroughly before operating the device and retain it for future reference.

The XPPen Artist13.3 Pro is a full-laminated graphics drawing monitor designed for digital artists, offering a 13.3-inch display with high color accuracy, 8 shortcut keys, and an adjustable stand. It features a battery-free stylus with 8192 levels of pressure sensitivity and tilt function.

2. SAFETY INFORMATION

- Do not expose the device to water or excessive moisture.
- Avoid placing the device in direct sunlight or near heat sources.
- Use only the provided power adapter and cables to prevent damage.
- Keep the device away from strong electromagnetic fields.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.
- Ensure proper ventilation when in use to prevent overheating.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1x 13.3 Inch Display
- 1x Battery-free Stylus
- 1x Pen Holder
- 8x Replacement Pen Nibs
- 1x 3-in-1 USB Cable
- 1x USB Extension Cord
- 1x Adapter

- 1x Portable Stand
- 1x Cleaning cloth
- 1x Black Drawing Glove
- 1x Quick Guide

Package Included



13.3 Inch Display



Portable Stand



Battery-free Stylus



Pen Holder



Replacement Pen Nibs



Drawing Glove



Quick Guide



3-in-1 USB Cable



Cleaning cloth



Power Adapter

Image: Illustration of the XPPen Artist13.3 Pro package contents, including the display, stylus, cables, stand, and accessories.

4. PRODUCT OVERVIEW

Familiarize yourself with the main components of your Artist13.3 Pro graphics tablet.



Image: The XPPen Artist13.3 Pro graphics tablet with its stylus and pen holder, showcasing the display and physical buttons.

4.1. Display Features

- **13.3-inch Full-Laminated FHD Display:** Offers a seamless drawing experience with minimal parallax.
- **High Color Accuracy:** 88% NTSC (Adobe RGB $\geq$ 91%, sRGB $\geq$ 123%) with a 178-degree viewing angle for vivid colors.
- **Anti-Glare Film:** Reduces reflections for comfortable viewing.

Need to Connect with Computer



1080P IPS



Adobe® RGB $\geq$ 91%
sRGB $\geq$ 123%



88% NTSC



Image: Diagram illustrating the display specifications including 1080P IPS, Adobe RGB $\geq$ 91%, sRGB $\geq$ 123%, 88% NTSC, and a 178-degree viewing angle.

4.2. Shortcut Keys and Red Dial

The tablet features 8 customizable shortcut keys and a Red Dial for efficient workflow.

Red Dial Quick Keys

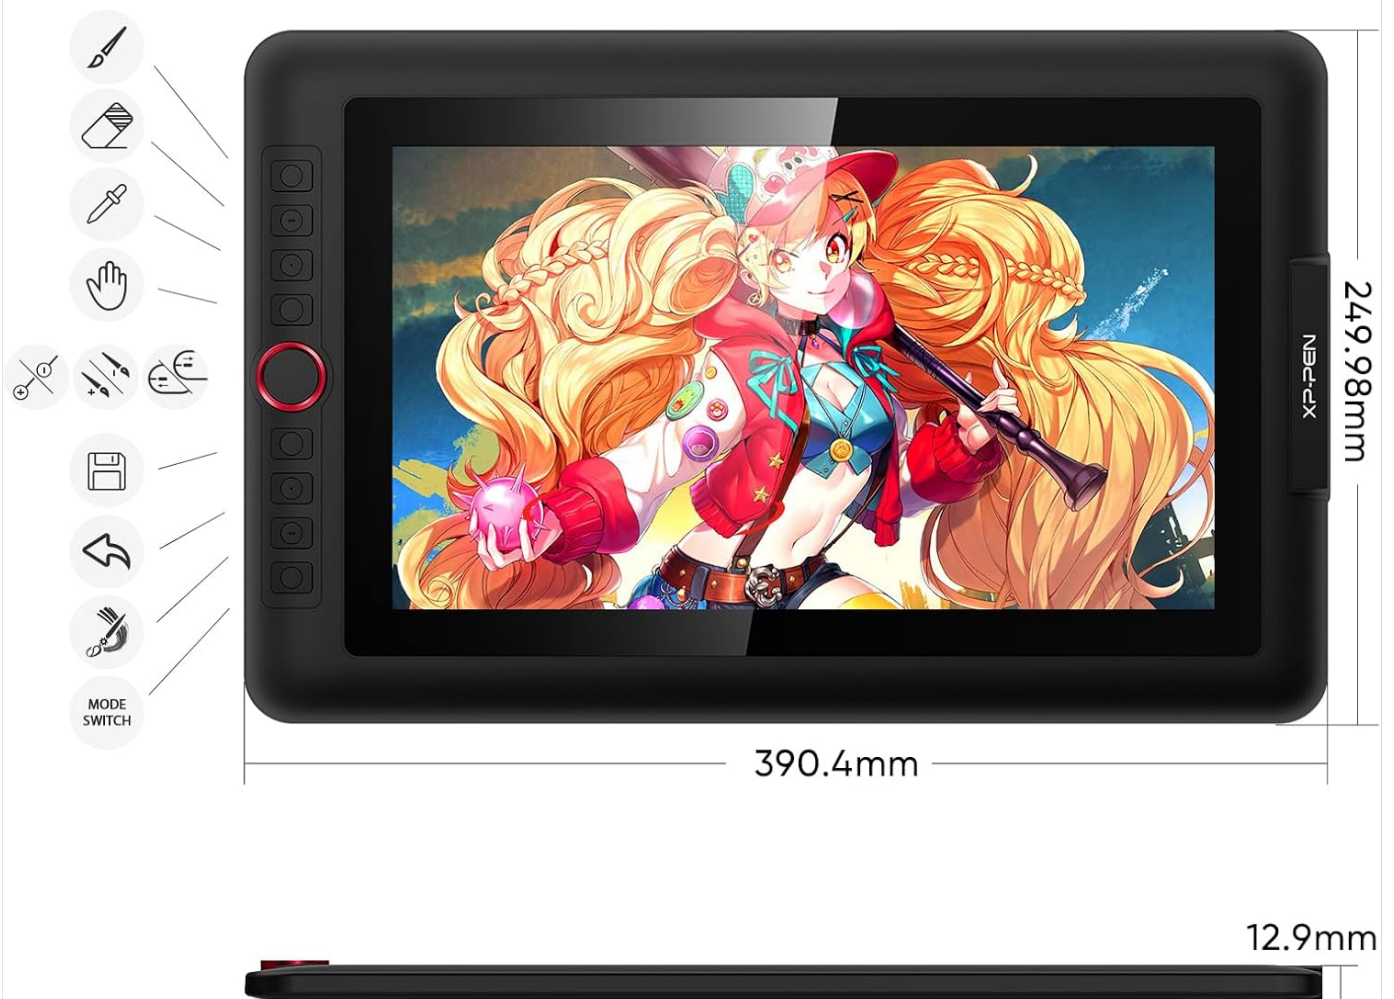 



Image: Overhead view of the XPPen Artist13.3 Pro, highlighting the Red Dial and 8 shortcut keys on the left side, along with product dimensions.

4.3. PA2 Battery-free Stylus

The included stylus offers advanced features for precise control.

- **8192 Pressure Levels:** Provides fine control over line thickness and opacity.
- **60° Tilt Function:** Allows for natural shading and brush effects.
- **Battery-free Design:** No charging required.
- **Two Customizable Shortcut Keys:** For quick access to functions like right-click or pen/eraser toggle.

 Adjustable Display Stand

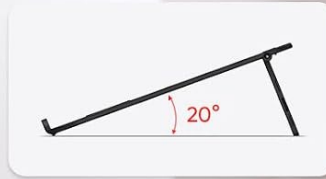

Adjust the stand to 90 degree for stable support.



Image: Detailed view of the PA2 Battery-free Stylus, showing its 13.5g net weight, 8192 pressure levels, 60° tilt support, and two customizable buttons for right-click and pen/eraser functions.

5. SETUP

5.1. Connecting the Device

The Artist13.3 Pro requires connection to a computer or laptop. Use the provided 3-in-1 cable for connection.

- Connect the HDMI and USB-A ends of the 3-in-1 cable to your computer.
- Connect the USB-C end of the 3-in-1 cable to the Artist13.3 Pro.
- If your laptop cannot supply enough power, connect the power adapter to the USB extension cord and then to the red USB-A connector on the 3-in-1 cable.

 
PA2 Battery-free Stylus




13.5g Net Weight



8192 Levels Pressure

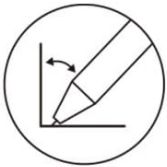

60°Tilt Support

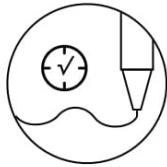 

≥ 220 No Lag



finer pen nibs



Right Click



Pen/Eraser



Image: Diagram illustrating two connection methods for the XPPen Artist13.3 Pro. One shows direct connection to a laptop via HDMI and USB. The second shows an additional power adapter and USB extension cord for laptops that cannot supply sufficient power.

5.2. Driver Installation

Before using the tablet, you must install the latest drivers from the official XP-PEN website. Do not install drivers from other brands or older versions, as this can cause conflicts.

1. Uninstall any existing tablet drivers from your computer.
2. Restart your computer.
3. Download the latest driver for the Artist13.3 Pro from the official XP-PEN support page.
4. Run the installer and follow the on-screen instructions.
5. Restart your computer again after installation is complete.

5.3. Display Stand Setup

The included portable stand can be adjusted to provide a comfortable working angle.



Compatibility

Window

Mac

Chrome

Linux

Ps

Au

3ds
Max

Dw

Ai

SAI

Pr

GIMP

ZBrush

Krita

Every Artist Pro Comes with Gratis Software



Toon Boom

Windows & macOS Support

Enjoy the 45 days



openCanvas

Windows Only

Enjoy the 45 days



Cartoon Animator 4

Windows & macOS Support

Enjoy the 45 days



Zoner Photo Studio X

Windows & macOS Support

Enjoy the 45 days

Image: A user drawing on the XPPen Artist13.3 Pro, which is placed on its adjustable stand. Insets show the stand can be adjusted to 90 degrees for stable support or a shallower 20-degree angle.

6. OPERATING THE DEVICE

6.1. Stylus Operation

The PA2 stylus functions like a traditional pen or brush. Its pressure sensitivity and tilt recognition allow for dynamic line work and shading.

- **Drawing:** Apply varying pressure to achieve different line weights and opacities.
- **Tilt Function:** Tilt the stylus to simulate brush strokes and shading effects in compatible software.
- **Stylus Buttons:** The two buttons on the stylus can be customized in the driver settings for functions like right-click, undo, or switching between pen and eraser.

6.2. Customizing Shortcut Keys and Red Dial

The 8 shortcut keys and the Red Dial can be configured through the XPPen driver software to streamline your workflow.

- Open the XPPen Tablet Settings application on your computer.
- Navigate to the "Express Keys" or "Dial" section.
- Assign desired functions (e.g., zoom in/out, brush size, undo, redo) to each key and the Red Dial.
- The Red Dial can be set to multiple modes, allowing it to control different functions with a single press of its center button.

6.3. Software Compatibility

The Artist13.3 Pro is compatible with a wide range of creative software on Windows and Mac OS.

- **Supported Operating Systems:** Windows 10/8/7 (32/64bit), Mac OS X 10.10 and higher.
- **Compatible Software:** Photoshop, Illustrator, SAI, CDR, GIMP, Krita, Medibang, Fire Alpaca, Blender 3D, and more.

Replaceable Anti-glare Film



X

Common Display



✓

Anti-glare Display

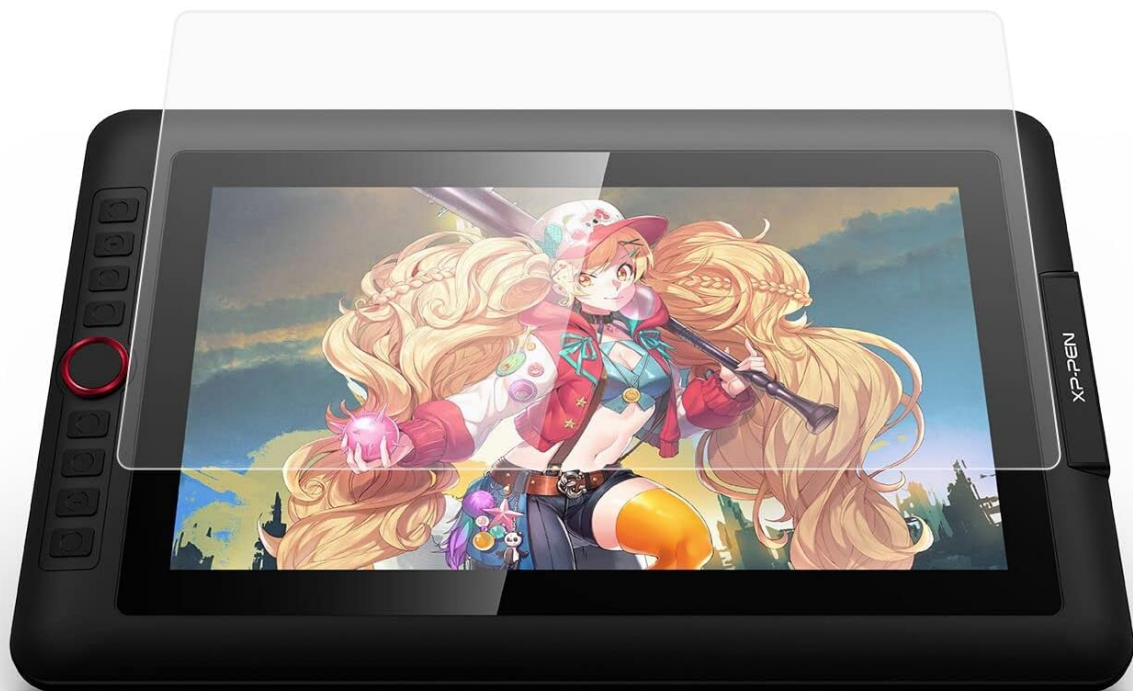 


Image: A graphic displaying the compatibility of the XPPen Artist13.3 Pro with various operating systems (Windows, Mac, Chrome, Linux) and creative software applications (Ps, Au, 3ds Max, Dw, Ai, SAI, Pr, GIMP, ZBrush, Krita).

7. MAINTENANCE

7.1. Cleaning the Device

- Use the provided cleaning cloth or a soft, lint-free cloth to gently wipe the screen and tablet surface.
- Do not use harsh chemicals, alcohol, or abrasive cleaners, as these can damage the screen and finish.
- Ensure the device is powered off and disconnected before cleaning.

7.2. Pen Nib Replacement

The stylus nibs will wear down over time. Replace them when they become too short or sharp to maintain optimal drawing performance.

1. Use the nib clip tool (often found in the pen holder) to gently pull out the old nib.
2. Insert a new replacement nib firmly into the stylus until it clicks into place.

7.3. Storage

When not in use, store the tablet and stylus in a clean, dry place, away from extreme temperatures and direct sunlight. Use the pen holder to protect the stylus.

8. TROUBLESHOOTING

- **No Display/Signal:**
 - Ensure all cables (HDMI, USB) are securely connected.
 - Verify that the power adapter is connected if your computer cannot supply enough power.
 - Check your computer's display settings to ensure the tablet is detected as an external monitor.
- **Pen Not Working/Jittery:**
 - Confirm that the correct XPPen driver is installed and updated. Uninstall any conflicting drivers from other brands.
 - Restart your computer and the tablet after driver installation.
 - Check if the pen nib is properly inserted or needs replacement.
 - Recalibrate the pen in the XPPen Tablet Settings.
- **Shortcut Keys/Red Dial Not Responding:**
 - Ensure the XPPen driver is running in the background.
 - Verify that the functions are correctly assigned in the XPPen Tablet Settings.
 - Test with different applications to see if the issue is software-specific.

For further assistance, please refer to the official XP-PEN support website or contact customer service.

9. SPECIFICATIONS

Feature	Detail
Product Dimensions	9.84 x 15.37 x 0.1 inches
Item Weight	4.4 pounds
Model Number	Artist 13.3Pro

Feature	Detail
Connectivity Technology	3 in 1 cable
Pressure Sensitivity	8192 Levels
Operating System	Windows 10/8/7 (32/64bit), Mac OS X 10.10 and higher
Special Feature	Portable
Visible Screen Diagonal	14" / 34 cm

10. WARRANTY AND SUPPORT

10.1. Warranty Information

The XPPen Artist13.3 Pro comes with a **12-month protection plan**. During this limited protection period, XPPen will repair or replace, at XPPen's sole option, any parts of the product that are defective or malfunctioning during normal usage.



12 PROTECTION PLAN

12 Month

During the limited protection period, XPPen will repair or replace at XPPen's sole option, any parts of the product that are defective or malfunctioning during normal usage.

Image: Graphic indicating a 12-month protection plan for the XPPen product, detailing repair or replacement for defective parts under normal usage.

10.2. Customer Support

For technical support, warranty claims, or any inquiries regarding your XPPen Artist13.3 Pro, please visit the official XPPEN website or contact their customer service directly.

You can also refer to the official User Manual (PDF) for additional details: [Download User Manual PDF](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question