

Manuals.plus /

> iClever /

> iClever GK08 Wireless Keyboard and Mouse Combo User Manual

## iClever GK08

# iClever GK08 Wireless Keyboard and Mouse Combo User Manual

Model: GK08 | Brand: iClever

## 1. INTRODUCTION

Thank you for choosing the iClever GK08 Wireless Keyboard and Mouse Combo. This manual provides comprehensive instructions for setting up, operating, maintaining, and troubleshooting your new device. Please read this manual carefully before use to ensure optimal performance and longevity of your product.

## 2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- iClever GK08 Wireless Keyboard
- iClever Wireless Mouse
- 2.4GHz USB-A Nano Receiver
- USB-C Charging Cable
- Silicone Keyboard Cover
- User Manual (this document)



Figure 2.1: Contents of the iClever GK08 Wireless Keyboard and Mouse Combo package.

## 3. SETUP GUIDE

### 3.1 Charging the Devices

Both the keyboard and mouse are equipped with built-in rechargeable batteries. Before initial use, it is recommended to fully charge both devices.

1. Connect the provided USB-C charging cable to the USB-C port on the keyboard and mouse.
2. Connect the other end of the cable to a USB power source (e.g., computer USB port, USB wall adapter).
3. The charging indicator light will illuminate during charging and turn off when fully charged.



Figure 3.1: USB-C charging ports on the keyboard and mouse.

### 3.2 Connecting the Wireless Combo

The iClever GK08 combo uses a 2.4GHz wireless connection via a single USB-A nano receiver.

1. Locate the USB-A nano receiver, which is typically stored in a compartment at the bottom of the mouse.
2. Remove the nano receiver from its storage slot.
3. Insert the USB-A nano receiver into an available USB-A port on your computer.
4. Turn on the keyboard and mouse using their respective ON/OFF switches. The devices should connect automatically within a few seconds.

## LOW PROFILE KEYS

Remarkably tactile for a comfortable and silent typing experience



Figure 3.2: USB receiver stored in the mouse and its location.



Figure 3.3: Inserting the USB receiver into a computer's USB-A port.

### 3.3 Compatibility Notes

The iClever GK08 is compatible with Windows and Mac operating systems. For newer Mac devices that only feature USB-C ports, a USB-C to USB-A adapter (not included) will be required to connect the nano receiver.

# Devices Compatibility

- ✓ All Windows PC/laptop devices
- ✓ Mac/iMac models featuring USB-A ports



Windows laptop



Windows PC



iMac



MacBook

## Mac/iMac Users: Please Double-Check

Verify Your Model Before Purchase



USB-A port



USB-C port

### Models

Featuring a USB-A port

#### iMac

(Retina 5K, 27-inch, 2020)  
(Retina 4K, 21.5-inch, 2019)  
(Retina 5K, 27-inch, 2019)  
(Retina 4K, 21.5-inch, 2017)  
(Retina 5K, 27-inch, 2017)

#### MacBook Air

(2017 and earlier)

#### MacBook Pro

(2015 and earlier)

Figure 3.4: Device compatibility overview.

## 4. OPERATING INSTRUCTIONS

### 4.1 Keyboard Features

- **Full-Size Layout:** The keyboard features a complete 110-key layout, including a numeric keypad for efficient data entry.
- **Quiet Scissor-Switch Keys:** Designed for a silent and comfortable typing experience, ideal for various environments.
- **Dual Layout:** Keys are marked for both Windows and Mac operating systems, allowing seamless switching.
- **Auto-Sleep Function:** The keyboard enters sleep mode after 10 minutes of inactivity to conserve battery life. Press any key to wake it up.

# ERGONOMIC FULL-SIZE LAYOUT

**10** Degree Optimum Slope



Figure 4.1: Ergonomic full-size layout of the keyboard.

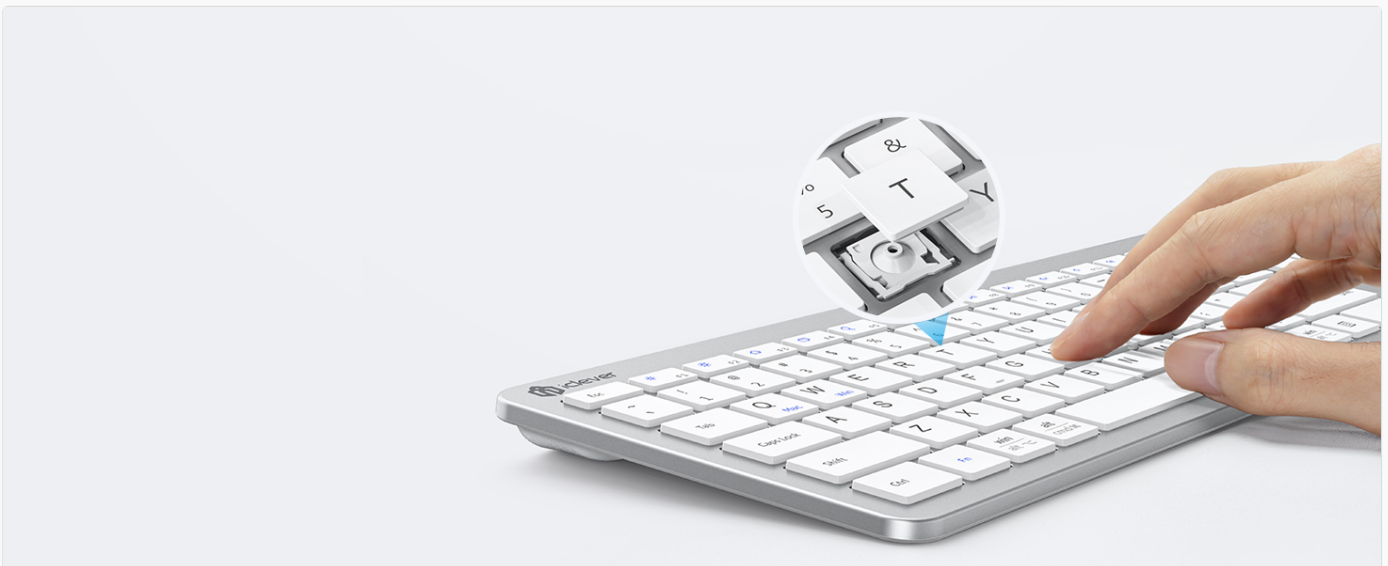


Figure 4.2: Scissor-switch key mechanism for quiet typing.

## 4.2 Mouse Features

- **Adjustable DPI:** The mouse features 3 adjustable DPI settings (800, 1200, 1600) for precise cursor control. Press the DPI button on top of the mouse to cycle through settings.
- **Quiet Clicks:** Designed for silent operation, minimizing click noise.

- **Ergonomic Design:** The ultra-slim mouse is designed to fit comfortably in your hand.

## WHISPER QUIET AND DURABLE BUTTONS



Figure 4.3: Mouse features including adjustable DPI.

## 5. MAINTENANCE

### 5.1 Cleaning

- Use a soft, dry cloth to clean the surface of the keyboard and mouse.
- The included silicone keyboard cover is washable. Remove it from the keyboard and wash with mild soap and water, then air dry completely before placing it back on the keyboard.
- Avoid using harsh chemicals or abrasive materials, as these may damage the finish.

### 5.2 Battery Care

- To prolong battery life, avoid fully discharging the devices frequently.
- If the devices will not be used for an extended period, turn them off to conserve battery.
- Store in a cool, dry place away from extreme temperatures.

## 6. TROUBLESHOOTING

| Problem                            | Possible Cause                                                             | Solution                                                                                                                                                       |
|------------------------------------|----------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Keyboard/Mouse not responding      | Low battery; Receiver not properly connected; Device is off; Out of range. | Charge the keyboard/mouse; Ensure the USB receiver is firmly plugged into a working USB-A port; Turn on the device; Move closer to the receiver (within 33ft). |
| Lagging or intermittent connection | Interference from other wireless devices; Low battery; Receiver issue.     | Move the receiver to a different USB port, preferably on the front of your computer; Charge the devices; Avoid using near strong electromagnetic sources.      |
| Keys not working or sticking       | Debris under keys; Software issue.                                         | Clean the keyboard, especially under the silicone cover; Restart your computer.                                                                                |
| Mouse cursor erratic               | Dirty sensor; Uneven surface; Low battery.                                 | Clean the optical sensor on the bottom of the mouse; Use on a flat, non-reflective surface; Charge the mouse.                                                  |

If you continue to experience issues, please refer to the official iClever support resources or contact customer service.

7. SPECIFICATIONS

| Feature                      | Detail                                                |
|------------------------------|-------------------------------------------------------|
| Model Number                 | GK08                                                  |
| Connectivity Technology      | 2.4 GHz Wireless (USB-A Nano Receiver)                |
| Wireless Range               | Up to 33 feet (10 meters)                             |
| Keyboard Dimensions          | 15.75 x 3.94 x 0.71 inches                            |
| Keyboard Weight              | 14.8 ounces                                           |
| Mouse DPI Settings           | 800, 1200, 1600                                       |
| Battery Type                 | Rechargeable Lithium Ion (1 required for each device) |
| Charging Port                | USB-C                                                 |
| Compatible Operating Systems | Windows 10/11, macOS (with USB-A port or adapter)     |

# ULTRA SLIM DESIGN



Figure 7.1: Dimensions of the iClever GK08 Keyboard and Mouse.

## 8. WARRANTY AND SUPPORT

### 8.1 Warranty Information

iClever products typically come with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging or visit the official iClever website for detailed warranty terms and conditions. Keep your purchase receipt as proof of purchase for warranty claims.

### 8.2 Customer Support

For technical assistance, troubleshooting, or any inquiries regarding your iClever GK08 Wireless Keyboard and Mouse Combo, please contact iClever customer support through their official website or the contact information provided in your product packaging.

You can also find additional resources, including FAQs and updated drivers, on the iClever support page:

[www.iclever.com/support](http://www.iclever.com/support)

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B07VPMTWMC>

More documents and user manuals: <https://manuals.plus/>