

DRomance CDGL-G-8

DRomance 9" Flameless Window Taper Candles User Manual

Model: CDGL-G-8

1. INTRODUCTION

Thank you for choosing DRomance Flameless Window Taper Candles. This manual provides essential information for the safe and effective use of your new flameless candles. These battery-operated LED candles offer a realistic flickering effect, enhancing your home decor without the hazards of open flames. Please read these instructions carefully before use and retain them for future reference.

2. PACKAGE CONTENTS

- 8 x Flameless Taper Candles (White)
- 8 x Removable Gold Holders
- 8 x Suction Cups
- 1 x 8-Key Remote Control
- 16 x AA Batteries (2 per candle)

3. SETUP

3.1 Battery Installation

1. Remove the bottom cap of each taper candle.
2. Insert two (2) AA batteries into each candle, ensuring correct polarity (+/-).
3. Replace the bottom cap securely.
4. Locate the slide switch on the bottom of the candle and slide it to the "ON" position. The candle will illuminate.

3.2 Attaching Holders and Suction Cups

- Place each taper candle into a gold holder.
- To attach to a window or smooth surface, moisten the suction cup slightly before pressing it firmly onto the desired surface.
- Insert the candle with its holder into the suction cup's slot.

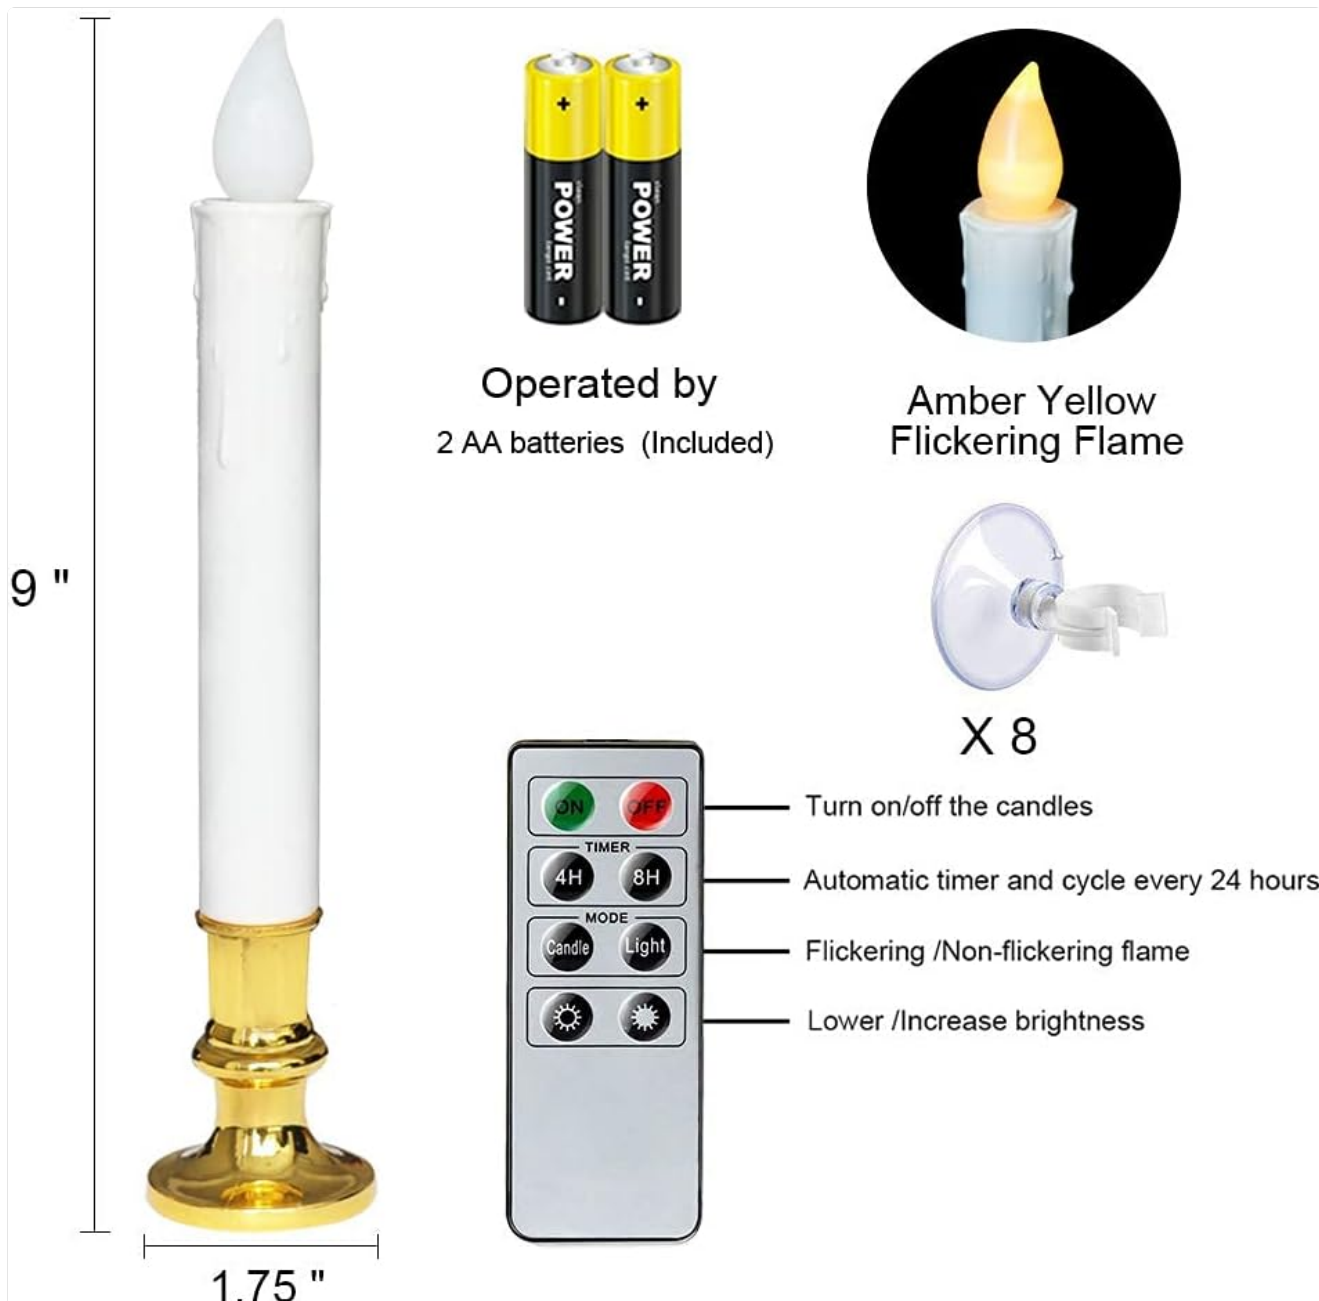


Image: Components and dimensions of the DRomance Flameless Taper Candle, including battery placement, suction cup, and remote control functions.

Your browser does not support the video tag.

Video: A visual guide demonstrating battery insertion, attaching suction cups to holders, and basic remote control functions for the DRomance Flameless Window Taper Candles.

4. OPERATION

The included 8-key remote control allows for convenient operation of your flameless candles.

4.1 Remote Control Functions

- **ON/OFF:** Press the green "ON" button to turn all candles on. Press the red "OFF" button to turn all candles off.
- **TIMER (4H/8H):** Activate the timer function. The candles will stay on for 4 or 8 hours respectively, then automatically turn off. They will reactivate at the same time the next day, cycling every 24 hours.
- **MODE (Candle/Light):** Switch between flickering flame mode ("Candle") and steady light mode ("Light").
- **Brightness Adjustment:** Use the sun icon buttons (up/down arrows) to increase or decrease the brightness of

the candles.



Image: Multiple DRomance flameless taper candles displaying their warm LED light, suitable for various indoor settings.

5. FEATURES

- **Realistic Flickering:** LED technology mimics the natural flicker of a real candle.
- **Safe Operation:** Flameless design eliminates fire hazards, smoke, and messy wax.
- **Convenient Remote Control:** Manage ON/OFF, timer, mode, and brightness settings from a distance.
- **Timer Functionality:** 4-hour and 8-hour timer options with a 24-hour cycle.
- **Versatile Placement:** Includes suction cups for easy attachment to windows or other smooth surfaces.
- **Long Battery Life:** Designed for extended use in timer modes.

6. CARE AND MAINTENANCE

- **Cleaning:** Wipe the candles and holders with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.

- **Battery Replacement:** Replace batteries when the light dims or the candles stop responding to the remote. Always replace all batteries in a candle at the same time with new AA batteries.
- **Storage:** If storing for an extended period, remove batteries to prevent leakage and store in a cool, dry place.
- **Indoor Use Only:** These candles are designed for indoor use and are not water-resistant. Avoid exposure to moisture or extreme temperatures.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Candle does not light up.	Batteries are inserted incorrectly or are depleted. Slide switch is OFF.	Check battery polarity and replace batteries if necessary. Ensure the slide switch on the candle's base is in the "ON" position.
Remote control is not working.	Remote battery is depleted. Remote is too far or obstructed.	Replace the remote control battery. Ensure you are within range and have a clear line of sight to the candles.
Candle light is dim.	Batteries are low. Brightness setting is low.	Replace batteries. Use the brightness increase button on the remote.
Suction cup does not stick.	Surface is not clean or smooth. Suction cup is dry.	Clean the surface thoroughly. Moisten the suction cup slightly before applying.

8. SPECIFICATIONS

- **Model:** CDGL-G-8
- **Dimensions:** 1"D x 1"W x 9"H
- **Material:** Plastic
- **Light Source:** LED
- **Power Source:** 2 x AA Batteries per candle (Included)
- **Control Method:** Remote Control
- **Special Features:** 2-way switching, Cycle Timer (4H/8H), Dimmable, Instant On, Flickering/Steady Light Mode
- **Indoor/Outdoor Usage:** Indoor Use Only
- **Water Resistance:** Not Water Resistant
- **UPC:** 705814043020

9. WARRANTY AND SUPPORT

DRomance provides a satisfaction guarantee for its products. Each LED window taper candle is thoroughly tested before leaving our factory. If any problems occur with your DRomance flameless candles, please contact our customer support team for assistance.

For support, please refer to the contact information provided with your purchase or visit the official DRomance store on Amazon.

DRomance Customer Support: [Visit the DRomance Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question