

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [SuppliesMAX](#) /

› [SuppliesMAX Compatible Replacement Ricoh Aficio 1015/1018/1113/1810P Toner Cartridge \(Type 1140D\) Instruction Manual](#)

## SuppliesMAX Type 1140D (888086)

# SuppliesMAX Compatible Replacement Toner Cartridge Instruction Manual

For Ricoh Aficio 1015, 1018, 1113, 1810P (Type 1140D, 888086)

## 1. INTRODUCTION

This manual provides instructions for the proper installation, operation, and maintenance of your SuppliesMAX Compatible Replacement Toner Cartridge. This cartridge is designed for use with Ricoh Aficio 1015, 1018, 1113, and 1810P series printers.



Image 1.1: SuppliesMAX Compatible Toner Cartridge and its retail packaging. The cartridge is black and cylindrical, designed to fit specific Ricoh Aficio printer models.

## 2. SAFETY INFORMATION

- Keep toner cartridges out of reach of children.
- Do not ingest toner. If toner is swallowed, seek medical attention immediately.

- Avoid inhaling toner dust. If toner is spilled, clean it up with a damp cloth. Do not use a vacuum cleaner, as toner particles can be flammable.
- Do not expose toner cartridges to open flames or high temperatures.
- Store cartridges in a cool, dry place, away from direct sunlight.
- Dispose of used cartridges according to local regulations. Many manufacturers offer recycling programs.

### 3. PACKAGE CONTENTS

---

The package contains the following items:

- 1 x SuppliesMAX Compatible Replacement Toner Cartridge (Type 1140D, 888086)

### 4. SETUP AND INSTALLATION

---

Follow these general steps to install the toner cartridge. For specific instructions, always refer to your printer's official user manual.

1. **Power Off Printer:** Ensure your printer is turned off and unplugged before beginning the installation process.
2. **Open Printer Cover:** Open the front cover or access panel of your Ricoh Aficio printer to expose the toner compartment.
3. **Remove Old Cartridge:** Carefully remove the empty toner cartridge by pulling it straight out. Place the used cartridge in a sealed bag for proper disposal.
4. **Unpack New Cartridge:** Remove the new SuppliesMAX toner cartridge from its packaging.
5. **Gently Shake Cartridge:** Hold the new cartridge horizontally and gently shake it 5-6 times to distribute the toner evenly inside.
6. **Remove Protective Seals:** Carefully remove any protective tapes, seals, or covers from the cartridge. Do not touch the green drum surface (if applicable) or the toner opening.
7. **Insert New Cartridge:** Align the new toner cartridge with the guides inside the printer and slide it firmly into place until it clicks or locks securely.
8. **Close Printer Cover:** Close the printer's front cover or access panel.
9. **Power On Printer:** Plug in and turn on your printer. The printer may perform a calibration cycle.



*Image 4.1: Close-up view of the SuppliesMAX Compatible Toner Cartridge. Note the "TONER" label and the cylindrical shape, indicating the component to be inserted into the printer.*

## 5. OPERATING INSTRUCTIONS

---

Once the toner cartridge is successfully installed, your printer is ready for operation.

- **Print Test Page:** It is recommended to print a test page to ensure proper installation and print quality.
- **Monitor Toner Levels:** Your printer's software or control panel will typically display estimated toner levels. Replace the cartridge when the printer indicates it is low or empty to maintain print quality.
- **Print Quality:** If print quality issues arise (e.g., streaks, faded prints), refer to the troubleshooting section or your printer's manual for print head cleaning or calibration procedures.

## 6. MAINTENANCE

---

- **Storage:** Store unused toner cartridges in their original sealed packaging in a cool, dry environment, away from direct sunlight and extreme temperatures.
- **Handling:** Always handle cartridges carefully to avoid damage or toner spills.
- **Disposal:** Do not throw used toner cartridges into household waste. Follow local guidelines for recycling or disposal. Many office supply stores or cartridge manufacturers offer recycling services.

## 7. TROUBLESHOOTING

---

If you encounter issues after installing your SuppliesMAX toner cartridge, consider the following:

- **Cartridge Not Recognized:**
  - Ensure the cartridge is fully seated in its slot. Remove and re-insert it firmly.
  - Turn the printer off, unplug it for a few minutes, then plug it back in and turn it on. This can reset the printer's memory.
  - Check for any protective tapes or seals that might have been missed during installation.
- **Poor Print Quality (Faded, Streaks, Spots):**
  - Gently shake the cartridge again to redistribute toner.
  - Perform a printer cleaning cycle or calibration through your printer's control panel or software.
  - Ensure the paper type and quality settings in your printer driver match the paper being used.
- **Toner Leaks:**
  - Remove the cartridge and inspect it for any visible damage.
  - Clean any spilled toner inside the printer with a dry, lint-free cloth. Do not use water or solvents.

If problems persist, contact SuppliesMAX customer support or consult your printer's official troubleshooting guide.

## 8. SPECIFICATIONS

---

<b>Brand</b>	SuppliesMAX
<b>Model Number</b>	Type 1140D (888086)

<b>Compatible Printers</b>	Ricoh Aficio 1015, Ricoh Aficio 1018, Ricoh Aficio 1018D, Ricoh Aficio 1113, Ricoh Aficio 1810P, Nashuatec 1505, Nashuatec 1805, Nashuatec 1805D
<b>Toner Color</b>	Black
<b>Page Yield</b>	Approximately 9,000 pages at 5% coverage
<b>Item Weight</b>	Approximately 7 pounds (3.17 kg)

## 9. WARRANTY AND SUPPORT

---

SuppliesMAX products are manufactured to meet original equipment specifications. For specific warranty details and customer support, please refer to the information provided with your purchase or visit the official SuppliesMAX website.

For assistance, please contact SuppliesMAX customer service.