

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Bontempi](#) /

› [Bontempi 16 6130 Digital Piano User Manual](#)

Bontempi 16 6130

Bontempi 16 6130 Digital Piano

User Manual

[Safety Information](#) [Product Overview](#) [Setup & Assembly](#) [Operating Instructions](#) [Connectivity](#) [Specifications](#) [Maintenance](#) [Troubleshooting](#)

1. SAFETY INFORMATION

Warning: Not suitable for children under 7 years of age.

Please read all safety instructions carefully before using the Bontempi 16 6130 Digital Piano. Keep this manual for future reference.

- Ensure the product is placed on a stable, flat surface to prevent tipping.
- Do not expose the instrument to extreme temperatures, direct sunlight, or high humidity.
- Keep away from water or other liquids.
- Use only the provided power adapter or recommended batteries.
- Do not attempt to disassemble or modify the instrument. Refer all servicing to qualified personnel.

2. PRODUCT OVERVIEW

The Bontempi 16 6130 Digital Piano is a versatile electronic keyboard designed for both beginners and experienced players. It features 61 professional step keys and a wide array of sounds, rhythms, and learning functions to enhance your musical experience.

Key Features:

- 61 professional step keys
- 128 sounds and 10-note polyphony
- 128 rhythms
- 30 pre-recorded songs
- 3 piano sound stamps
- 8 pads for rhythmic instruments or animal sounds
- Easy chord management (single/finger chord, chord off)

- 2 learning levels
- Display to show functions
- Sequencer for recording and playback
- Rhythm programming and metronome function
- Transposer for changing pitch
- Effects: Vibrato, Sustain
- MP3 playback from USB flash drive
- Includes wooden legs and power adapter

3. SETUP AND ASSEMBLY

3.1 Unpacking

Carefully remove all components from the packaging. Ensure all parts are present: the digital piano unit, wooden legs, music stand, and power adapter.

3.2 Assembling the Wooden Legs

Attach the wooden legs to the main piano unit using the provided hardware. Ensure they are securely fastened to provide a stable base for the instrument.



Image: The Bontempi 16 6130 Digital Piano fully assembled with its wooden legs and the power adapter connected.

3.3 Power Supply

The digital piano can be powered in two ways:

1. **AC Adapter:** Connect the included power adapter to the DC IN socket on the piano and then to a standard wall outlet.
2. **Batteries:** For portable use, insert 6 x 1.5V R6/AA batteries (not included) into the battery compartment

located on the underside of the piano. Ensure correct polarity.

Note: Disconnect the AC adapter when using batteries, and remove batteries if the instrument will not be used for an extended period.

3.4 Music Stand

Insert the music stand into the designated slots on the top panel of the piano.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

Press the **POWER ON/OFF** button to turn the instrument on or off. The display will illuminate when powered on.

4.2 Volume Control

Use the **GENERAL VOLUME** controls (usually +/- buttons or a dial) to adjust the overall sound level.



Image: A detailed view of the control panel, showing buttons for sounds, rhythms, and various functions.

4.3 Selecting Sounds (Tones)

The piano offers 128 different sounds, including 3 dedicated piano sound stamps. To select a sound:

1. Press the **SOUNDS** button.
2. Use the number pad or +/- buttons to enter the desired sound number. The selected sound will be shown on the display.

4.4 Playing Rhythms

The instrument includes 128 rhythms. To start a rhythm:

1. Press the **RHYTHMS** button.
2. Use the number pad or +/- buttons to select a rhythm.
3. Press **START/STOP** to begin or end the rhythm.
4. Adjust the tempo using the **TEMPO +/-** buttons.

4.5 Rhythmic Pads

Use the 8 pads to play rhythmic instruments or animal sounds. Simply press a pad to activate its assigned sound.

4.6 Pre-recorded Songs

The piano has 30 pre-recorded songs. To play a song:

1. Press the **SONGS** button.
2. Select a song number using the number pad or +/- buttons.
3. Press **PLAY** to start the song. Press again to stop.

4.7 Chord Management

- **Single/Finger Chord:** Activates automatic chord accompaniment. Refer to the manual's chord chart for specific fingerings.
- **Chord Off:** Disables automatic chord accompaniment, allowing for full keyboard play.
- **Bass Chord:** Engages a bass line accompaniment with chords.

4.8 Learning Levels

The instrument features 2 learning levels to assist with practice. Consult the detailed instructions in the full manual for how to utilize these modes effectively.

4.9 Sequencer (Record & Playback)

The sequencer allows you to record your performances and play them back:

1. Press the **RECORD** button to start recording.
2. Play your desired melody.
3. Press **PLAY** to listen to your recorded performance.

4.10 Metronome

Press the **METRONOME** button to activate a steady click for timing practice. Adjust tempo with **TEMPO +/-**.

4.11 Transposer

Use the **TRANSPOSER** function to change the pitch of the keyboard without changing your fingering. This is useful for playing in different keys.

4.12 Effects (Vibrato, Sustain)

Activate **VIBRATO** for a wavering pitch effect or **SUSTAIN** to prolong the sound of notes after the keys are released.

4.13 Other Functions

- **Fill-in:** Adds a short rhythmic variation during rhythm playback.
- **Sync:** Starts a rhythm automatically when you play a key or chord.
- **Split:** Divides the keyboard into two sections, allowing different sounds or functions on each side.

5. CONNECTIVITY AND MEDIA

5.1 USB Flash Drive (MP3 Playback)

The digital piano supports MP3 playback from a USB flash drive. Insert a USB flash drive containing MP3 songs into the **USB** socket. Use the dedicated controls for MP3 songs (play, pause, next, previous) to manage playback.

5.2 Microphone Input

Connect a condenser microphone (not included) to the **MICROPHONE** socket to sing along with your playing or the built-in songs.

5.3 Headphone/Hi-Fi Output

Connect headphones to the **HEADPHONE/HI-FI** socket for private practice. This output can also be used to connect the piano to an external amplifier or sound system.

6. TECHNICAL SPECIFICATIONS

Feature	Detail
Model Number	16 6130
Number of Keys	61
Sounds	128
Polyphony	10 notes
Rhythms	128
Pre-recorded Songs	30
Power Supply	AC adapter (included) or 6 x 1.5V R6/AA batteries (not included)
Amplification	Stereo
Dimensions (L x W x H)	93 x 30 x 74 cm (with legs)
Weight	11.52 kg
Material	Wood (legs), Plastic (keyboard body)
Recommended Age	36 months - 7 years (manufacturer recommended), 6 years to 99 years (description)

7. CARE AND MAINTENANCE

- Cleaning:** Use a soft, dry cloth to wipe the surface of the piano. Do not use abrasive cleaners, waxes, or solvents.
- Storage:** When not in use, store the piano in a clean, dry place away from direct sunlight and extreme temperatures.

- **Battery Care:** If using batteries, remove them if the instrument will not be used for an extended period to prevent leakage.
- **Avoid Impact:** Protect the instrument from drops or strong impacts, which can damage internal components or the keys.

8. TROUBLESHOOTING

If you encounter any issues with your Bontempi 16 6130 Digital Piano, please refer to the following common solutions:

- **No Power:**
 - Ensure the AC adapter is securely connected to both the piano and a working power outlet.
 - If using batteries, check that they are inserted correctly and are not depleted. Replace if necessary.
- **No Sound:**
 - Check the master volume level. Increase it if it's too low.
 - If headphones are connected, sound will only come through the headphones. Disconnect them if you want sound from the speakers.
 - Ensure no cables are loose or damaged.
- **Keys Not Responding:**
 - Power off the unit, wait a few seconds, and power it back on.
 - Ensure no foreign objects are lodged between the keys.
- **Distorted Sound:**
 - Lower the volume to see if the distortion reduces.
 - Check if any effects (like Vibrato or Sustain) are unintentionally activated.

If the problem persists after trying these steps, please contact customer support.

9. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. Please retain your proof of purchase for any warranty claims. For technical support, service, or further inquiries, please refer to the contact information provided with your purchase documentation or visit the official Bontempi website.