

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [UBay](#) /
- › [UBay EN-KA90 Remote Control Instruction Manual for Hisense LED HDTVs](#)

UBay EN-KA90

UBay EN-KA90 Remote Control Instruction Manual

For Hisense LED HDTV Models: 32D20, 32D33, 32H3, 40H3C1, 32W22

INTRODUCTION

This manual provides instructions for the UBay EN-KA90 replacement remote control. This remote is designed to be compatible with various Hisense LED HDTV models, including 32D20, 32D33, 32H3, 40H3C1, and 32W22. It functions as a direct replacement for your original remote, requiring no programming or setup beyond battery installation.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two new AAA alkaline batteries (not included), ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.

Note: This remote control does not require any programming or pairing. Once batteries are installed correctly, it is ready for immediate use with compatible Hisense TV models.

OPERATING INSTRUCTIONS

The UBay EN-KA90 remote control features a standard layout for easy navigation and control of your Hisense LED HDTV. Below is an overview of the remote and its primary button functions.



Image: Front view of the UBay EN-KA90 remote control, showing all buttons and their labels. The remote is black with grey buttons. Key buttons include Power, Input, Mute, Number Pad, Volume Up/Down, Channel Up/Down, Navigation Pad with OK, Menu, Exit, and various function buttons like Auto, Aspect, Still, Sleep, FAV List, Picture, Sound, CH List, Guide, TV, AV, VGA, and Media.

Button Functions

- **Power** (): Turns the TV on or off.
- **Input**: Selects the video input source (e.g., HDMI, AV, Component).
- **Mute**: Mutes or unmutes the TV sound.
- **Number Pad (0-9)**: Directly enters channel numbers.
- **Last**: Returns to the previously viewed channel.

- **SAP / MTS**: Selects Secondary Audio Program or Multi-channel Television Sound.
- **CCD**: Activates Closed Captioning.
- **VOL (+/-)**: Adjusts the volume level up or down.
- **CH. (+/-)**: Changes the channel up or down.
- **Display**: Shows on-screen information about the current program or input.
- **Navigation Pad (Up, Down, Left, Right)**: Navigates through menus and options.
- **OK**: Confirms selections in menus.
- **Exit**: Exits the current menu or on-screen display.
- **Menu**: Opens the main TV menu.
- **Auto**: Initiates auto-tuning or auto-adjustment for certain inputs.
- **Aspect**: Changes the screen aspect ratio.
- **Still**: Pauses the current video frame.
- **Sleep**: Sets a sleep timer for the TV.
- **FAV LIST / ADD/ERASE**: Accesses or manages favorite channel lists.
- **FAV+ / FAV-**: Navigates through favorite channels.
- **Play/Pause (/)**: Controls media playback (if supported by TV).
- **Stop ()**: Stops media playback (if supported by TV).
- **Rewind ()**: Rewinds media playback (if supported by TV).
- **Fast Forward ()**: Fast forwards media playback (if supported by TV).
- **Picture**: Accesses picture settings.
- **Sound**: Accesses sound settings.
- **CH LIST**: Displays the channel list.
- **Guide**: Opens the electronic program guide (EPG).
- **TV**: Switches to TV tuner input.
- **AV**: Switches to AV input.
- **VGA**: Switches to VGA input.
- **Media**: Accesses media playback functions (e.g., USB media).

MAINTENANCE

- **Cleaning**: Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement**: Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA alkaline).
- **Storage**: If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Avoid Damage**: Do not drop the remote, expose it to extreme temperatures, or immerse it in water.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA alkaline batteries.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Ensure you are within the effective range and pointing the remote directly at the TV.
- **Some buttons not working:**
 - This remote is a replacement and may not support all advanced functions of certain Hisense TV models if those functions were unique to the original remote.
 - Verify that the button function is applicable to your TV's current mode (e.g., media control buttons only work when media is playing).

- **TV not responding consistently:**

- Interference from strong light sources (like direct sunlight or fluorescent lights) can affect remote performance. Try operating the remote in a different environment.
- Ensure the TV's infrared sensor is clean and unobstructed.

SPECIFICATIONS

Model Number	EN-KA90
Brand	UBay
Compatible Devices	Hisense LED HDTVs (Models: 32D20, 32D33, 32H3, 40H3C1, 32W22)
Power Source	2 x AAA Alkaline Batteries (not included)
Product Dimensions	8 x 2 x 0.7 inches (approximately)
Item Weight	2.82 ounces (approximately)
Special Feature	Ergonomic design
Color	Black

WARRANTY AND SUPPORT

For warranty information or technical support regarding your UBay EN-KA90 remote control, please refer to the documentation provided at the time of purchase or contact the seller directly. As a replacement remote, specific warranty terms may vary.

Manufacturer: UBay Factory