

ECONTROLLY AKB69680409

ECONTROLLY AKB69680409 Replacement Remote Control

User Instruction Manual

INTRODUCTION

This manual provides instructions for the ECONTROLLY AKB69680409 replacement remote control. This remote is designed to function as a direct replacement for various LG TV models, including 42PQ30-UA, 50PQ30C-UA, 50PQ30-UA, AKB69680423, AKB69680416, 50PS30, 50PS60, 50PS60-UA, 60PS60, 42PQ30C, 50PQ20, 50PQ30C, 60PS60C, 42PQ31, 50PQ31, and 42PQ60. It requires no programming and operates simply by installing batteries.





Figure 1: Front view of the AKB69680409 Remote Control. This image displays the full layout of the remote's buttons, including the power button, number pad, volume and channel controls, navigation keys, and various function buttons.

SETUP

The ECONTROLLY AKB69680409 remote control is designed for immediate use without any complex programming. Follow these steps to prepare your remote for operation:

- 1. Open the Battery Compartment:** Locate the battery compartment cover on the back of the remote control. Slide or press the latch to open it.
- 2. Insert Batteries:** Insert two (2) AAA alkaline batteries into the compartment. Ensure that the positive (+) and negative (-) terminals of the batteries align correctly with the markings inside the compartment.
- 3. Close the Battery Compartment:** Replace the battery compartment cover, ensuring it clicks securely into place.
- 4. Test the Remote:** Point the remote control towards your LG TV and press the Power button. The TV should respond. No further programming is required.



Figure 2: Angled view of the AKB69680409 Remote Control. This perspective highlights the remote's ergonomic shape and button placement from a side angle.

OPERATING INSTRUCTIONS

The AKB69680409 remote control provides full functionality for your compatible LG TV. Below is a guide to its primary buttons and their functions:

- **POWER:** Turns the TV on or off.
- **INFO:** Displays information about the current program or input.
- **INPUT:** Selects the input source (e.g., HDMI 1, AV, Component).
- **ENERGY SAVING:** Adjusts the TV's power consumption settings.
- **Number Buttons (0-9):** Directly select TV channels.
- **LIST:** Displays a list of channels.
- **VOL (+/-):** Increases or decreases the volume level.
- **MUTE:** Mutes or unmutes the TV audio.
- **CH (▲/▼):** Changes TV channels up or down.

- **PAGE (▲/▼):** Navigates through pages in menus or lists.
- **Navigation Pad (◀/▲/▶/▼):** Moves the cursor or selection within menus.
- **ENTER:** Confirms a selection or enters a menu option.
- **MENU:** Opens the main TV menu.
- **Q.MENU:** Accesses the Quick Menu for common settings.
- **RETURN:** Returns to the previous screen or menu.
- **SIMPLINK:** Controls compatible LG devices connected via HDMI (HDMI-CEC).
- **Color Buttons (Red, Green, Yellow, Blue):** Used for specific functions within certain menus or applications.
- **FREEZE:** Pauses the current image on screen.
- **RATIO:** Changes the aspect ratio of the screen.
- **FAV:** Accesses favorite channels.
- **MARK:** Used for marking items in certain functions.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your remote control.

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both AAA batteries simultaneously with new ones. Do not mix old and new batteries, or different types of batteries.
- **Cleaning:** Clean the remote control with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops and Impacts:** Protect the remote from physical damage by avoiding drops or strong impacts.

TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following troubleshooting steps:

- **Remote Not Responding:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA alkaline batteries.
 - Check for any obstructions between the remote control and the TV's infrared receiver.
 - Ensure you are within the effective operating range and pointing the remote directly at the TV.
- **Specific Buttons Not Working:**
 - This could indicate a dirty contact under the button. Try gently pressing the button multiple times. If the issue persists, the remote may require replacement.
- **Remote Does Not Control My TV:**
 - Verify that your TV model is listed as compatible with the AKB69680409 remote control. This remote is a direct replacement and does not require programming for compatible models. If your TV model is not listed, this remote may not be compatible.

SPECIFICATIONS

Model Number	RCEC-AKB69680409
Brand	ECONTROLLY

Compatible Devices	LG Televisions (specific models listed in Introduction)
Power Source	2 x AAA Batteries (not included)
Product Dimensions	7 x 2 x 0.65 inches
Item Weight	1 ounce
Color	Black
Special Feature	Ergonomic Design

WARRANTY AND SUPPORT

For warranty information or technical support regarding your ECONTROLLY AKB69680409 replacement remote control, please refer to the original seller or manufacturer's documentation provided at the time of purchase. Specific warranty terms and support contacts may vary depending on your region and point of sale.

ECONTROLLY AKB69680409 User Manual © 2026. All rights reserved.