

- Manuals.plus /
- › VUOHOEG /
- › VUOHOEG 19V AC DC Adapter Charger User Manual

VUOHOEG FSP090-DMBF1

VUOHOEG 19V AC DC Adapter Charger User Manual

Brand: VUOHOEG | Model: FSP090-DMBF1

1. INTRODUCTION

This user manual provides essential information for the safe and effective use of your VUOHOEG 19V AC DC Adapter Charger. This power supply is designed to provide reliable power for compatible Westinghouse HD TVs and other electronic devices. Please read this manual thoroughly before using the product and retain it for future reference.



Figure 1: The VUOHOG 19V AC DC Adapter Charger and its accompanying power cord.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, observe the following precautions:

- Use only with compatible devices as specified in this manual.
- Do not expose the adapter to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the adapter to strong impacts.
- Do not disassemble or attempt to repair the adapter. Refer servicing to qualified personnel.
- Ensure proper ventilation around the adapter during use to prevent overheating.
- Unplug the adapter from the power outlet when not in use for extended periods.

PVC material, fireproof material, home charging is safer



Figure 2: The adapter incorporates multiple smart safety features including protection against over-temperature, over-voltage, short-circuit, and over-charging.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x AC Adapter
- 1 x Power Cord

4. SPECIFICATIONS

Feature	Detail
Input Voltage	AC 100-240V, 50-60Hz

Output Voltage	19V
Output Current	4.74A
Max Power	90W
Connector Size	5.5*2.5mm
Outlet Type	2-prong
Item Model Number	FSP090-DMBF1
Item Weight	14.9 ounces
Special Features	Short Circuit Protection, Over-Voltage Protection, Over-Temperature Protection, Over-Charging Protection



Figure 3: Physical dimensions of the adapter unit and cable length.

5. SETUP INSTRUCTIONS

1. **Verify Compatibility:** Ensure your device requires a 19V 4.74A (90W max) power supply with a 5.5*2.5mm barrel connector. Refer to your device's original power adapter or specifications.
2. **Connect Power Cord:** Insert the 2-prong power cord into the adapter's input port.
3. **Connect to Device:** Carefully insert the barrel connector of the adapter into the power input port of your compatible device.
4. **Plug into Outlet:** Plug the 2-prong power cord into a standard AC 100-240V wall outlet.
5. **Power On:** Once connected, your device should receive power. A green indicator light on the adapter will illuminate to confirm power delivery.



Figure 4: Ensure your device uses the correct round tip barrel connector (5.5*2.5mm) for compatibility.

19V 90W

AC DC ADAPTER CHARGER FOR JBL XTREME EXTRA BOOMBOX



Figure 5: Proper connection of the adapter to a device and power outlet, with the power indicator illuminated.

6. OPERATING INSTRUCTIONS

The adapter operates automatically once connected to a power source and a compatible device. It provides a stable 19V DC output for your electronic equipment.

Important Notes:

- The adapter is designed for continuous operation within its specified voltage and current limits.
- If the adapter feels excessively hot to the touch, disconnect it immediately and check for proper ventilation or device compatibility.

7. MAINTENANCE

Proper maintenance ensures the longevity of your power adapter:

- **Cleaning:** Disconnect the adapter from power and device before cleaning. Use a soft, dry cloth to wipe the surface. Do not use liquid cleaners or aerosols.
- **Storage:** When not in use, store the adapter in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cable Care:** Avoid bending or crimping the cables excessively, especially near the connectors, to prevent internal wire damage. The adapter's design emphasizes durability and flexibility.



Figure 6: The adapter's cable is designed for durability and flexibility, with a robust connector.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Device not powering on.	Adapter not properly connected; Power outlet issue; Incompatible device; Faulty adapter.	Ensure all connections are secure. Test the outlet with another device. Verify device compatibility with adapter specifications (voltage, amperage, connector size). If issues persist, contact support.
Adapter gets excessively hot during use.	Overload (device drawing too much power); Poor ventilation; Internal fault.	Ensure adequate airflow around the adapter. Confirm device power requirements do not exceed 90W. If excessively hot, disconnect and contact support immediately.
Intermittent power to device.	Loose connection; Damaged cable/connector.	Check all connections. Inspect cables and connectors for visible damage. Replace if damaged.

9. COMPATIBLE MODELS

This 19V 4.74A 90W AC adapter is compatible with various Westinghouse HD TV models and other devices requiring similar power specifications. Known compatible models include, but are not limited to:

- Westinghouse 24", 32", 42", 46" LED HDTV LCD models
- LD-2480, LD-3235, LD-4258, LD-4655VX, LD-4680, LD-4695
- 4655VX TW-62401-U046A EW39T6MZ LD Widescreen LED HDTV LCD
- Westinghouse HD TV LD-3235 Model # FSP090-DMBF1
- LD-3255VX, LD-3285VX, LD-4255VX (32-42" HDTV model FSP090-DMBF1)
- Westinghouse UW40TC1W, UW32SC1W, UW32S3PW
- LD-4655VX, LD-3285VX, LD-4255VX Widescreen 46" LED HDTV P/N FSP090-DMBF1
- LD-3260, LD-3257DF, LD-2657DF, LD-3237

*Note: Always verify the voltage, amperage, wattage, and connector size (5.5*2.5mm) of your specific device before using this adapter to ensure proper functionality and prevent damage.*

10. WARRANTY AND SUPPORT

This product is manufactured with high-quality materials and undergoes strict quality control. For any questions, technical support, or warranty inquiries, please contact the manufacturer, VUOHOEG, through the retailer's platform or their official contact channels.

Please retain your purchase receipt as proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07VRQYW3L>

More documents and user manuals: **<https://manuals.plus/>**