

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [VASAGLE](#) /

› VASAGLE Clothes Rack Instruction Manual

VASAGLE UHSR66BX

VASAGLE Clothes Rack Instruction Manual

Model: UHSR66BX

INTRODUCTION

This instruction manual provides detailed guidance for the assembly, operation, and maintenance of your new VASAGLE Clothes Rack (Model UHSR66BX). Designed with an industrial pipe style and rustic brown finish, this rolling garment organizer offers ample storage with a hanging rod and five-tier shelving. Please read this manual thoroughly before beginning assembly or use to ensure safe and proper operation.





Image: Front view of the VASAGLE Clothes Rack, showcasing its industrial pipe design and rustic brown shelves.

SAFETY INFORMATION

- Always follow assembly instructions carefully. Do not skip steps.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not exceed the maximum load capacity of 198.4 lb (90 kg) for the entire rack, and 132.3 lb (60 kg) for the hanging rod. Overloading can cause damage or injury.
- Distribute weight evenly across the hanging rod and shelves to maintain stability.
- Keep small parts and packaging materials away from children and pets during assembly to prevent choking hazards.
- Use the lockable wheels to secure the rack in place when not moving it to prevent accidental rolling.
- Avoid placing the rack in areas with high humidity or direct sunlight to prevent material degradation.

COMPONENTS LIST

Before assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

Part	Description	Quantity
A	Main Hanging Rod	1

Part	Description	Quantity
B	Side Shelves (Rustic Brown)	5
C	Base Board with Wheels	1
D	Vertical Support Pipes	Various
E	Connecting Elbows/Joints	Various
F	Assembly Kit (Screws, Allen Key, etc.)	1
G	Instruction Manual	1

Note: The exact quantity of pipes and joints may vary slightly based on design revisions. Refer to the included assembly diagram for precise counts.

SETUP AND ASSEMBLY

Assembly typically takes about an hour for one person. Follow these steps carefully. It is recommended to assemble on a soft, clean surface to prevent scratches.

- 1. Unpack and Identify Parts:** Lay out all components and compare them with the Components List and the assembly diagram provided in your physical instruction manual. Ensure all parts are present.
- 2. Attach Wheels to Base:** Secure the four wheels to the underside of the base board (Part C). Ensure the two lockable wheels are positioned on the same side for easy access.
- 3. Assemble Vertical Supports:** Begin by connecting the vertical support pipes (Part D) to the base board using the appropriate joints (Part E) and screws from the assembly kit (Part F). Do not fully tighten screws at this stage.
- 4. Install Shelves:** Attach the side shelves (Part B) to the vertical support pipes. It is crucial to align the holes correctly. As noted by some users, if holes do not align perfectly, install one or two screws, then gently apply pressure or twist the pipe slightly to align the remaining holes before inserting the rest of the screws.
- 5. Attach Hanging Rod:** Secure the main hanging rod (Part A) to the top of the vertical supports using the designated connectors.
- 6. Final Tightening:** Once all components are in place and the rack is fully assembled, go back and securely tighten all screws and fasteners. This step is critical for stability.



Hanging Rail



Strong Connectors



Thickened Board

Image: Detailed view of the hanging rail, strong pipe connectors, and the thickened base board, highlighting key structural elements.

OPERATING INSTRUCTIONS

Your VASAGLE Clothes Rack is designed for versatile storage and easy mobility.

- **Hanging Clothes:** Use the sturdy iron pipe rail to hang garments. The rail supports up to 132.3 lb (60 kg). Distribute clothing evenly to prevent imbalance.
- **Utilizing Shelves:** The five-tier side shelves and the top and bottom shelves provide ample space for folded clothes, shoes, bags, boxes, and other accessories. The total maximum load capacity for the entire unit is 198.4 lb (90 kg).
- **Mobility:** The rack is equipped with four smooth-rolling wheels. To move the rack, unlock the two lockable wheels by flipping their levers. Once the rack is in the desired position, engage the wheel locks to secure it.

VASAGLE



Image: The clothes rack positioned in a room, displaying various garments, shoes, and accessories on its hanging rod and shelves.



Smooth Wheels

Slide it across the room, or lock it in place with 2 brakes.

Image: A close-up view of one of the smooth-rolling wheels, showing the integrated lock mechanism for stability.

MAINTENANCE

Proper care will extend the life and appearance of your clothes rack.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish of the engineered wood and steel.
- **Dusting:** Regularly dust the shelves and metal pipes to prevent buildup.
- **Fastener Check:** Periodically check all screws and connections to ensure they remain tight. Re-tighten any loose fasteners to maintain the rack's stability.
- **Environmental Conditions:** Keep the rack in a dry environment. Prolonged exposure to moisture or extreme temperature changes can affect the integrity of the materials.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Rack is wobbly after assembly.	Screws or connections are not fully tightened.	Ensure all screws and fasteners are securely tightened. The rack gains stability once all components are fully connected.
Holes for shelves do not align during assembly.	Pipes or components are not perfectly aligned before tightening.	Do not fully tighten any screws until all components are loosely assembled. For shelves, install one or two screws, then gently adjust the pipe's position or apply slight pressure to align the remaining holes before inserting all screws. Then, tighten everything.
Wheels do not roll smoothly or lock.	Debris in wheels or lock mechanism, or wheels not properly installed.	Check wheels for any obstructions and clear them. Ensure wheels are securely attached to the base. Verify the lock levers are fully engaged or disengaged.
Rack sags or bends under load.	Exceeding maximum load capacity or uneven weight distribution.	Reduce the weight on the rack. Ensure weight is distributed evenly across the hanging rod and shelves, staying within the specified limits.

SPECIFICATIONS

Feature	Detail
Brand	VASAGLE
Model Number	UHSR66BX
Color	Rustic Brown
Material	Alloy Steel, Engineered Wood
Product Dimensions (D x W x H)	15.7"D x 40.7"W x 68.7"H (40 x 103 x 174.5 cm)
Item Weight	41.7 pounds (20.8 kg)
Max. Load Capacity (Hanging Rod)	132.3 lb (60 kg)
Total Max. Load Capacity	198.4 lb (90 kg)
Number of Shelves	5
Special Feature	Moveable (with lockable wheels)
Assembly Required	Yes

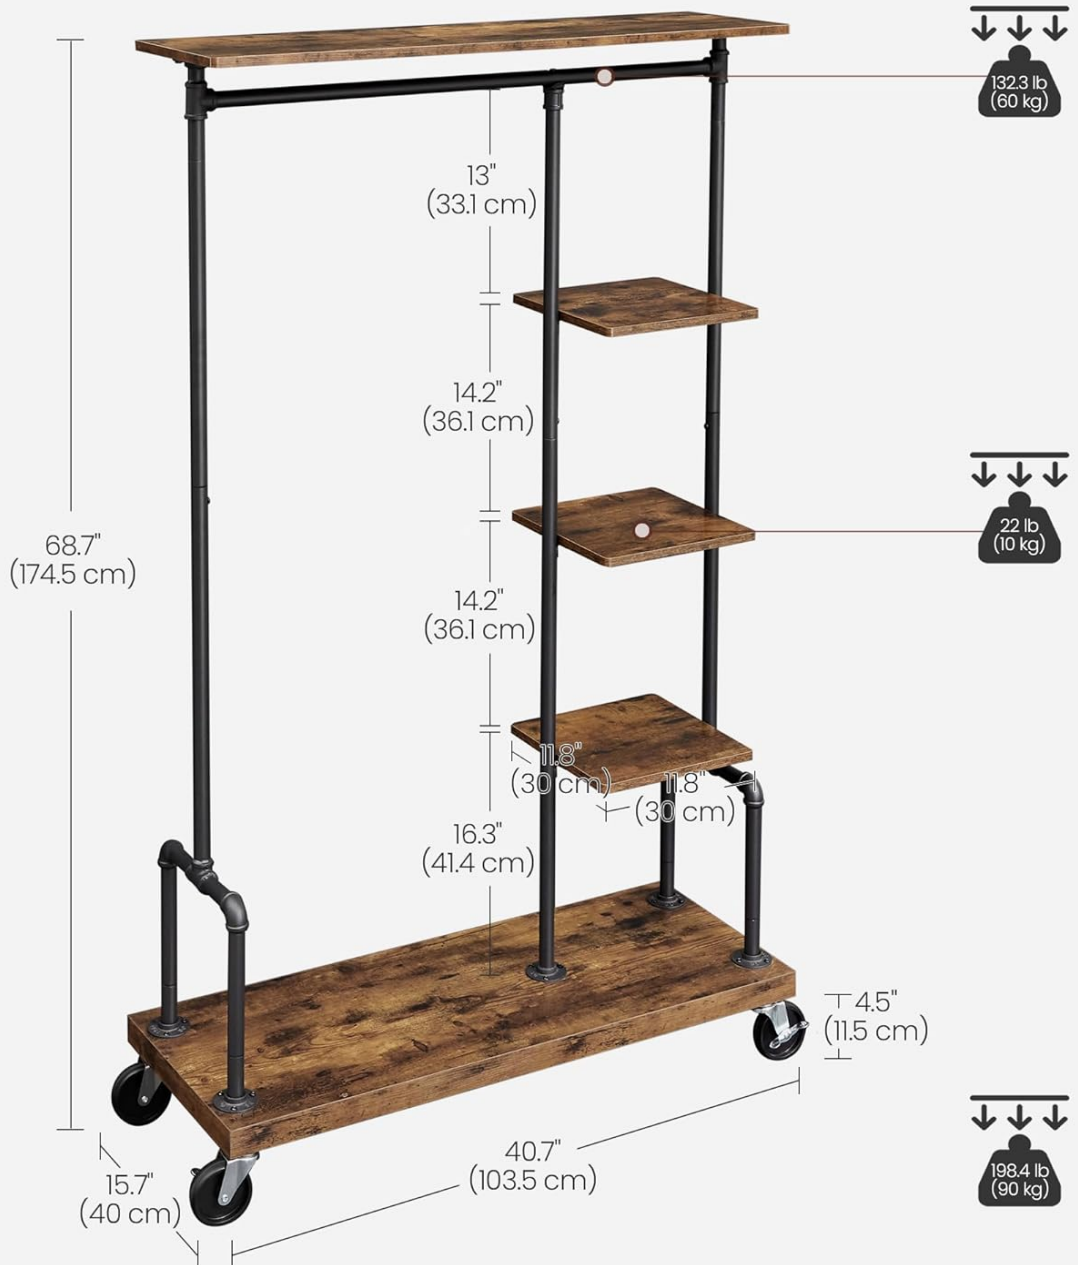


Image: Technical diagram illustrating the dimensions (height, width, depth) and maximum load capacities for the hanging rod and overall unit.

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or visit the official VASAGLE website. If you encounter any issues or require assistance, please contact VASAGLE customer support through their official channels or the retailer from whom you purchased the product.

For more information and product registration, visit: [VASAGLE Official Store](#)

