



Manuals.plus /

- › TrueCut /
- › TrueCut Premium Medium Lift Replacement Lawn Mower Blade User Manual

## TrueCut 782971

# Premium Medium Lift Replacement Lawn Mower Blade User Manual

Model: Noma/AMF/Dynamark 782971 Compatible Blades

## INTRODUCTION

---

This manual provides essential information for the safe and effective installation, use, and maintenance of your new Premium Medium Lift Replacement Lawn Mower Blades. These blades are designed to fit Noma/AMF/Dynamark 782971 models and are engineered for optimal cutting performance and durability. Please read this manual thoroughly before installation and retain it for future reference.

## SAFETY INFORMATION

---

Working with lawn mower blades can be hazardous. Always prioritize safety to prevent injury.

- **Disconnect Power:** Before performing any maintenance or installation, ensure the lawn mower's spark plug wire is disconnected or the battery is removed (for electric models) to prevent accidental starting.
- **Wear Protective Gear:** Always wear heavy-duty gloves and eye protection when handling or working near lawn mower blades. Blades are sharp and can cause severe cuts.
- **Stable Work Area:** Ensure the lawn mower is on a flat, stable surface and properly secured before tilting or working underneath it.
- **Blade Handling:** Handle blades carefully. Avoid touching the sharpened edges directly.
- **Proper Tools:** Use appropriate tools for blade removal and installation to ensure a secure fit and prevent damage.

## SETUP AND INSTALLATION

---

Follow these steps to safely replace your lawn mower blades:

1. **Prepare the Mower:** Disconnect the spark plug wire or remove the battery. Ensure the fuel tank is low or empty if tilting a gasoline mower.
2. **Secure the Mower:** Tilt the mower onto its side, ensuring the carburetor and air filter are facing upwards to prevent

fuel or oil leaks. Use blocks or stands to stabilize it.

3. **Remove Old Blades:** Using a wrench or socket, loosen the blade bolt(s) holding the old blade in place. You may need a block of wood to prevent the blade from turning while loosening the bolt. Remove the old blade and note its orientation.
4. **Inspect Components:** Check the blade adapter, washers, and bolts for wear or damage. Replace any worn components.
5. **Install New Blades:** Position the new blade with the cutting edge facing the direction of rotation (usually upwards towards the deck). Ensure the center hole and any alignment pins match the blade adapter.
6. **Tighten Blade Bolt:** Reinstall the blade bolt(s) and tighten them securely. Refer to your lawn mower's owner's manual for the specific torque specifications. Over-tightening or under-tightening can cause issues.
7. **Verify Installation:** Once installed, ensure the blade is firmly seated and does not wobble. Reconnect the spark plug wire or reinstall the battery.



*Image: A pack of six premium medium lift replacement lawn mower blades. Each blade features a central mounting hole flanked by two smaller alignment holes, designed for secure attachment to compatible lawn mower decks.*

## OPERATING CONSIDERATIONS

---

While these are replacement blades, proper operation of your lawn mower with new blades ensures optimal performance and longevity.

- **Blade Balance:** New blades are typically balanced from the factory. If you notice excessive vibration after installation, check if the blade is properly seated and tightened. An unbalanced blade can cause premature wear on mower components.
- **Cutting Height:** Adjust your mower's cutting height according to grass type and desired lawn appearance. Sharp blades provide a clean cut, which is healthier for your lawn.
- **Avoid Obstacles:** Always inspect your mowing area for rocks, sticks, or other debris that could damage the blades or the mower.

## MAINTENANCE

---

Regular maintenance of your lawn mower blades will extend their lifespan and ensure a clean cut.

- **Cleaning:** After each use, especially when mowing wet grass, clean grass clippings and debris from the underside of the mower deck and the blades. This prevents rust and maintains blade balance. Always disconnect the spark plug wire before cleaning.
- **Inspection:** Periodically inspect the blades for nicks, bends, or excessive wear. Damaged blades should be replaced immediately to prevent further damage to the mower or an uneven cut.
- **Sharpening:** While these are new blades, over time they will dull. Blades can be sharpened using a file or grinder, ensuring the original cutting angle is maintained. Always re-balance blades after sharpening. Alternatively, replace them with new blades when they become too worn or damaged.
- **Storage:** If storing the mower for an extended period, clean and lightly oil the blades to prevent rust.

## TROUBLESHOOTING

---

If you encounter issues after installing your new blades, consider the following:

- **Uneven Cut:**
  - Ensure blades are installed correctly with the cutting edge facing up.
  - Check if the blade bolt is sufficiently tightened.
  - Inspect for bent or damaged blades (even new blades can be damaged during installation or by hitting an object).
- **Excessive Vibration:**
  - Verify the blade is properly centered and the bolt is tightened to the manufacturer's specifications.
  - Check for debris caught on the blade or blade adapter.
  - Ensure the blade is not bent or damaged.
- **Poor Mulching/Discharge:**
  - Confirm you have the correct "medium lift" blade type for your mower's deck design.
  - Ensure the underside of the deck is clean and free of excessive grass buildup.

## SPECIFICATIONS

---

Feature	Detail
Blade Length	21 inches (53.34 cm)
Blade Width	2.25 inches (5.72 cm)
Blade Thickness	0.134 inches (0.34 cm)
Center Hole Diameter	0.625 inches (1.59 cm)
Blade Type	Medium Lift Replacement Blade
Quantity	6 Pack
Compatibility	Fits Noma/AMF/Dynamark 782971
Material	High-quality steel (XHT)

## WARRANTY AND SUPPORT

---

Specific warranty information for these replacement blades is typically provided by the seller or manufacturer at the time of purchase. Please refer to your purchase documentation or contact the seller directly for details regarding warranty coverage, returns, or technical support.

For general inquiries regarding your lawn mower, always consult your mower's original owner's manual or contact the mower manufacturer's customer service.

## OFFICIAL PRODUCT VIDEOS

---

There are no official product videos available from the seller for these replacement blades at this time.

