#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- ipega /
- › ipega PG-9023S Mobile Game Controller Instruction Manual

### ipega PG-9023S

# ipega PG-9023S Mobile Game Controller Instruction Manual

Model: PG-9023S

#### 1. PRODUCT OVERVIEW

The ipega PG-9023S is a versatile wireless game controller designed for mobile gaming across various platforms. Its telescopic design accommodates a wide range of smartphones and tablets, providing a comfortable and immersive gaming experience. This manual provides detailed instructions for setup, operation, and maintenance of your controller.



Figure 1: ipega PG-9023S Mobile Game Controller with a tablet.

#### 2. KEY FEATURES

- Wireless Bluetooth 4.0 Gamepad: Controlled wirelessly via Bluetooth 4.0 for convenience and comfort.
- **Telescopic Design:** Adjustable 16-button layout extends up to 40cm (approximately 15.7 inches) for customizable play, supporting devices from 5 to 10 inches.
- Compatible with iOS and Android Devices: Works with iPhone, iPad, Android phones and tablets for versatile gaming (iOS 11-13.3 supported, Android 6.0 or higher).
- PC and Mac Compatible: Works with Windows and Mac OS for gaming on multiple platforms.
- High-Precision Controls: 16-button layout with customizable controls for precise gameplay, including high-precision rockers.
- **Multimedia Button:** Suitable for users who play games while listening to music, allowing free switching between tracks and volume control during gameplay.
- Long Continuous Use Time: Can last for more than 15 hours under full charge and 40 days on standby.



Figure 2: Overview of ipega PG-9023S key features.

#### 3. PACKAGE CONTENTS

Please check the package contents upon unboxing to ensure all items are present:

- ipega PG-9023S Mobile Game Controller x 1
- Micro USB Charging Cable x 1
- User Manual x 1



Figure 3: ipega PG-9023S product packaging and contents.

### 4. SETUP AND CONNECTION

#### 4.1 Charging the Controller

Before first use, fully charge the controller. Connect the Micro USB charging cable to the controller's charging port and the other end to a USB power source (e.g., computer USB port, USB wall adapter). The charging indicator light will show charging status and turn off when fully charged. A full charge takes approximately 3 hours.

# Long Continuous use Time

It can last for more than 15 hours under full charge and 40 days for full power.

3 Charging time About 3 hours 15 Continuous use time More than 5 hours 40 Fully placed More than 40 days

Figure 4: Charging and battery life information.

#### 4.2 Telescopic Adjustment

The controller features a telescopic rod that can extend to securely hold devices from 5 to 10 inches. Gently pull the two sides of the controller apart to extend the rod, then place your smartphone or tablet into the central slot. Ensure your device is securely seated before use.

## Super Long Telescopic Rod, Suitable for All Kinds of Equipment

Ultra-long telescopic function, adjustable telescopic size telescopic length supports up to 11 inches



# Does not support IOS 13.4 system

Figure 5: Telescopic rod adjustment.

#### 4.3 Bluetooth Pairing (Android/iOS)

The ipega PG-9023S supports direct connection and direct play for both Android (6.0 or higher) and iOS (11.0 / 12 / 13.3) systems. Please note that it **does not support iOS 13.4 / 13.5 systems or higher**.

- 1. Ensure the controller is charged.
- 2. Turn on the controller by pressing the **HOME** button.
- 3. On your mobile device, go to Bluetooth settings and enable Bluetooth.
- 4. Search for available devices. The controller should appear as "PG-9023S" or similar.
- 5. Select the controller to pair. Once paired, the indicator light on the controller will stabilize.

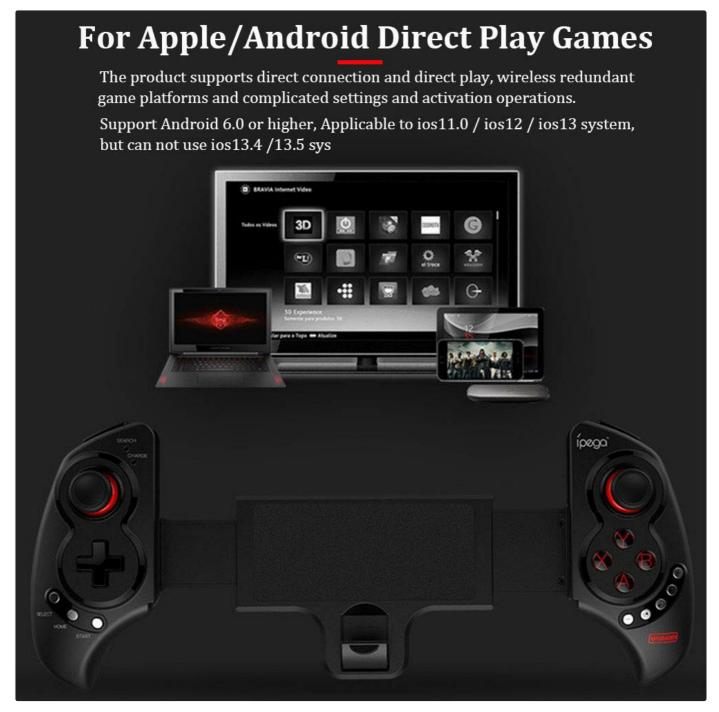


Figure 6: Compatibility with Apple and Android devices.

#### 4.4 PC and Mac Connection

For PC and Mac, the controller connects via Bluetooth. Ensure your computer has Bluetooth capability. Follow the standard Bluetooth pairing procedure for your operating system to connect the "PG-9023S" device.

#### 5. OPERATING INSTRUCTIONS

#### 5.1 Button Layout and Functions

The PG-9023S features a standard gamepad layout for intuitive control:

- **D-Pad:** Directional pad for precise movement.
- Analog Sticks: Two high-precision analog sticks for 360-degree movement and camera control.
- Action Buttons (A, B, X, Y): Standard action buttons for in-game commands.
- Shoulder Buttons (L1, L2, R1, R2): For additional in-game actions like shooting or aiming.

- Start/Select Buttons: For pausing games, accessing menus, or other functions.
- HOME Button: Powers on/off the controller and can be used for mode switching.



Figure 7: High-precision rocker detail.

#### **5.2 Multimedia Controls**

The controller includes dedicated multimedia buttons, allowing you to control music playback and volume without interrupting your game:

- Volume Up/Down: Adjusts the device's volume.
- Previous/Next Track: Skips to the previous or next song.
- Play/Pause: Toggles music playback.



Figure 8: Multimedia control buttons.

#### 5.3 Gaming Experience

The ipega PG-9023S is designed to enhance your mobile gaming. It is compatible with a wide range of popular games and emulators. For optimal performance, ensure your game supports gamepad input. Some games may require in-game controller mapping or third-party applications for full functionality.

# Play all the Popular Games

Perfectly compatible with all major popular games on the market. tens of thousands of games to play

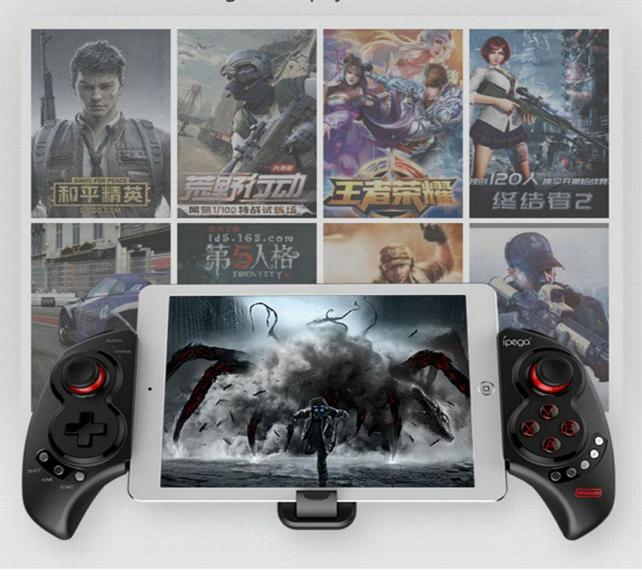


Figure 9: Play all popular games.

#### 6. MAINTENANCE

- Cleaning: Use a soft, dry cloth to clean the controller. Do not use harsh chemicals or abrasive materials.
- Storage: Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- Battery Care: To prolong battery life, avoid fully discharging the battery frequently. Charge the controller regularly, even if not in use for extended periods.

#### 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Controller does not power on.	Low battery.	Charge the controller for at least 3 hours.

Problem	Possible Cause	Solution
Unable to pair via Bluetooth.	Bluetooth not enabled on device; controller not in pairing mode; device out of range; incompatible iOS version.	Ensure Bluetooth is on. Press and hold HOME button to enter pairing mode. Move device closer. Check iOS version (must be 11-13.3).
Buttons or analog sticks are unresponsive in- game.	Game does not support gamepad; incorrect controller mode; software issue.	Check game's controller support. Try restarting the controller and device. Some games may require specific mapping apps (e.g., ShootingPlus V3).
Controller disconnects frequently.	Low battery; interference; device too far.	Ensure controller is fully charged. Reduce wireless interference. Keep device within Bluetooth range.

## 8. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	PG-9023S
Connectivity	Bluetooth 4.0
Compatible Devices	iOS (11-13.3), Android (6.0+), PC (Windows), Mac OS
Supported Device Size	5-10 inches (telescopic rod extends up to 40cm)
Battery Type	Lithium Ion (included)
Charging Time	Approximately 3 hours
Continuous Use Time	More than 15 hours
Standby Time	More than 40 days
Item Weight	13.7 ounces
Package Dimensions	9.72 x 6.22 x 2.56 inches

### 9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the contact details provided on the product packaging or visit the official ipega website. Keep your purchase receipt as proof of purchase for any warranty claims.

© 2025 ipega. All rights reserved.

